

DESIGN, ANALYSIS AND RATING OF STRAIGHT GIRDER BRIDGE SYSTEMS



The BEST Center Bridge Engineering Software & Technology Center Department of Civil Engineering University of Maryland

August 4, 2016

WIN-DASH¹ User Manual

TABLE OF CONTENTS

1.0	INTRODUCTION1-1				
	1.1	Abstract	1-1		
	1.2	History of MERLIN-DASH	1-2		
	1.3	Support for MERLIN-DASH	1-2		
2.0	OVER	VIEW	2-1		
	2.1	Program Capabilities	2-1		
		System Features			
		Specifications			
		Unit Systems			
		Structural Model			
		Live Load			
		Dead Load			
		Analysis			
		Code Check			
		Graphics			
		Rating			
		Detailed Design			
		Optimum Design			
	2.2	Methodology	2-5		
		Analysis			
		Design			
		Dead Loadings			
		Live Load Maxima			
		AASHTO Loadings			
		Special Loadings			
		Definition of Trucks			
		Moment/Shear Interaction			
		Rating			
		Staging			
3.0	USINC	G MERLIN-DASH	3-1		
	3.1	Before You Begin	3-1		
	3.2	Accessing the Main Menu	3-1		
	3.3	The WIN-DASH Main Menu			
		Visual Input Utility			
		Run Utility			
		Graphic Utility			
		Post Processor			
		Print Utility			
		Exit			

¹MERLIN-DASH for WINDOWS

Help Utility

4.0	INPU	T UTIL	ITY	4-1
	4.1	Main	Menu	4-1
			File Menu	
			Toolbar	
			Tips: DASH input data file or DASH XML file?	
	4.2	Data I	nput Pages	4-3
		Navig	ate to a Data Input Page	
		4.2.1	System	4-5
			4.2.1A Project Data	4-5
			4.2.1B General Program Options	4-6
		4.2.2	Structure Framing	4-8
			4.2.2A Structural Details	4-9
			4.2.2B Span Length (For non-PC Bridge)	4-11
			4.2.2C Span Length (For PC Bridge only)	4-12
			4.2.2D Hinge Locations	4-13
			4.2.2E Beam Spacing	4-14
			4.2.2F Boundary Conditions	4-15
		4.2.3	Beam Definition	4-16
			4.2.3.1 Steel	4-16
			4.2.3.1A Wide Flange, Plate Girder	4-16
			4.2.3.1B Definition of Members	4-18
			4.2.3.2 Reinforced Concrete	4-22
			4.2.3.2A RC Section	4-22
			4.2.3.2B RC Reinforcement Details	4-25
			4.2.3.2C Definition of Members	4-26
			4.2.3.3 Prestressed Concrete	4-28
			4.2.3.3A PC Section	4-28
			4.2.3.3B PC Reinforcement Details	4-30
			4.2.3.3C Definition of Tendons	4-31
		4.2.4	Factor Definition	4-33
			4.2.4A Impact and Distribution Factors (WSD/LFD)	4-33
			4.2.4B Impact and Distribution Factors (LRFD)	4-34
			4.2.4C Gamma and Beta (WSD or LFD)	4-38
			4.2.4D Load and Resistance Factor (LRFD)	4-39
		4.2.5	Live Load	4-41
			4.2.5A AASHTO Live Load	4-41
			4.2.5B State Vehicle Loading	4-43
			4.2.5C General Vehicles	4-44
			4.2.5D Special Vehicle Loading (Load Type C)	4-45
		4.2.6	Dead Load	4-46
			4.2.6A Slab Loads	4-46
			4.2.6B Arbitrary Uniform and Concentrated Loads	4-47
			4.2.6C Lateral Bending Stress Load	4-49
			4.2.6D Auto Generation of Dead and Superimposed Dead Loads	4-52
		4.2.7	Design (Used for Flow Control = 4 or 6 only)	4-54
			4.2.7A Splice Design Data	4-54

			4.2.7B Design Method and Stiffener Option		
			4.2.7C Designated Plate Size		
			4.2.7D Design Plate Size Range		
			4.2.7E Material and Fabrication Cost		
			4.2.7F Field Splice Location and Material ID		
		4.2.8	Property		
			4.2.8.1 Steel and Reinforced Concrete		
			4.2.8.1A Reinforced Concrete Strength Data		
			4.2.8.2 Prestressed Concrete		
			4.2.8.2A Prestressing Steel Properties		
			4.2.8.2B Post-tension Steel Material Properties		
			4 2 8 2C Prestress Concrete Slab	4-66	
			4 2 8 2D Precast Beam	4-67	
		429	Detail	4-69	
		1.2.9	4 2 9 A Girder Field Stress and Lateral Bracing	4-69	
			4 2 9R Longitudinal Stiffener	4-71	
			1.2.9D Longitudinal Stiffener	/_73	
				,т- <i>13</i>	
		Use E	xcel Work Sheet to Enter Data	4-74	
	4.3	Graph	ic Pages		
		4.3A	Navigate to a Graphic Page	4-79	
		4.3B	Plan View		
		4 3C	Bridge	4-81	
		4 3D	Sections	4-86	
		1.50	4 3D 1 W/PG Sections	4-86	
			4 3D 2 PC Sections	4-87	
			4 3D 3 RC Sections	4-88	
		4 3E	Girder	4-89	
		4 3F	Girder Profile and Loads	4-90	
		4.31 4.3G	PC Tendon Configuration		
		4.30 A 3H	Trucks	/_92	
		7.311	A 3H 1 General Vehicle		
			4.3H 2 Dump and Allowable Truck		
			4.511.2 Dump and Anowable Truck		
		4 3 I	Zoom and Pan of a 2D Graphic View		
		4.31 4.31	Interactive in 3D Graphic View	4-97	
		7.33	incractive in 5D Graphic view	······································	
5.0	RUN	UTILIT	ΓΥ		
	5.1	1 Single Run			
	5.2	Multip	le Run		
	5.3	Single	/Multiple Run Exit		
60		DUICE		<u> </u>	
0.0		0-1 ∠ 1			
	0.1	rile 3		0-1	
			Open Drint Setur		
			Print Setup		
			Print		

		Exit	
6.2	Graphi	ic Plots (for Steel)	-3
	6.2.1	Moment Diagrams	-5
	6.2.2	Shear Diagrams	-6
	6.2.3	Deflection Diagrams	-7
	6.2.4	Camber Diagrams	-8
	6.2.5	Range (Stress) Diagrams	-9
	6.2.6	Stress Diagrams	10
		6.2.6.1 Top Flange Stress Diagrams	10
		6.2.6.2 Bottom Flange Stress Diagrams	11
6.3	Graphi	ic Plots (for Prestressed Concrete)6-1	12
	6.3.1	Moment Diagrams	15
	6.3.2	Shear Diagrams	16
	6.3.3	Displacement Diagrams	17
	6.3.4	Bottom Stress Diagrams	18
	6.3.5	Top Stress Diagrams	19
	6.3.6	Slab Top Stress Diagrams	20
PRINT	UTILI	ITY	-1
7.1	Open 1	File	-2
7.2	View/I	Print File7	-2
7.3	View 7	Tables	-4
7.4	Print T	Tables 7-	-5
7.5	Exit		-5
7.6	Output	t Definitions and Options	-6
	7.6.1	Index of Output Tables	-6
		1	
	7.6.2	Output Options	-7
	6.2 6.3 PRINT 7.1 7.2 7.3 7.4 7.5 7.6	 6.2 Graph 6.2.1 6.2.2 6.2.3 6.2.4 6.2.5 6.2.6 6.3 Graph 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 PRINT UTILI 7.1 Open I 7.2 View/ 7.3 View 7 7.4 Print T 7.5 Exit 7.6 Outpu 7.6 1 	Exit 6.2 Graphic Plots (for Steel) 6 6.2.1 Moment Diagrams 6 6.2.2 Shear Diagrams 6 6.2.3 Deflection Diagrams 6 6.2.4 Camber Diagrams 6 6.2.5 Range (Stress) Diagrams 6 6.2.6 Stress Diagrams 6 6.2.6 Stress Diagrams 6 6.2.6.1 Top Flange Stress Diagrams 6 6.2.6.2 Bottom Flange Stress Diagrams 6 6.2.6.2 Bottom Flange Stress Diagrams 6 6.3.6 Graphic Plots (for Prestressed Concrete) 6 6.3.1 Moment Diagrams 6 6.3.2 Shear Diagrams 6 6.3.3 Displacement Diagrams 6 6.3.4 Bottom Stress Diagrams 6 6.3.5 Top Stress Diagrams 6 6.3.6 Slab Top Stress Diagrams 6 6.3.6 Slab Top Stress Diagrams 6 6.3.6 Slab Top Stress Diagrams 6 7.1 Open File 7 7.2 View

REFERENCES

2.1	Summary of Features and Options	
2.2	Assumptions	
2.3	Program Limits	
2.4	Loading Assumptions	2-7
4.1	Project Data Input Description	
4.2	General Program Options Input Description	
4.3	Structural Details Input Description	
4.4	Span Lengths Input Description	4-11
4.4A	Span Lengths Input Description (For PC Bridge only)	4-12
4.5	Hinge Locations Input Description	
4.6	Beam Spacing Input Description	4-14
4.7	Boundary Condition Input Description	4-15
4.8	Flanged Sections Input Description	4-17
4.9	Definition of Members Input Description	4-19
4.10	Reinfored Concrete Section Input Description	
4.11	RC Reinforcement Detail Input Description	4-25
4.12	Definition of Members Input Description (For RC)	4-27
4.13	PC Sections Input Description	4-29
4.14	PC Reinforcement Input Description	
4.15	Member and Tendon Geometry Data Input Description	
4.16	Impact and Distribution Factors Input Description	
4.17	Load Factors; Gamma and Beta Input Description	
4.18	Load Factors; LRFD Option	
4.19	AASHTO Live Load Input Description	
4.20	State Vehicle Loading Input Description	
4.21	General Vehicles Input Description	4-44
4.22	Special Vehicle ID and Input Description	4-45
4.23	Slab Loads Input Description	4-46
4.24	Arbitrary Uniform and Concentrated Loads Input Description	4-48
4.25	Lateral Bending Stress Load Input Description	4-49
4.26	Auto Generation of Dead and Superimposed Dead Loads	4-53
4.27	Splice Design Data Input Description.	4-54
4.28	Design Method and Stiffener Option Input Description	
4.29	Designated Plate Size Input Description	4-57
4.30	Design Plate Size Range Input Description	4-58
4.31	Material and Fabrication Cost Input Description	4-59
4.32	Field Splice Location and Material ID Input Description	
4.33	Reinforced Concrete Strength Data Input Description	
4.34	Prestressing Steel Properties Data Input Description	4-64
4.35	Post-tension Steel Material Properties	4-65
4.36	Slab Data Input Description	4-66
4.37	Precast Beam Data Input Description	4-68
4.38	Yield Stress and Lateral Bracing Data Input Description	
4.39	Longitudinal Stiffener Data Input Description	4-72
4.40	Transverse Stiffener Data Input Description	4-73
6.1	Graphic Plot Options (Steel)	6-3

TABLES

······································

FIGURES

2.1	The Flow Chart of MERLIN-DASH	. 2-2
3.1	WIN-DASH Title Screen	. 3-2
3.2	WIN-DASH Main Menu Screen	. 3-3
5.1	RUN Utility Screen	. 5-1
5.2	Input Data File Window	. 5-2
6.1	Graphics Utility Screen	. 6-1
6.2	File Submenu	. 6-1
6.3	Open Graphic File Window	. 6-2
6.4	Moment Diagrams Submenu	. 6-5
6.5	Total Maximum Moment Diagram Screen	. 6-5
6.6	Shear Diagram Submenu	. 6-6
6.7	Total Maximum Shear Diagram Screen	. 6-6
6.8	Deflection Diagrams Submenu	. 6-7
6.9	Total Dead Load Deflection Diagram Screen	. 6-7
6.10	Camber Diagram Submenu	. 6-8
6.11	Total Dead Load Camber	. 6-8
6.12	Range (Stress) Submenu	. 6-9
6.13	Top Flange Stress Range Diagram Screen	. 6-9
6.14	Top Flange Stress Submenu	5-10
6.15	Top Flange Maximum Total Positive and Allowable Stress Screen	5-10
6.16	Bottom Flange Stress Submenu	5-11
6.17	Bottom Flange Maximum Total Positive and Allowable Stress Screen	5-11
6.18	Moment Diagram Submenu (Prestressed Concrete)	5-15
6.19	Girder Wt. Moment Diagram Screen	5-15
6.20	Shear Diagram Submenu (Prestressed Concrete)	5-16
6.21	Girder Wt. Shear Diagram Screen	5-16
6.22	Displacement Diagram Submenu (Prestressed Concrete)	5-17
6.23	Girder Wt. Displacement Diagram Screen	5-17
6.24	Bottom Stress Diagram Submenu (Prestressed Concrete)	5-18
6.25	Girder Wt. Bottom Stress Diagram Screen	5-18
6.26	Top Stress Diagram Submenu (Prestressed Concrete)	5-19
6.27	Girder Wt. Top Stress Diagram Screen	5-19
6.28	Slab Top Stress Diagram Submenu (Prestressed Concrete)	5-20
6.29	SDL Slab Top Stress Diagram Screen	5-20
7.1	Print Utility Screen	. 7-1
7.2	A Typical Result File Screen	. 7-2
7.3	Print File Window	. 7-3
7.4	Search String Window	. 7-3
7.5	A Typical View Table Screen	. 7-4
7.6	A Typical Print Table Screen	. 7-5

APPENDIX A

Table A.1.2 Structural Data	A-2
Table A.1.3 Definition of Member Types	A-3
Table A.1.4 Allowable Live Load Types	A-4
Table A.1.5 Formulation of the Impact Factor	A-5
Table A.1.6 Definition of Distribution Factor Options	A-6
A1. EXAMPLES FOR ROLLED BEAM DESIGN AND STAGING	
A2. USER-SPECIFIED TRUCK FILE INPUT SHEET	
A3. MORE INSIGHT ABOUT MERLIN-DASH	
A4. WIN-DASH SPLICE DESIGN IN LRFD	
A5. INPUT PROCESSOR OPTION – SCREEN ORGANIZER	

APPENDIX B

B1. LFD THEORY FOR PRESTRESSED CONCRE B2. LRFD THEORY FOR PRESTRESSED CONCRE B3. THEORY FOR STEEL BRIDGES

APPENDIX C

PIER CONTINUITY PC GIRDER LRFD DESIGN

APPENDIX D

DEMONSTRATION OF LATERAL BENDING STRESS CALCULATION BASED ON NHI

1.0 INTRODUCTION

1.1 Abstract

MERLIN-DASH (Design, Analysis and Rating of StraigHt Girder Bridge Systems) was developed for use by bridge design engineers who function in a software production environment. In order to provide a program which would be applicable nationally, the BEST Center developed *MERLIN-DASH* to offer the widest range of features and options possible.

MERLIN-DASH incorporates a standardized sequence of steps starting with analysis and proceeding, at the user's option, to perform a code check, design and/or rating which allows for the following:

- 1. Analysis Only : For the analysis of dead and/or live load effects;
- 2. Analysis/Code Check: For analysis and then code checking;
- **3. Analysis/Rating :** For rating or posting of existing structures;
- 4. **Design :** For design with weight or cost optimization;
- 5. **Design/Code Check :** Void;
- 6. Design/Code Check/Recycle : First design, then recycle to re-analyze the designed section, then perform a code check;
- 7. **DL Stage Analysis :** Dead Load pouring sequence stage analysis;
- 8. DL + LL Stage Analysis : Dead Load pouring sequence stage and Live Load analysis.

The generality of the program also extends into the structural model incorporated within *MERLIN-DASH*. The structural analysis is performed using a series of modular subroutines which are based on the stiffness method. Utilizing this methodology allows the use of various specialized members such as straight and parabolic haunches, hinges, and flanged transitions. The loading capabilities of *MERLIN-DASH* include joint, concentrated and segmented uniform member loads. An extensive mesh generation capability allows for the incorporation of fully automated AASHTO Dead Load (DL) and Live Load (LL) sequences. A highly general and wide range of live load capabilities are also incorporated into *MERLIN-DASH*.

- 1. Standard **AASHTO** truck and lane loadings
- 2. Non-standard AASHTO loadings (e.g., HS 25, HS 26, ..., etc.)
- **3.** The interstate (or tandem) vehicle
- 4. Various standard state truck configurations
- 5. Generalized (user-specified) two- and three-axle trucks

- **6.** A generalized, up to 20-axle, user-defined truck where direction of travel may be specified
- 7. Generalized predefined truck files.

A more detailed description of the capabilities of *MERLIN-DASH* is given in Chapter 2.

1.2 History of *MERLIN-DASH*

For nearly twenty years the Maryland State Highway Administration (MD SHA) Bureau of Bridge Development has sponsored research at the Department of Civil Engineering, University of Maryland College Park, to develop bridge design software. One of the first systems to be undertaken was the *MERLIN-DASH* program.

Since the completion of the basic system in 1978, *MERLIN-DASH* has become widely used and has undergone numerous revisions and upgrades. The mainframe version was in use within various state and municipal design agencies. *MERLIN-DASH* was selected by the *National Highway Research Program Committee 12-18* as the most general program for universal application on a national basis. It is also used by Federal Highway Administration (FHWA) demonstration project DP-81 " *Load Factor Design by Computers* " as a result of which delivered to over thirty states.

1.3 Support for *MERLIN-DASH*

Both first and second level support are available to users on the operation, assumptions, and problems related to the *MERLIN-DASH* program. First level support, which is the first contact for all user initiated queries, is generally provided by the authorized vendor from whom the program was purchased.

The *BEST* Center staff will provide second level, in-depth, technical support as a backup to the vendor for unresolved issues relating to first level support. In addition, the *BEST* Center will make:

<u>Bug Fixes:</u> The **BEST** Center will make every effort to identify and rectify all verified bugs within **MERLIN-DASH**. The user should report all suspected bugs, program abnormalities, and suggested improvements to the authorized vendor from whom the program was purchased.

<u>Code Updates:</u> The **BEST** Center will perform updates consistent with the changes specified within revisions of the AASHTO Standard and LRFD Specifications for Highway Bridges or appropriate addenda. These updates of **MERLIN-DASH** will be performed as required to provide the user access to the most current code provisions.

<u>Program Upgrades:</u> Periodically, the **MERLIN-DASH** system will be modified to accommodate enhancements. Such upgrades may include features which already exist within the network or single user version or which are newly developed for the microprocessor.

2.0 OVERVIEW

MERLIN-DASH is a window application program written in **FORTRAN 90, VB and C++** and .NET Framework 4 languages which consists of more than 100,000 statements. The block flow chart of the program is given in Figure 2.1. In this chapter, the capabilities and methodology will be discussed.

2.1 Program Capabilities

A full range of features has been incorporated into *MERLIN-DASH* which provide for the most general usage. These are categorized into those features which either are available currently or are under active development. The features are described as follows:

SYSTEM FEATURES

A full range of general, user-friendly, features are available with *MERLIN-DASH*, including: a Windows-based pull-down menu system, indexed output tables, the ability to perform a complete and rigorous analysis and code check, design and rating capabilities, and a wide range of graphics plots which serve to greatly enhance the users ability to quickly and accurately interpret the numeric output.

SPECIFICATIONS

Various code specification methods are available in *MERLIN-DASH* including the AASHTO WSD, LFD and LRFD alternates for both design and rating. The analysis and code check are fully detailed and based on the AASHTO specifications (see item 2.0 in Table 2.1).

UNIT SYSTEMS

The user has the option of choosing either U.S. Customary or S.I. input and output. **MERLIN-DASH** will perform all design, code check, analysis, rating, and graphics plots using the selected unit system.

STRUCTURAL MODEL

A number of features are available within *MERLIN-DASH* which allow the analysis of diverse bridge configurations (see item 3.0 in Table 2.1). A summary of the assumptions contained within the program are given in Table 2.2.



Figure 2.1 : The Flow Chart of MERLIN-DASH

TABLE 2.1 : Summary of Features and Options

1.0 SYSTEM FEATURES

- 1.1 Menu driven input
- 1.2 Menu driven input data editing
- 1.3 Discrete help screen for every input screen
- 1.4 User selected output levels
- 1.5 Graphics for DL and LL deformation
- 1.6 Moment and shear diagram graphic output
- 1.7 Indexed output tables in 8¹/₂ H 11" format
- 1.8Built-in diagnostic level output
- 1.9 Output at designated intervals
- 1.10 Output automatic at changes-in-section
- 1.11 Minimum input requirements
- 1.12 Capability of performing a full and detailed analysis
- 1.13 Design recycling

2.0 SPECIFICATIONS

- 2.1 Latest AASHTO WSD, LFD and LRFD specifications
- 2.2 Bridge rating for WSR, LFR and LRFR
- 2.3 Fully automated analysis, code check for WSD, LFD, and LRFD
- 2.4 A minimum cost/weight design for WSD, LFD or LRFD

3.0 STRUCTURAL MODEL

- 3.1 Up to 10 simple or continuous spans
- 3.2 Hinges at any location during different stages
- 3.3 Prismatic or stepped prismatic sections
- 3.4 Linear haunches
- 3.5 Various parabolic haunches
- 3.6 Standard rolled section table lookup
- 3.7 Standard sections with cover plates
- 3.8 Plate girder sections
- 3.9 Composite or Non-composite construction
- 3.10 Composite or Non-composite in negative moment regions
- 3.11 Hybrid
- 3.12 Precast prestressed concrete beam

4.0 LIVE LOADING

- 4.1 All AASHTO trucks and lane loadings
- 4.2 Tandem or interstate loading
- 4.3 A menu of trucks specified by the user
- 4.4 Generalized trucks
- 4.5 Extended AASHTO truck and lane loadings

- 4.6 User-specified trucks up to 20 axles
- 4.7 Impact automatically determined with user override capability
- 4.8 Sidewalk LL
- 4.9 Distribution factor automatically determined with user over-ride capability
- 4.10 All LRFD live load provisions including vehicles, distribution and impact factors

5.0 DEAD LOADING

- 5.1 All DL conditions given automatically
- 5.2 Special DL conditions
- 5.3 DL staging analysis

6.0 ANALYSIS

- 6.1 Full and detailed analysis
- Analysis includes: Section properties, moments, shears, reactions, deflections, camber, stresses and stress ranges for DL and LL minima/maxima
 Arbitrary boundary conditions
- 0.5 Arbitrary boundary condition

7.0 CODE CHECK

- 7.1 A full and detailed formal code check for the AASHTO WSD, LFD and LRFD
- 7.2 The code check includes: The AASHTO specification reference, the equation number and applicable coefficients given in the output
- 7.3 All provisions of the AASHTO specifications are utilized
- 7.4 Moment-Shear interaction

8.0 RATING

8.1 The program allows the user to calculate inventory, operating and safe load capacity rating

9.0 DESIGN

- 9.1 Design with minimum weight or minimum cost
- 9.2 Design with stiffeners or without stiffeners
- 9.3 Fix web and/or flange plate sizes
- 9.4 Specify maximum and minimum plate sizes
- 9.5 Specify types of material and their costs
- 9.6 Specify field splice locations
- 9.7 Rolled beam design

LIVE LOAD

MERLIN-DASH incorporates a wide range of highly general Live Load capabilities (see Item 4.0 in Table 2.1).

DEAD LOAD

All Dead Load conditions, including Dead Load staging analysis, are given automatically for both composite and non-composite construction in accordance with AASHTO (see item 5.0 in Table 2.1).

ANALYSIS

A comprehensive range of analysis capabilities is available with *MERLIN-DASH*. These capabilities are demonstrated in the detailed, voluminous, and user selectable outputs which are generated for section properties, moments, shears, deflections, cambers, reactions, stresses for dead loadings, maxima/minima for moments, shears, deflections, and reactions and stresses for live loadings (see Tables 7.1 and 7.2 in Section 7.0).

CODE CHECK

MERLIN-DASH performs a rigorous and detailed code check for the AASHTO WSD, LFD, and LRFD alternate design methods. The code check includes a comparison of all actual stresses or stress resultants (e.g., moments, shears, etc.) and stress ranges to the allowable values generated automatically by the program. Supplementing all code check results, in the program output, are the applicable code equation numbers, the code provisions, and the constants which are used to calculate the allowable values. These results are given for all fatigue and non-fatigue details. Flags highlight all overstressed conditions.

GRAPHICS

The *MERLIN-DASH* Windows version includes various graphics which support the tabular output. These include moment and shear diagrams for all DL conditions, moment and shear envelopes for LL conditions, and deflection and camber curves for composite and non-composite construction. Also included are stress ranges, stresses, and allowable stresses for top and bottom flanges.

<u>RATING</u>

MERLIN-DASH provides the inventory, operating, and safe load capacity ratings WSD, LFD, and LRFD.

DETAILED DESIGN

MERLIN-DASH can perform detailed designs utilizing either the AASHTO WSD, LFD, or LRFD methodologies. Among the various features available to the users are design recycling, placement of lateral bracing, capacity increases for unbraced sections, the shear/moment interactions, stiffener requirements, and code checks.

OPTIMUM DESIGN

Incorporated within *MERLIN-DASH* is the capability to generate optimal designs based upon minimum cost. Included within this procedure are determinations of the sections, splices, welds, stiffeners, etc.

2.2 Methodology

This section briefly describes the methodology used in *MERLIN-DASH*.

ANALYSIS

The analysis techniques used in *MERLIN-DASH* are based upon the direct stiffness method which possesses many advantages over other popular approximate methods such as moment distribution or slope deflection. An automatic mesh generation is performed within *MERLIN-DASH* which automatically sequences all nodal points and section properties for each AASHTO dead load and live load condition. Here, mesh changes for various loading and construction conditions are generated automatically which results in the following advantages:

- **1.** The analysis is accomplished using only those changes-in-section which actually exist on the structure with no numerical approximation required.
- 2. The analysis can easily accommodate various specialized elements and boundary conditions.
- **3.** The analysis offers much greater efficiency than other popular methods.

The stiffness methodology incorporates both joint and member loads. A summary regarding the assumptions inherent in *MERLIN-DASH* is given in Table 2.2. A definition of the program limits is given in Table 2.3. The assumptions regarding each of these construction types as well as for LL moments of inertia are given in Table 2.4. Loading assumptions for all load types are given for composite and non-composite construction in Table 2.4.

Table 2.2 : Assumptions			
NO.	ITEM		
1	Deflections are small		
2	Material is elastic		
3	Beam length is much greater than lateral dimensions		
4	Torsional effects are neglected		
5	Shear deformations are neglected		
6	Two kinematic degrees-of-freedom are assumed at each joint (vertical deflection and rotation)		
7	Concentrated member loads		
8	Uniform member loads		
9	Members assumed prismatic between joints		
10	Non-prismatic (with haunches) members modeled with automatic joint generation		
11	Transformed sections are used for composite sections		
12	Sections symmetric about Y-Y axis		

Table 2.3 : Program Limits			
NO	DESCRIPTION	MAX. NO.	
1	Joints	150	
2	Sections	70	
3	Members	149	
4	Hinges	10	
5	Spans	10	
6	Supports	11	
7	Output intervals per span	20	
8	Lateral bracing sets	30	
9	Longitudinal stiffener sets	30	
10	Transverse stiffener sets	30	
11	Live axle loads	20	
12	Impact factors per span	1	
13	Arbitrary uniform dead	20	
	load		
14	Arbitrary concentrated	20	
	dead load		
15	HS vehicles HS-	99	
16	Field sections	20	

<u>DESIGN</u>

MERLIN-DASH allows steel plate girder and rolled beam design by using WSD, LFD or LRFD methods. The construction can be either composite or non-composite. By default, the program designs a prismatic girder/beam with constant web depth but varied flange and web thickness along the girder/beam. Since version 6.1 for DOS, the program allows the design of girders with haunch.

In a typical optimization problem one must define the Variables, the Design Constraints, and the Objective Function. The design variables for a typical plate girder section are the top flange width and thickness, web plate depth and thickness, the bottom flange width and thickness, and the transverse stiffener spacing. The design constraints are the limitations imposed on the design variables which can be classified as Side Constraints or Behavioral Constraints. The Side Constraints are imposed either by the program's built-in limitations based on the engineering judgment, or the user's input based on the design case (i.e., max. web depth). The Behavioral Constraints are those constraints associated with the structural behavior and the AASHTO code requirements. The Objective Function can be either Minimum Weight Optimization or Minimum Cost Optimization. The Minimum Weight Optimization is an optimization of the cross-sectional area of the design members. On the other hand, the Minimum Cost Optimization problem.

TABLE	2.4 : Loading	Assumptions		
LOAD	MODULAR RATIO			
ТҮРЕ	COMPOSITE	NON- COMPOSITE	ASSUMPTIONS	
Steel DL	Infinity	Infinity	DL (steel) = (Uniform Member Loads) x (Detail Factor) where Uniform Member Loads = Steel Only Detail Factor = Connections, etc. Unit Weight of Steel 490 lb. per cu. ft.	
Slab DL	Infinity	Infinity	Slab DL = Uniform member load taken as input	
SDL	N1	Infinity	SDL = Wearing surface, parapets, etc. taken as uniform member loads or as input	
Arbitrary Loads	As Input	Infinity	Taken as uniform or concentrated loads along member as input	
Live Load	N2	Infinity	AASHTO truck and lane loads taken to give maximums	
Staging	Varied		Each pour is considered superimposed dead load, and partial composite is considered for each stage.	

DEAD LOADINGS

For steel beam bridges which act compositely with reinforced concrete decks, the analysis proceeds in stages. Non-composite bridges utilize steel only for all DL conditions (see Table 2.4).

LIVE LOAD MAXIMA

Live load falls into two major categories - maximum live load moments and maximum live load shears. Maximum live load deflections for each span are also obtained during the process of computing the maximum live load moment. In addition, reactions at each support due to live load are computed and listed in the program output. The maximum values of each of the specified highway loadings (AASHTO lane and truck, tandem, special vehicle, truck-train loading) are retained as needed. Only maxima are given for each interval and are utilized in constructing envelopes. If impact and distribution factors are not specified by the user, they will be automatically calculated in accordance with AASHTO. All live loading computations are influenced by these two factors except for the sidewalk live load, which is directly applied to the outside girders.

AASHTO LOADINGS

For a truck loading, each axle is moved over the current interval point to produce maximum positive moment. The same process is applied to lane loading, but only the minimum point on the moment influence line of the entire structure is considered as the point where the truck will be moved to obtain the maximum negative moment. Two directions of travel are taken into consideration if not otherwise specified. (A unidirectional direction can be specified if it is desired). Tandem loading is treated in an identical manner.

For maximum positive shear, the distributed loads are applied from the current point to the right end of the span and every other span in that direction, and the previous span plus every other span in that direction. The concentrated load of the lane loading will be just to the right or left of the point under consideration to produce the maximum positive or negative shear. In calculating end shears and reactions, no distribution factor for the wheel loads needs to be applied according to AASHTO 2.23.1.1.

LRFD Application of Design Vehicular Live Loads:

1. The fatigue load shall be one design truck or axles specified in LRFD Art. 3.6.1.2.2, but with a constant spacing of 30.0 ft. between the 32.0-kip axles. The dynamic load allowance (IM) is 15%.

2. Maximum live load is the larger of the following

- The effect of the design tandem (IM=33%) with combined with the effect of the design lane load, or
- The effect of one design truck with the variable axle spacing specified in LRFD Art. 3.6.1.2.2 (IM=33%), combined with the effect pf the design lane load, and
- For both negative moment between points of contraflexure under a uniform load on all spans, and reaction at interior piers only, 90% of the effect of two design trucks (IM=33%) spaced a minimum of 50.0 ft. between the lead axle of one truck and the rear axle of the other truck, combined with 90% of the effect of the design lane load. The distance between the 32.0 -kip axles of each truck shall be taken as 14.0 ft.

SPECIAL LOADINGS

Due to the increasing number of non-standard trucks currently in use, *MERLIN-DASH'S* capability of handling special loadings allows the user to compute the rating or the posted weight limits for any bridge. The special loading capabilities include:

- **1.** Dump Truck (2D or 3D)
- 2. Maximum Allowable Trucks (MST76, Type 3, 3S2, 3-3)
- **3.** General Vehicles (when the axle loads and spacing are defined by the user).
- 4. Special Vehicles (where the axle loads and spacings of up to 20 axles can be defined by the user).

Special vehicles must be input and run independently from the other loading cases. The identical procedure for calculating the AASHTO moments and shears is also utilized for the specified special truck loading within *MERLIN-DASH*.

DEFINITION OF TRUCKS

MERLIN-DASH allows users to specify their own truck configurations in a predefined truck file. This file is in an ASCII format and must be defined prior to the *MERLIN-DASH* run. It contains the truck name, number of axles, axle weights and spacings.

Predefined truck files, for several AASHTO rating trucks, are included in your *MERLIN-DASH* software package. The files TRUCK26.DAT and TRUCK26M.DAT contain the truck configurations in *U.S. Customary* and *S.I.* units, respectively. *MERLIN-DASH* allows the simultaneous execution of the AASHTO Truck (A) (see attachment 6 of this user's manual for the format of the truck files), Dump Truck (D), Maximum Allowable Truck (M), and General Vehicle (G), or the single execution of the Special Vehicle (C). For the simultaneous execution of trucks A, D, M, and G., the program will pick up the maximum values of the results induced by these trucks. The single execution of the Truck C will give the results induced by this single loading.

The AASHTO Truck should be defined according to the AASHTO Manual (or proportioning up to HS-99) while the Special Vehicle is defined in Screen numbers 12 and 13 of *MERLIN-DASH* Input Utility.

1. Dump Truck (D). The only limitations for defining Dump Trucks are:

Dump Truck Loading Designation	- 2 Characters
Number of Axles	- 3 Axles

If the number of axles exceeds three, or the loading designation is not specified in the predefined truck file, the program will give an error message and be terminated.

2. Maximum Allowable Truck (M). The limitations on user input are:

Maximum Allowable Truck Loading Designation	- 6 Characters
Number of axles	- 6 Axles

If the number of axles exceeds six, or the loading designation is not specified in the predefined truck file, the program will give an error message and be terminated.

3. General Truck (G). The limitations on user input are:

General Loading Designation	- 4 Characters
Number of Axles	- 20 Axles

If the number of axles exceeds twenty or the loading designation is not specified in the predefined truck file, the program will give an error message and be terminated.

In the LRFD calculation for live load:

1. For Strength I, Service I, and Fatigue Limit States, only HL-93 (truck + lane & interstate + lane) is considered. Default or user-specified distribution factors (for either moment or shear) are employed.

2. For Service II: Maximum of HL-93 and Permit is considered. Default or user-specified

distribution factors (for either moment or shear) are employed.

3. For Strength II: Maximum of HL-93 and combination of (one lane Permit and adjacent lanes HL-93) is considered where G defined in Eq. (4.6.2.2.4-1) is applied with default or user-specified distribution factors (for either moment or shear) as their respective "gm" (multiple lane live load distribution factor).

These considerations apply to all actions, (M, V, D and R).

MOMENT/SHEAR INTERACTION

In calculating the live load moment for each loading case, there will be two envelopes formed one for maximum positive moment and one for maximum negative moment. The shear corresponding to each moment case is also computed and stored so that the interaction equation required for the design of transverse stiffeners can be accurately calculated. The maximum deflection of each span is computed and stored to compare with the allowable deflection given in AASHTO 10.6. Only two moment envelopes, one positive and one negative, are generated for special vehicles.

Two shear envelopes and their corresponding moments are recorded for each loading case. These separate moment and shear diagrams lead to the calculation of consistent fatigue stress ranges for each number of live load cycles.

<u>RATING</u>

The WSD and LFD rating methods contained in AASHTO *Manual for Condition Evaluation of Bridges* and the LRFD method contained in AASHTO *The Manual for Bridge Evaluation* are employed within *MERLIN-DASH*.

STAGING

After a bridge design is completed using MERLIN-DASH, the same data file can be used for staging analysis. The pouring days of the consecutive pouring, after the first pour, can be input. The modulus of elasticity and the creep effects will be determined by the program. The intermediate moments, stresses and deflections will be included in the output.

3.0 USING MERLIN-DASH

MERLIN-DASH is currently available for use on micro-computers using the Microsoft Windows environment. This manual describes the Windows version of **MERLIN-DASH**, hereafter referred to as **WIN-DASH**. This version utilizes a Windows based pull-down menu structure to access **WIN-DASH**'s input, execution, graphing, and printing utilities.

3.1 Before You Begin

WIN-DASH has been designed to run on micro-computers that use the Microsoft Windows operating system. While this manual provides step-by-step instruction in the use of **WIN-DASH**, it cannot address the specific operation of every personal computer (PC). Before you begin, please ask yourself the following questions:

- 1. Are you familiar with the PC or micro-computer you are using?
- 2. Are you familiar with Microsoft Windows?
- **3.** Do you have an understanding of the concepts and use of terms such as menus, help screens, the cursor, the mouse, files, etc.?
- 4. Have you read/installed the *WIN-DASH* software using the installation instructions you received with your system disks?
- 5. Have you filed your installation instructions with your other *WIN-DASH* reference material?

If you cannot answer "Yes" to all of these questions, please take the time to address them before continuing in this manual.

If you are prepared to continue, take a moment to look over the Table of Contents provided at the beginning of this manual. You will find that the remainder of this document illustrates the detailed use of the four basic utility functions of *WIN-DASH*:

Section 4.0	The Input Utility	Section 6.0	The Graphic Utility
Section 5.0	The Run Utility	Section 7.0	The Print Utility

The remainder of this section describes how to enter *WIN-DASH* and how to access the Main Menu.

3.2 Accessing the Main Menu

The *WIN-DASH* MAIN MENU is the main access screen to each of the utilities provided within the *WIN-DASH* system. It is also the main return point when you have finished using one of the utilities.

If you have not yet done so, please refer to your installation instructions and install your *WIN-DASH* software.

If your PC is currently off, simply turn it on and run Microsoft Windows. After entering Windows, *WIN-DASH* can be run by double-clicking the *WIN-DASH* (or *DASHLRFD*) icon. The *WIN-DASH* Introduction Screen will be displayed on your monitor for a few seconds.

This screen contains both the copyright statement and the version number of the *WIN-DASH* software you will be using. This version number will be important in all communications with the BEST CENTER and your *WIN-DASH* vendor.



Figure 3.1 : WIN-DASH Title Screen

3.3 The WIN-DASH Main Menu

This screen allows you to access any of the five utilities available in *WIN-DASH* or to exit the program. These are the Input, Run, Graphic, Print and Help utilities.



Figure 3.2 : WIN-DASH Main Menu Screen

<u>Visual Input Utility</u> - allows you to create new bridge data files or to edit existing files. Once you have entered the details of a structure, you can then save it for later use. For detailed instructions on using the pull-down menu system of the Visual Input Utility refer to Section 4.0.

<u>**Run Utility</u>** - allows you to execute the *WIN-DASH* program using the data stored in any of your input data files. For detailed instructions on using the Run Utility refer to Section 5.0.</u>

<u>**Graphic Utility</u>** - allows you to view and print output graphic files. For instructions on using the Graphic Utility refer to Section 6.0.</u>

<u>Post Processor</u> - please refer to Appendix E for details.

<u>**Print Utility**</u> - allows you to view and print output files and tables. It also provides a directory of available tables for your convenience. For instructions on using the Print Utility refer to Section 7.0.

<u>Exit</u> - allows you to exit *WIN-DASH* simply by clicking on the word 'Exit' in the *WIN-DASH* Main Menu or by typing Alt-x on your keyboard.

<u>**Help Utility</u>** - allows you to view help for the Help basics, how to, commands and buttons. Hit F1 key will bring up the input description of the current input screen. Help Utility may also be accessed from Input Utility(see Section 4.5).</u>

To access any of the utilities available from the Main Menu, use your mouse to position the cursor over the desired utility, such as 'Input,' and click once. The utilities may also be accessed using the "button" below them. A new screen will appear with a menu listing the options available under that utility. By again positioning the cursor over the desired menu item and clicking the left mouse button a submenu will appear with additional options. With the cursor positioned over the desired option, click the mouse button once to choose that option. Sections 4.0 - 7.0 will provide a step-by-step explanation of each of the options available under each utility. Each of the utilities can also be accessed by pressing the appropriate underlined letter on the menu bar while holding down the ALT key. For example, the Input Utility could be accessed by typing ALT-I, the Run Utility by typing ALT-R, etc. All the sub-menu's in *WIN-DASH* can also be accessed by using the ALT key in this manner.

4.0 INPUT UTILITY

The Input Utility allows you to create new bridge data files or to edit existing files. Once you have entered the details of a structure, you can save it for later use.

While entering data items, different graphics including bridge plan, cross sections, girder profile, tendon configuration, truck illustrations and 3D bridge will be showing on right of the screen so data can be checked visually.

4.1 Main Menu

<u>File Menu</u>

By clicking on 'File' a submenu with the options 'New', 'Open', 'Save', 'Save As', 'Open XML', 'Save XML As' and 'Exit' appears.



<u>Toolbar</u>

Row

⊥ Untitled - Project Data (01012, 01022)						
File	1	<i>i</i>	R 🍺	۵	5	5

2	Help	- Open help window
	New	- Create a new DASH input project.
	Open	- Open an existing DASH input data file
	Save	- Save current DASH input project as a DASH input data file
N	Save As	- Save current DASH input project as a different DASH input data file
3	Open XML	- Open an existing DASH XML file
	Save XML	- Save current DASH input project as a DASH XML file
	Save XML As	- Save current DASH input project as a different DASH XML file
>	Exit	- Quit the Input Utility

Most Recent Files:

Items listed between **Save XML As** and **Exit** are most recent files accessed by the Input Utility. Click any one of them to open it directly.

Tips: DASH input data file or DASH XML file?

DASH input data file is the input file for DASH analysis program. It is fundamental to run the DASH program. DASH XML file has more information than DASH input data file has. For example, in the current release, DASH input data file does not contain cross sectional tendon configurations of a Prestressed Concrete structure; while DASH XML file does contain all data.

DASH XML file takes more space and takes more time to load. If a structure is not Prestressed Concrete, keep DASH input file only. For a PC structure, always keep XML file to retain cross sectional tendon configuration. When ready to run DASH analysis program, save a copy of DASH input data file.

For a PC structure, when a project is read directly from DASH data input file, missed cross sectional tendon configuration will be faked by assuming tendons are equally spaced in lateral by a default spacing.

4.2 Data Input Pages

Input Data for DASH program are grouped by different Data Types. Each data type has a data type number and a name. In the Input Utility, data input for each data type are grouped together by a **Data Input Page**.

Data Input Pages are grouped by their purposes.

The available Data Input Page groups are System, Structure Framing, Beam Definition, Factor Definition, Live Load, Dead Load, Design, Details and Property etc.

Data Input Pages are shown on the left side of the window. The following screen capture shows **Project Data** input page on the left. To enter DASH data, you need to Navigate to a Data Input Page First.

I Untitled - Project Da	ta (01012, 01022)		
File 🗄 🍺 📑 📕	R 🍻 🖬 🖹 🦻 📕		
< Project Data (01	↓012, 01022)	Plan View 👻	
	Project Data		
Data Type: 01012	01022		
Description			
	11/4/2010		
Date	11/4/2010 15		
Contract Number			
Structure Number			+
Structure Unit			ω
Design By			
Check By			-
Specification			ā
Q Options			
			ā
			ā
			_

Navigate to a Data Input Page

Controls beneath Toolbar are for navigation between Data Input Pages.



When page list drops down by clicking any where over the middle control, the following window will pop up. Double click over any bold item in the window to expand/collapse a group of Data Input Pages. Double click over any page item to go to that page.



4.2.1 System

System group contains Project Data (Data Types 01012 and 01022) and General Program Options (Data Type 01032). This group is for all structure types.

4.2.1A Project Data (Data Type 01012, 01022)

Project Data							
Data Type: 01012, 01022							
Description							
Date	11/4/2	010 15					
Contract Number							
Structure Number							
Structure Unit							
Design By							
Check By							
Specification							
 Options 							
No Hinge		🔘 Hinge					
Manual DL+SDL In	nput	Auto Generating DL+SDL					
AASHTO Live Load	d Only	AASHTO and Non- AASHTO Live Load					
AASHTO Default I and Distribution F and Non-Skew An	mpact actors gle	 User Input Impact and Distribution Factors and/ or Skew Angles (LRFD only) 					
AASHTO Load and Resistance Factors	1	 User Input Load and Resistance Factors 					
Default Boundary Condition		O User Input Boundary Condition					

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
01012	Project Data (1)				
	General Description of Project	NONE	ALPHA	OPT.	
	Date	NONE	ALPHA	OPT.	
01022	Project Data (2)				
	General Description of Project	NONE	ALPHA	OPT.	
	Contract Number				
	Structure Number	NONE	ALPHA	OPT.	
	Structure Unit	NONE	ALPHA	OPT.	
	Designed By	NONE	ALPHA	OPT.	
	Checked By	NONE	ALPHA	OPT.	
	Specification Used	NONE	ALPHA	OPT.	

Table 4.1 : Project Data Input Description

4.2.1B General Program Options (Data Type 01032)

General Program Options					
Data Type: 01032					
Output Level	0 - Basic Level for Analysis				
Span Interval	10				
Structure Type	1 - Steel Composite 🔹				
Design Code	Latest AASHTO Specification				
Type of Unit	0 - English 🔹				
Design Opition	0 - WSD 🔹				
Program Flow	0 - DL Analysis 🔹				
 Options 					
For Post-Tension Only	0 - Bonded Member				
LRFD State Special Option	0 - Default 🔹				
LRFD Ch. 6 Appendix Option	A 0 - No(Default)				
LRFD Effect Flange Width Option	0 - 2008 Full Width (Default) 🔹				

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
01032	General Program Options				
	Output Level: 0 = Basic (Default) 1 = Detailed	NONE	INT.	REQ.	Т. 7.2
	<i>Span Interval:</i> Number of equally spaced intervals (usually given between 10 and 20) into which the spans are to be divided for output. Maximum = 20.	NONE	INT.	REQ.	Т. 2.3
	Structural Type: 1 = Steel Composite (Default) 2 = Steel Non-Composite 3 = Reinforced Concrete 4 = Prestressed Concrete	NONE	INT.	REQ.	
	<i>Type of Units:</i> 0 = US Customary 1 = SI 2 = SI input, US Customary output, 3 = US Customary input, SI output	NONE	INT.	OPT.	
	Design Code Option: 0 = WSD (Default) 1 = LFD 2 = LRFD	NONE	INT.	REQ.	
	Program Flow Control: This is used to define the Flow of the program as follows: 0 = DL ANALYSIS ONLY (Default option) 1 = DL + LL ANALYSIS 2 = CODE CHECK 3 = RATING 4 = DESIGN 6 = DESIGN + RECYCLE + CODE CHECK 7 = DL STAGE ANALYSIS 8 = DL STAGE + LL ANALYSIS	NONE	INT.	REQ.	FIG. 2.1
	<i>For Post-Tension Tendon only</i> 0 = Bonded member, 1 = Unbonded member	NONE	INT.	OPT.	

Table 4.2 : General Program Options Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
01032	LRFD State Special Option	NONE	INT.	OPT.	
(cont.)	Enter 0 or blank for no LRFD state special option				
	Enter 1 for MN DOT option for neg. LLM factor				
	0.9 if span length < 100'				
	1.1 if span length > 200 '				
	Interpolate in between				
	Enter 2 for MI DOT option for HL-93 * 1.2				
	LRFD Ch.6 Appendix A Option	NONE	INT.	OPT.	
	0 – Default (No)				
	1 – Yes				
	LRFD Effective Flange Width Option	NONE	INT.	OPT.	
	0 – Default (2008 full width)				
	1 – 'Prior to 2007' width.				

Please refer to Appendix A-5 for Screen Organizer.

4.2.2 Structure Framing

Structure Framing group contains Structure Detail (Data Type 03012), Beam Spacing (Data Type 03042) and Hinge Location (Data Type 03032) for all structure types and Span Length (Data Type 03022) for non-PC structures, Span Length (Data Type 03062) for PC structures, and Boundary Condition (Data Type 09022) for steel structures.

4.2.2A Structural Details (Data Type 03012)





Table 4.3 : Structural Details Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
03012	Number of Beams: Number of beams within the	NONE	INT.	REQ.	T. A.1.2
	bridge cross section. This is used to compute the				
	live load distribution factor for an exterior beam				
	according to the design code specified on DATA TYPE				
	01032, and to average the live load deflections.				
	<i>Position</i> : This is used in determining the LL	NONE	INT.	REQ.	T. A.1.2
	distribution factor and in the application of any				
	sidewalk live loading:				
	1 = Interior (Default)	NONE	INT.	REQ.	
	2 = Exterior (Left)				
	3 = Exterior (Right)				
	Width Between Curb and Barrier: Distance	ft (m)	REAL	REQ.	T. A.1.2
	between curbs or barriers. This parameter is				
	used in determining the traffic lane division for the				
	exterior beam live load distribution factor.				
	I	<u> </u>	<u> </u>		(continued)

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
03012	NOTE: Median barriers are considered movable				
(cont.)	and, therefore, are not accounted for in the				
	determination of the LL distribution factor for				
	an exterior beam				
	OPTION: An option which allows the engineer to specify the distribution factor is available via DATA TYPE 08XXX.				
	Overhang Width: The distance from the centerline	ft (m)	REAL	REQ.	T. A.1.2
	of an exterior beam or girder to the outside edge of the bridge.				
	<i>Edge of Slab to Curb:</i> The distance from the outside edge of the bridge to the curb line.	ft (m)	REAL	REQ.	T. A.1.2
	Haunch, Depth, Width : The dimensions of the	in (mm)	REAL	OPT.	T. A.1.2
	haunch which is used in computing the section				
	properties of composite sections. Leave blank for				
	non-composite construction. (Haunch depth is from top of the steel web to the bottom of the slab)				
	Percent Composite in Negative Moment Area :	%	REAL	OPT.	T. A1.2
	Extent of composite action assumed for the DL negative				
	moment region (for the generation of the stiffness matrix).				
	This item is expressed as a decimal percentage				
	(i.e., 0.0% through 100%); leave blank for non-composite.				
	construction. Default = 100 %				
	Detail Factor for Beam : A factor used as a multiple	NONE	REAL	OPT.	T. A1.2
	of the DL of the basic beam for or plate girder				Т. 2.4
	sections to account for such details as connections,				
	cross-frames, hangers, etc. Default = 1.0				
	<i>Right Overhang Width:</i> The distance from the centerline of a right exterior beam or girder to the outside edge of the bridge.	ft(m)	REAL	OPT.	
	<i>Right Edge of the Slab to Curb:</i> The distance from the right outside edge of the bridge to the curb line.	ft(m)	REAL	OPT.	

Table 4.3 : Structural Details Input Description (continued)
4.2.2B Span Length (For non-PC Bridge) (Data Type 03022)

Span Lengths									
Data Typ	e: 03022 (Foot)								
Span No.	Span Length								
1	50.0								
2									
3									
4									
5									
6									
7									
8									
9									
10									
* Maximur	n allowed number of spans is 10								

 Table 4.4 : Span Lengths Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
03022	Span 1 Lengths. Span N Lengths: The length of each	ft (m)	REAL	REQ.	T. 2.3
	span up to a maximum of 10 spans.				

4.2.2C Span Length (for PC Bridge only) (Data Type 03062)



 Table 4.4.A : Span Lengths Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
03062	Left Overhang: Distance of left overhang from left bearing	ft (m)	REAL	REQ.	
	<i>Span 1 Lengths. Span N Lengths:</i> The length of each span up to a maximum of 10 spans.	ft (m)	REAL	REQ.	
	Right Overhang: Distance of right overhang from right bearing Overhang to Overhang: Gap distance between	ft (m)	REAL	REQ.	
	overhangs at the interior pier	ft (m)	REAL	REQ.	

Note: Total length referred to in the input is based on the sum of the span lengths only. Program will adjust the total length including overhang lengths.

4.2.2D Hinge Locations (Data Type 03032)

Hinge Locations								
Data Type: 03032 (Foot)								
Hinge No. Location	n Hinge Stage							
1	0 or blank - Hinge at All Stages							
2	0 or blank - Hinge at All Stages							
3	0 or blank - Hinge at All Stages							
4	0 or blank - Hinge at All Stages							
5	0 or blank - Hinge at All Stages							
6	0 or blank - Hinge at All Stages							
7	0 or blank - Hinge at All Stages							
8	0 or blank - Hinge at All Stages							
9	0 or blank - Hinge at All Stages							
10	0 or blank - Hinge at All Stages							
* Maximum number	of hinges = 10							
* Hinge limit < total span length								
* Default is a continu	ious beam with two hinge ends.							

 Table 4.5 : Hinge Locations Data Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
03032	Hinge Locations	ft (m)	REAL	REQ	
	Distance from the extreme left support (left bearing location)				
	Note: maximum number of hinges = 10 and hinge location limit should be				
	less than the total span length				
	Note: The current version only allows hinges at the pier supports.				
	Distance of the hinge location is the accumulation of the span lengths				
	defined in Data Type 03062, not including overhangs.				
	Hinge ID	NONE	INT.	REQ	
	0 or blank – Hinge at All Stage				
	1 – Hinge at DL Stage				
	2 – Hinge at Superimposed DL Stage				
	3 – Hinge at LL Stage				
	(Hinge ID = 1 for simple-span-for-dead-load-and- continuous-span-for-line-load case applied to either PC or Steel bridges)				

4.2.2E Beam Spacing (Data Type 03042)



 Table 4.6 : Beam Spacing Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
03042	Span 1 Beam Spacing Span N Spacing: The beam spacing for each span. These data are used to compute the LL distribution factor.	ft (m)	REAL	REQ.	

4.2.2F Boundary Conditions (Data Type 09022)

Boundary Conditions										
Data Type: 0	9022									
Support Number Left Abutment=1	Bending Fixed	Support Settlement (Inch)	Elastic Support Constant Bending (Kips-Ft/Rad)	Elastic Support Constant React (Kips/Ft)						
0	0 - No									
0	0 - No									
0	0 - No									
0	0 - No									
0	0 - No									
0	0 - No									
0	0 - No									
0	0 - No									
0	0 - No									
0	0 - No									
0	0 - No									
* Default is a d	ontinuou	s beam with	two hinge ends							

 Table 4.7 : Boundary Conditions Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
09022	 Support number: Support no. Starting from left end as 1. Bending Fix: Fix support bending if fix = 1, Default = 0. Support Settlement: Vertical downward settlement. (Downward is negative) 	NONE NONE in (mm)	INT. INT. REAL	OPT. OPT. OPT.	
	Elastic Support Constant				
	Bending: Rotational spring constant.	kip-ft/rad (kN-m/rad)	REAL	OPT.	
	<i>Reaction:</i> Vertical spring constant.	kips/ft (kN/m)	REAL	OPT.	

4.2.3 Beam Definition

4.2.3.1 Steel

Beam Definition for steel bridge contains Steel (W/PG) Section (Data Type 04012) and Definition of Members (Data Type 05012).

4.2.3.1A Wide Flange, Plate Girder (Data Type 04012)

Steel (W/PG) Section											
Data	Type: (4012		Excel Work Sheet							
Se	ction	Standard	P. G.	Web	P. 6	i. Flange	and Cove	Plates			
No.	ID	Nominal Depth X Weight (Inch - Lb/Ft)	Depth (Inch)	Thick (Inch)	Top Width (Inch)	Top Thick (Inch)	Bottom Width (Inch)	Bottom Thick (Inch)			
1	PG 🔻										
2	PG 🔻										
3	PG 🔻										
4	PG 🔻										
5	PG 🔻										
6	PG 🔻	· · ·									
7	PG 🔻										
8	PG 🔻	· · ·									



DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
04012	For Steel Section:				
	Section Number: Cross sections are defined for each	NONE	INT.	REQ.	
	change in cross-section and are defined for both the				
	left and right end member range. (SEE DATA TYPE				
	05012). Each discrete cross section is not numbered if it				
	already has been identified with a previous section num-				
	ber. Section numbers begin with the integer 1.				
	Section Identification: (all upper case letters)	NONE	ALPHA	REQ.	
	W = Wide Flange, Rolled Shape				
	PG = Plate Girder				
	RC = Reinforced Concrete				
	Standard Section, Nominal Depth: Nominal depth	in (mm)	INT.	OPT.	REF.2
	of the AISC section. No entry is made for plate				
	girders.				
	Standard Section, Weight: Nominal weight of the	lb/ft	REAL	OPT.	REF.2
	AISC section. No entry is made for plate girders.	(kN/m)			
	Plate Girders, Web Depth and Thickness: Web	in (mm)	REAL	OPT.	
	depth and thickness of the plate girder. No entry is				
	made for standard rolled beams.				
	Plate Girders and Standard Sections With				
	Cover Plates, Top/Bottom Plate Width and Thickness:	in (mm)	REAL	OPT.	
	The width and thickness of the top/bottom plate. This				
	will be taken as the top/bottom flange dimensions				
	for a plate girder and the top/bottom cover plate				
	dimension for a standard rolled section.				
	Moment of Inertia for Reinforced Concrete:	in ⁴	REAL	OPT.	
	This input is used if RC option is selected.	(mm ⁴)			
	Area for Reinforced Concrete:	in ²	REAL	OPT.	
	This input is used if RC option is selected.	(mm ²)			

Table 4.8: Flanged Sections Input Description

Definition of Members												
Data Typ	e: 05012		Exc	el Work	Sheet							
Member	Sec	tions			Parameters			Yield	Yield Strength (Ksi)			
No.	Number Left	Numb Right	er	Length (Foot)	Туре	S0	S1	Web	Top Flange	Bottom Flange		
1					0 - Prismatic							
2					0 - Prismatic							
3					0 - Prismatic							
4					0 - Prismatic							
5					0 - Prismatic							
6					0 - Prismatic							
7					0 - Prismatic							
8					0 - Prismatic							
9					0 - Prismatic							
10					0 - Prismatic							
11					0 - Prismatic							
12					0 - Prismatic							
13					0 - Prismatic							
14					0 - Prismatic							
15					0 - Prismatic							
16					0 - Prismatic							
17					0 - Prismatic							
18					0 - Prismatic							
19					0 - Prismatic							
20					0 - Prismatic							

4.2.3.1B Definition of Members (Data Type 05012)



DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
05012	A member is defined as a range or segment of a plate				
	girder or rolled beam. The members must be numbered				
	and input sequentially along the beam starting at the				
	extreme left support. Members are defined between				
	section numbers. Thus, a member ranges from a left				
	section number to a right section number which may be				
	the same or different. Members may consist of several				
	possible prismatic or non-prismatic configurations				
	of different lengths. A detailed description of this input				
	is given as follows :				
	If design option is chosen, no member needs to be specified.				
	Member Number : The sequence number of the member	NONE	INT.	REQ.	
	(or range) numbered from the leftmost point on the				
	bridge.				
	Section Number L, R: These define the beginning and	NONE	INT.	REQ.	
	ending cross-sections of the member. Input the				
	section number found at the extreme left and right				
	ends of the member. These section numbers				
	correspond to those input on DATA TYPE 04012.				
	Member Type:	NONE	INT.	OPT.	T.A.1.3
	0 = Prismatic (Default)				
	1 = Linear				
	2 = Parabolic (Concave Down)				
	3 = Parabolic (Concave Up)				
	Member Parameters:				
	<i>Length</i> : Length or range of the member.	Ft (m)	REAL	REQ.	T.A.1.3
	S0 & S1: These two parameters correspond to	in/ft ²	REAL	OPT.	T.A.1.3
	different constants that must be defined	(mm/m^2)			
	for a non- prismatic member.				
	Leave blank for a prismatic member.				
	Steel Yield Stress of the Web Element for the Hybrid section	Ksi (MPa)	REAL	OPT.	
	Steel Yield Stress of the Top Flange for the Hybrid section	Ksi (MPa)	REAL	OPT.	
	Steel Yield Stress of the Bottom Flange for the Hybrid section	Ksi (MPa)	REAL	OPT.	

Table 4.9: Definition of Members Input Description







3 = Parabolic (Concave Up) (for steel only)



.....

4.2.3.2 Reinforced Concrete

Beam Definition for reinforce concrete bridge contains RC Section (Data Type 04012),RC Reinforcement Details (Data Type 04022) and Definition of Members (Data Type 05012).



4.2.3.2A RC Section (Data Type 04012)

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
04012	For Reinforced Concrete Sections Only:				
	Section Number: Cross sections are defined for each	NONE	INT.	REQ.	
	change in cross-section and are defined for both the				
	left and right end member range (SEE DATA TYPE 05012).				
	Each discrete cross-section does not need to be				
	numbered if it has been identified already with a previous				
	section number. Section numbers begin with the integer 1.				
	Section Type:	NONE	INT.	REQ.	
	0 = User defined arbitrary				
	1 = Solid Rectangular (or slab)				
	2 = T-Beam				
	3 = Inverted T-Beam				
	4 = I-Beam				
	5 = Circular Voided Slab				
	6 = Rectangular Voided Slab				
	7 = PI				
	User defined or Stored Section: Select User Defined to define				
	a cross section by entering different parameters according to				
	different section type, or select a stored section if there is any				
	predefined section of selected section type.				
	Reinforcement I.D.: This defines the reinforcement of	NONE	INT.	REQ.	
	the member. Input reinforcement number defined in				
	Data Type 04022.				
	Concrete Strength (F 'c): The 28-day compressive	ksi	REAL	REQ.	
	strength of concrete section.	(MPa)			
	Web Depth and Thickness:	in (mm)	REAL	REQ.	
	Thickness and depth of the web for the				
	types 2, 3 and 4.				
	Thickness and depth of the section for the				
	types 1, 5 and 6.				
	For type 0 (analysis only) no thickness needed.				

Table 4.10 : Reinforced Concrete Sections Input Descriptions

(continued)

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
04012	Top Flange Width and Thickness:	in	REAL	REQ.	
(cont.)	Type = 1 : No input,	(mm)			
	2 : Input for top flange,				
	3 : No input,				
	4 : Input for top flange,				
	5 : Input width as the diameter of inner circle,				
	6 : Input as the width and height of				
	rectangular void.				
	Bottom Flange Width and Thickness:	in (mm)	REAL	REQ.	
	Type = 1 : No input,				
	2 : No input,				
	3 : Input for bottom flange,				
	4 : Input for bottom flange,				
	5 : No input,				
	6 : No input.				
	Moment of Inertia : For concrete type 0 only.	in ⁴	REAL	OPT.	
		(mm ⁴)			
	Cross-Section Area : For concrete type 0 only.	in ² (mm ²)	REAL	ОРТ.	

Table 4.10 : Reinforced Concrete Sections Input Descriptions (continued)

4.2.3.2B RC Reinforcement Details (Data Type 04022)

RC Reinforcement Details												
Data Type:04022 Excel Work Sheet												
	В	ottom Ste	el		Top Steel			Shear Stee	el			
No.	Area (Asb) (Inch^2)	Distance (Db) (Inch)	Grade (Fyb) (Ksi)	Area (Asb) (Inch^2)	Distance (Db) (Inch)	Grade (Fyb) (Ksi)	Area (Asb) (Inch^2)	Distance (Db) (Inch)	Grade (Fyb) (Ksi)			
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												

 Table 4.11 : Reinforcement of Concrete Sections Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
04022	Reinforcement Number : Reinforcements defined here are				
	are to be used in DATA TYPE 04012 as reinforcement ID				
	for concrete sections.				
	<i>Bottom, Top and Shear Steel Areas :</i> Total steel areas at the bottom, top and web within the defined section.	in ² (mm ²)	REAL	ОРТ.	
	<u>Distances :</u>				
	<i>Distance for bottom steel :</i> Distance from bottom face of the member to the centroid of bottom steel.	in (mm)	REAL	REQ.	
	<i>Distance for Top Steel</i> : Distance from top face of the member to the centroid of top steel.	in (mm)	REAL	REQ.	
	<i>Space for Shear Steel :</i> Spacing between two vertical shear steel.	in (mm)	REAL	REQ.	
	Bottom, Top and Shear Steel Grades (Yield Stress) : Yield	ksi	REAL	REQ.	
	stresses of bottom, top and shear steel.	(MPa)			

4.2.3.2C Definition of Members (Data Type 05012 RC)

Definition of Members										
Data Typ	e: 05012		Excel Work Sheet							
Member	Sections	Length	1							
No.	Number	Length (Foot)								
1										
2										
3										
4										
5										
6										
7										
8										
9										
10										
11										
12										
13										
14										
15										
16										
17										
18										

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
05012	A member is defined as a range or segment of a plate				
	girder or rolled beam. The members must be numbered				
	and input sequentially along the beam starting at the				
	extreme left support. Members are defined between				
	section numbers. Thus, a member ranges from a left				
	section number to a right section number which may be				
	the same or different. Members may consist of several				
	possible prismatic or non-prismatic configurations				
	of different lengths. A detailed description of this input				
	is given as follows :				
	If design option is chosen, no member needs to be				
	specified.				
	Member Number : The sequence number of the member	NONE	INT.	REQ.	
	(or range) numbered from the leftmost point on the bridge.				
	Section Number : This defines the cross-sections of the		INT.	REQ.	
	member. This section number corresponds to this input on				
	RC Section (DATA TYPE 04012).				
	<i>Member Length:</i> Length or range of the member.	ft (m)	REAL	REQ.	T.A.1.3

Table 4.12 : Definition of Members Input Description

4.2.3.3 Prestressed Concrete

Beam Definition for prestressed concrete bridge contains PC Sections (Data Type 04012),PC Reinforcement Details (Data Type 16012) and Definition of Tendons (Data Type 05032)



4.2.3.3A PC Section (Data Type 04012)

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
04012	Section Number: Cross sections are defined for left, middle	NONE	INT.	REQ.	
	and right part of a span, which are prismatic within its range.				
	(See Definition of tendons (Data Type 05032). Section				
	numbers begin with the integer 1. It is automatically assigned				
	, user cannot change it.				
	Section Type:	NONE	INT.	OPT.	
	0 = AASHTO Bulb-T/ AASHTO Bulb-I				
	1 = Solid Rectangular (or slab)				
	2 = T-Beam				
	3 = Inverted T-Beam				
	4 = I-Beam				
	5 = Circular Voided Slab				
	6 = Rectangular Voided Slab				
	7 = PI				
	User defined or Stored Section: Select User Defined to define	NONE		OPT.	
	a cross section by entering different parameters according to				
	different section type, or select a stored section if there is any				
	predefined section of selected section type.				
	Reinforcement I.D.: This defines the reinforcement of	NONE	INT.	REQ.	
	the member. Input reinforcement number defined in				
	PC Reinforcement Details (Data Type 16012). According to				
	The steel areas on top and bottom of the section, rebars				
	will be show in section preview and any other pages that				
	Show sections. The vertical locations of rebars truly reflect				
	The rebar distance defined in PC Reinforcement Details				
	(Data Type 16012). Rebars are laid out with an equal spacing				
	Horizontally, center aligned. The number of rebars are defined				
	By a default rebar size.	• • •		0.777	
	Web Depth and Thickness, Top Flange Width, Thickness,	in (mm)	REAL	ОРТ.	
	Bottom Flange Width, Thickness, BS, TS, TST and BST:				
	Enter section parameters for different section types. If a				
	Parameter is not defined for a particular type of section, it				
	Will be disabled. When a stored section is selected, all				
	Parameters will be disabled.				

Table 4.13 : PC Sections Input Descriptions

4.2.3.3B PC Reinforcement Details (Data Type 16012)

	PC Reinforcement Details													
Data	Type:16	012			E	cel Work S	Sheet							
		Bottom Steel				Top Steel			Shear Stee	el				
No.	Range Distance (Foot)	Area (Asb) (Inch^2)	Distance (Db) (Inch)	Grade (Fyb) (Ksi)	Area (Asb) (Inch^2)	Distance (Db) (Inch)	Grade (Fyb) (Ksi)	Area (Asb) (Inch^2)	Distance (Db) (Inch)	Grade (Fyb) (Ksi)				
1		12.0	2.0		20.0	2.0								
2														
3														
4														
5														
6														
7														
8														

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
16012	Reinforcement Number : Reinforcements defined here are in ascending order starting from 1 Note: If there is no input for this screen, default shear steel based on #3 bar is designed and used for check and load rating.		INT.	REQ.	
	Range Distance : Range starting from the 1^{st} to the last spans between supports. For instance, 100'-100' spans can be defined 20'-60'-20' for the first span and the same for the 2^{nd} span for six ranges.	Foot (m)	REAL		
	<i>Bottom and Top Steel Areas:</i> Total steel areas at the bottom and top within the defined section. (later)	in ² (mm ²)	REAL	ОРТ.	
	Shear Steel Areas : Total steel areas at the web within D_b spacing distance	in ² (mm ²)	REAL	ОРТ.	
	Distances :				
	<i>Distance for bottom and Top steel</i> : Distances from bottom face of the member to the centroid of bottom steel and from top face to the centroid of top steel, respectively (later)	in (mm)	REAL	REQ.	
	<i>Distance D_b for Shear Steel:</i> Spacing between two vertical shear steel.	in (mm)	REAL	REQ.	
	Bottom, Top and Shear Steel Grades (Yield Stress): Yield stresses of bottom, top and shear steel.	Ksi (MPa)	REAL	REQ.	

Table 4.14 : PC Reinforcement Input Description

4.2.3.3C Definition of Tendons (Data Type 05032)

Definition of Tendons											
Data Ty	ype: 05032		Excel Work SI	heet							
Cross Se	ectional Conf	igurations									
Span 1	. • 0	Copy To Span 2	2 •								
Rows	Section I	Left No: 1 🔹	Section	Middle No: 1 ▼	Section	Right No: 1					
No.	Distance Between Rows (Inch)	#@Spacings (Inch)	Distance Between Rows (Inch)	#@Spacings (Inch)	Distance Between Rows (Inch)	#@Spacings (Inch)					
1	2.0	5@2	2.0	5@2	2.0	5@2					
2											
3											
4											
5											
6											
/											
8											
9											
10											
12											
13											
14											
15											
16											
17											
18											
19											
20											

Tips: When entering tendon column spacings, use C,C,N@D,C,N@D... formats. For example, a row of 5 tendons with equal spacing of 6 inches, enter 4@6; a row of 12 tendons with spacings of 2@5,8,5@6, 8,2@5, enter 2@5,8,5@6,8,2@5; a row of only one tendon, enter 0. Tendons are center aligned.

Longitudinal Definitions

Longitudinal Definitions

Member			Left				Middle			Right				
M	lo.	Span No.	Pattern	Section No.	Raised or Debond Wires	Raised Distance (Inch blank for debond)	Draped or Debond Length (Foot)	Section No.	Total Wires	Distance (Inch blank for debond)	Section No.	Raised or Debond Wires	Raised Distance (Inch blank for debond)	Draped or Debond Length (Foot)
1		1	Pretension - Straight c	1	6	2.0		1	6	2.0	1	6	2.0	
2	2													

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
05032	No.: Span Number, which span the tendon row is for.	NONE	INT.	REQ	
	Starting from 1 to maximum 10 spans. Ready only (defined				
	By Cross Sectional Tendon Configurations)				
	Strand pattern: <i>Wire Code</i>	NONE	INT.	OPT.	
	1 = Straight or Draped – Pretension,				
	2 = Parabolic - Pretension				
	3 = Straight – Posttension				
	4 = Parabolic – Posttension				
	Span Left: For left raised tendon. If no left raised tendon				(1)
	leave this block blank.				
	Section No.: Section number at left end. Read only.	NONE	INT.	OPT.	
	(defined by Cross Sectional Tendon Configurations).				
	Raised or Debond Wires: Number of wires raised or	NONE	INT.	OPT.	
	debond in left part of a span. Read only (calculated from				
	Cross Sectional Tendon Configurations).				
	Raised Distance: The distance to the bottom of section	in (mm)	REAL	OPT.	
	(inch or mm) at the left end of a span. Read only				
	(calculated from Cross Sectional Tendon Config.)				
	Draped or Debond Length: The distance from left end	ft (m)	REAL	OPT.	
	To where the tendon starts draped or debond (foot or				
	meter).				
	Mid Span: For main tendon at mid-span.				(2)
	Section No.: Section number in the middle segment.	NONE	INT.	REQ	
	Read only (defined by Cross Sectional Tendon Config.)				
	Total Wires: Total wires in the middles segment.	NONE	INT.	REQ	
	Read only (calculated from Cross Sectional Tendon				
	Configurations).				
	Distance: The Distance to the bottom of section (inch	in (mm)	REAL	OPT.	
	Or mm) in the middle segment of a span. Read only				
	(calculated from Cross Sectional Tendon Config.)				
	Span Right: For right raised tendon. If no right raised				(3)
	tendon leave this block blank.				
	Section No.: Section number at right end. Read only	NONE	INT.	OPT.	
	(defined by Cross Sectional Tendon Configurations)				

Table 4.15 : Member and Tendon Geometry Data Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
05032	Raised or Debond Wires: Number of wires raised or	NONE	INT.	OPT.	
(cont.)	Debond in right part of a span. Read only (calculated				
	From Cross Sectional Tendon Configurations)				
	Raised Distance: The distance to the bottom of section	in (mm)	REAL	OPT.	
	(inch or mm) at the right end of a span. Read only				
	(calculated from Cross Sectional Tendon Config.)				
	Draped or Debond Length: The distance from right end	ft (m)	REAL	OPT.	
	To where the tendon starts draped or debond (foot or				
	Meter).				
	Note: Tendon input can be per row basis with the distance as the row				
	distance or per group of rows basis with the distances as the centroid of				
	the tendon group. Tendon group can be raised or unraised group.				

Table 4.15 : Member and Tendon Geometry Data Input Description

4.2.4 Factor Definition

Factor Definition for WSD/LFD contains Impact and Distribution Factors (WSD/LFD) (Data Type 08012) and Gamma and Beta (LFD) (Data Type 09012). For LRFD, it contains Impact and Distribution Factors (LRFD) (Data Type 08012) and Load and Resistance Factors (LRFD) (Data Type 09012).

4.2.4A Impact and Distribution Factors (WSD/LFD) (Data Type 08012)

	Impact and Distribution Factors (WSD/LFD)																
Data T	lata Type: 08012																
	Impact Factors											Distributi	on Factors				
Span No.	Impact Factor %	Equation Number	Constant C1	Constant C2	Constant C3	Max % Factor	Load Types A	Load Types D	Load Types M	Load Types G	Load Types C	Dist. Factor	Appl. Option A	Appl. Option D	Appl. Option M	Appl. Option G	Appl. Option C
1													0 - Not Ap	0 - Not Apş			
2													0 - Not Ap	0 - Not Apr			
3													0 - Not Ap	0 - Not Apț			
4													0 - Not Ap	0 - Not Apț			
5													0 - Not Ap	0 - Not App			
6													0 - Not Ap	0 - Not App			
7													0 - Not Ap	0 - Not App			
8													0 - Not Ap	0 - Not Apı			
9													0 - Not Ap	0 - Not App			
10													0 - Not Ap	0 - Not Apr			

4.2.4B	Impact an	d Distribution	Factors	(LRFD)	(Data	Type 08012)
	P			()	(-JF

											Impact a	and Dis	stribut	ion Fa	actors	(LRFD)										
Data	Jata Type: 08012																									
		User Defined	Imp	oact F	actors				User	Defined Dist	tribution Fac	tors for	Mome	nt					User Defin	ed Distribut	ion Fac	tors for	Shear			
	Impact	Factors %		Load	Types	Optio	ons		Impact	Factors			Load	Types	Options			Distribut	ion Factors	a constation and		Load	Types C	ptions		
Span No.	Strength or Service Limit State	Fatigue Limit State	A	D	M	G	c	Strength or Service Limit State Moment+	Strength or Service Limit State Moment-	Fatigue Limit State Moment+	Fatigue Limit State Moment-	A	D	M	G	c	Strength or Service Limit State Moment+	Strength or Service Limit State Moment-	Fatigue Limit State Moment+	Fatigue Limit State Moment-	A	D	M	G	c	Skew Angie (Degree)
1												0 - No	0 - No	0 - No	0 - No	0 - No					0 - No	0 - No	0 - No	0 - No	0 - No	
2												0 - No	0 - No	0 - No	0 - No	0 - No					0 - No	0 - No	0 - No	0 - No	0 - No	
3				E								0 - No	0 - No	0 - No	0 - No	0 - No					0 - No	0 - No	0 - No	0 - No	0 - No	
4												0 - No	0 - No	0 - No	0 - No	0 - No					0 - No	0 - No	0 - No	0 - No	0 - No [.]	
5												0 - No	0 - No	0 - No	0 - No	0 - No					0 - No	0 - No	0 - No	0 - No	0 - No	
6												0 - No	0 - No	0 - No	0 - No	0 - No					0 - No	0 - No	0 - No	0 - No	0 - No [.]	
7			E									0 - No	0 - No	0 - No	0 - No	0 - No					0 - No	0 - No	0 - No	0 - No	0 - No	
8			E									0 - No	0 - No	0 - No	0 - No	0 - No					0 - No	0 - No	0 - No	0 - No	0 - No	
9												0 - No	0 - No	0 - No	0 - No	0 - No					0 - No	0 - No	0 - No	0 - No	0 - No	
10												0 - No	0 - No	0 - No	0 - No	0 - No					0 - No	0 - No	0 - No	0 - No	0 - No	

Table 4.16: Impact and Distribution Factors Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
08012	Specifications of Impact and Distribution Factors				
	**For LRFD OPTION, 'AXLE' DISTRIBUTION FACTORS				
	SHOULD BE INPUT. FOR OTHERS, 'WHEEL'				
	DISTRIBUTION FACTORS ARE REFERRED.				
	The input given here is optional and may be used to override impact and distribution factors which are calculated automatically by the program in accordance with the AASHTO code.				

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
08012	Span Number: This indicates the span for which impact	NONE	INT.	OPT.	
(cont.)	factor and/or distribution factor information is given.				
	<i>Impact Factor:</i> This input will override the impact factor which normally would be computed automatically by the program for the indicated span. The impact value input will be taken as a fixed value independent of loaded Lengths as specified by AASHTO.	NONE	REAL	ОРТ.	
	NOTE: Alternatively, the standard AASHTO equation for impact may be modified or another equation defined through the use of the Calculation Factor Options as described below.				T.A.1.5
	<i>Calculation of Factor, Equation Number:</i> This refers to a specific equation available for the computation of the live load impact factor. This equation can take many forms and is a function of the loaded length. The various equations available within the system are defined in Table A.1.5 - FORMULATION OF THE IMPACT FACTOR.	NONE	INT.	OPT.	T.A1.5
	<i>Constants C1, C2, C3:</i> Constants used to define fully the Special impact factor equation. (See TABLE A.1.5 for a complete description.)	NONE	REAL	OPT.	T.A.1.5
	For LRFD Option:				
	If DF application option is equal to 2 for moment :				
	The moment distribution factor of the strength/service limit state in the negative moment area (fix format using as C1).				
	The moment distribution factor of the fatigue limit state in the positive moment area (fix format using as C2).				
	The moment distribution factor of the fatigue limit state in the negative moment area (fix format using as C3).				
	If the DF application option is equal to 3 for shear :				

Table 4.16 : Impact and Distribution Factors Input Description (continued)

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
08012	Span Number: This indicates the span for which impact	NONE	INT.	OPT.	
(cont.)	factor and/or distribution factor information is given.				
	<i>Impact Factor:</i> This input will override the impact factor which normally would be computed automatically by the program for the indicated span. The impact value input will be taken as a fixed value independent of loaded Lengths as specified by AASHTO.	NONE	REAL	ОРТ.	
	NOTE: Alternatively, the standard AASHTO equation for impact may be modified or another equation defined through the use of the Calculation Factor Options as described below.				T.A.1.5
	<i>Calculation of Factor, Equation Number:</i> This refers to a specific equation available for the computation of the live load impact factor. This equation can take many forms and is a function of the loaded length. The various equations available within the system are defined in Table A.1.5 - FORMULATION OF THE IMPACT FACTOR.	NONE	INT.	OPT.	T.A1.5
	<i>Constants C1, C2, C3:</i> Constants used to define fully the Special impact factor equation. (See TABLE A.1.5 for a complete description.)	NONE	REAL	OPT.	T.A.1.5
	For LRFD Option:				
	If DF application option is equal to 2 for moment :				
	The moment distribution factor of the strength/service limit state in the negative moment area (fix format using as C1).				
	The moment distribution factor of the fatigue limit state in the positive moment area (fix format using as C2).				
	The moment distribution factor of the fatigue limit state in the negative moment area (fix format using as C3).				
	If the DF application option is equal to 3 for shear :				

Table 4.16 : Impact and Distribution Factors Input Description (continued)

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
08012	For WSD/LFD Option:				
(cont.)	Distribution Factor: This value will override the distribution	NONE	REAL	OPT.	
	factor computed automatically by the program for the given				
	span. This special distribution factor may be applied to a				
	specific live load truck type for a special function only				
	(such as deflections or moments) as described below.				
	For LRFD Option:				
	If DF application option is equal to 2 for moment :				
	This value represents the moment distribution factor of the				
	strength/service limit in the positive moment area.				
	If DF application option is equal to 3 for shear :				
	This value represents the shear distribution factor of the				
	strength/service limit state in the positive moment area.				
	If DF application option is equal to 4 for deflection:				
	Usually average deflection is used for steel bridges.				
	If option 4 is used, average deflection is overridden.				
	Distribution Factor, Application Option: This data is used	NONE	INT.	OPT.	T.A.1.6
	to apply the distribution factor for the indicated span to a				
	particular live load type for a specific function				
	(for example, it may be desired to apply the special				
	distribution factor to an HS-20 truck for computing				
	deflection only). Input the integer 1, 2, 3, or 4 under the				
	live load truck type. A zero (0) or blank indicates that the				
	Special distribution factor is not applied to the indicated				
	loading type. These application options are described in				
	detail in TABLE A.1.6 - DEFINITIONS OF DISTRIBUTION				
	FACTOR OPTIONS.				
1		1	1		1

Table 4.16 : Impact and Distribution Factors Input Description (continued)

4.2.4C Gamma and Beta (WSD or LFD) (Data Type 09012)

Gamma and Beta (LFD)							
Data Type: 09012							
Dead load and Superi	mposed Dead Load						
Gamma							
Live Load and Impact							
Beta							
Beta1							
GMA							
Note: Beta1 is designe for non-AASHTO trucks only. If Beta1 is also used for AASHTO trucks, enter 10 for GMA.							

Table 4.17 : Load Factors; Gamma and Beta Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
09012	For WSD/LFD Option:				
	<i>Load Factor Gamma:</i> Factor for Dead Load. Default = 1.3 .	NONE	REAL	OPT.	
	<i>Load Factor Beta:</i> Factor for Live Load. Default = 5/3.	NONE	REAL	OPT.	
	Load Factor Beta 1: Factor for Overload Live Load.	NONE	REAL	OPT.	
	Default = 5/3.				
	Penn DOT Load Factor Gamma: Gamma is a factor for	NONE	REAL	OPT.	
	Penn DOT formula. If 0 or blank, Penn DOT table will				
	not show up.				
	GMA = 1.3 for staggered cross frames				
	= 1.0 for non-staggered				
	Note: Beta1 is designed for Non-AASHTO trucks only. If Beta1 is also used for AASHTO trucks input GMA = 10				

4.2.4D Load and Resistance Factors (LRFD) (Data Type 09012)



Table 4.18 : Load Factors; LRFD Option

REF.
•
T T T

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
09012 (cont.)	<i>Load Factor for DW Minimum:</i> Minimum load factor for wearing surfaces and utilities.	NONE	REAL	OPT.	
	Default = 0.65				
	<i>Load Factor for Strength-I Live Load:</i> Live load factor for Strength-I load combination relating to the normal vehicles.	NONE	REAL	OPT.	
	Default = 1.75				
	<i>Load Factor for Strength-II Live Load:</i> Live load factor for Strength-II load combination relating to the special design vehicles and/or permit vehicles. Default = 1.35	NONE	REAL	OPT.	
	<i>Load Factor for Service-I Live Load:</i> Live load factor for Service-I load combination relating to the normal operational use of the bridge	NONE	REAL	OPT.	
	Default = 1.00	NONE	DEAL	OPT	
	Service-II load combination relating to yielding and slip control.	NOME	KEAL	011.	
	Default = 1.30				
	<i>Load Factor for Fatigue Live Load:</i> Live load factor for Fatigue Load combination under a single design truck. Default = 0.75	NONE	REAL	OPT.	
	<i>Load Modifier DRI Factor 1 for Strength Limit State:</i> A combined factor relating to ductility, redundancy, and operational importance for strength limit state. Default = 1.00	NONE	REAL	OPT.	
	<i>Load Modifier DRI Factor 2 for all other Limit States:</i> A combined factor relating to ductility, redundancy, and operational importance for all other limit states. Default = 1.00	NONE	REAL	OPT.	

Table 4.18 : Load Factors; LRFD Option

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
09012	Resistance Factor: $\Phi_R = \Phi_c \Phi_s \Phi$ where Φ_c = condition	NONE	REAL	OPT.	
(cont.)	factor, Φ_s = system factor and Φ = LRFD resistance factor. Default = 1.00				

Table 4.18 : Load Factors; LRFD Option

4.2.5 Live Load

Live Load group contains AASHTO Live Loading - Load Type A (Data Type 06012),State Vehicle Loading - Load Types D and M (Data Type 06022),General Vehicle Loading - Load Type G (Data Type 06032) and Special Vehicle Loading - Load Type C (Data Type 07012)

4.2.5A AASHTO Live Load (Data Type 06012)



If both fields are blank, no AASHTO loading is applied. Other live loading, such as sidewalk or non-AASHTO loading will still be used.

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
06012	AASHTO Live Loading - Loading Type A				
	H, HS and HL Loading Designation: AASHTO loading	NONE	ALPHA	OPT.	REF.1
	designation from H-15, H-20, HS-15, HS-20,				T.A.1.4
	and up to HS-99 (H, HS, HL must be upper case letters)				
	NOTE : For SI units, M or MS is used in stead of H or HS. For				
	example, MS 18 is equivalent to HS 20. For LRFD design				
	option, HL 93 is the design truck. Blank field is allowed for				
	no AASHTO loading considered.				
	Tandem Loading : $0 = No$ (Default)	NONE	INT.	OPT.	REF.1
	1 = Yes				
	2 = Yes; weight is proportional to HS				
	loading over HS20				
	Type of Road Case 1, 2, 3 (WSD/LFD)	NONE	INT.	OPT.	REF.1
	1 = Case I (Default), 2 = Case II, 3 = Case III				
	As defined by AASHTO (See the AASHTO				
	Specifications "TABLE 10.3.2A Stress Cycles").				
	<i>Case 1, 2, 3, 4 (LRFD)</i> Table (C3.6.1.4.2-1)				
	1 = Rural Interstate, 2 = Urban Interstate				
	3 = Other Rural, $4 = $ Other Urban				
	Sidewalk Loading per beam: Sidewalk live load intensity.	kips/ft	REAL	OPT.	REF.1
	(The true loading considered by the program is the Input Sidewalk Loading x Distribution Factor)	(kN/m)			
	(K/Ft or KN/m if < 10) (% of AASHTO sidewalk loading if >= 10)				
	Average Daily Truck Traffic (for LRFD Fatigue)	NONE	INT.	OPT.	
	ADTT for the LRFD fatigue calculation. Default is 20,000vehicles per lane per day (ADT) times the fraction of truck traffic based on class of highway (road type) defined in LRFD Table C3.6.1.4.2-1.				
	This entry is the ADTT, not ADTTSL. ADTTSL is equal to ADTT * pp where $pp = 1$ if one lane only, = 0.85 if two lanes, = 0.8 if more than two can fit within the width between curbs. Please note that ADTTSL is used in fatigue and ADTT itself is used in LRFD rating.				
	HL-93 Design Truck Multiplier (for LRFD only) (default = 1.0)	NONE	REAL	OPT.	

Table 4.19 : AASHTO Live Load Input Description

4.2.5B State Vehicle Loading (Data Type 06022)

State Vehicle Loading - Load Types D and M Data Type: 06022 Dump Trucks (D) Designation Maximum Allowable Trucks (M) Designation									
2D • MST76 •									
Axle No	Weight (Kips)	Space (Foot)	I	Axle No	Weight (Kips)	Space (Foot)			
1	8.0	12.0	Ľ	1	9.28	10.0			
2	32.0	0.0	1	2	20.0	4.0			
				3	20.0	22.0			
				4	12.0	4.0			
				5	12.0	0.0			

 Table 4.20 : State Vehicle Loading Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
06022	State Loading - Loading Type D & M				
	<i>D Loading Designation:</i> Dump truck loading designation is either 2D or 3D or any predefined vehicle with no more than 3 axles (Loading Designation is limited to 2 characters).	NONE	ALPHA	OPT.	REF.1 T.A1.4
	<i>M Loading Designation:</i> Maximum allowable truck loading designation can be 3, 3S2, 3-3, or MST76, or any predefined vehicle with no more than 6 axles (Loading Designation is limited to 6 characters).	NONE	ALPHA	OPT.	REF.1 T.A.1.4

4.2.5C General Vehicles (Data Type 06032)

General Vehicle Loading - Load Type G								
Data Type: 06032								
Loading Designation 3-3 Included in Maximum Design Load Case								
Axle No.	Weight (Kips)	Space (Foot)						
1	12.0	15.0						
2	12.0	4.0						
3	12.0	15.0						
4	16.0	16.0						
5	14.0	4.0						
6	14.0	0.0						

 Table 4.21: General Vehicles Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
06032	General Vehicles - Loading Type G				
	<i>G Loading Designation:</i> Input any 4 characters for general vehicles or any predefined vehicle with no more than 20 axles.				
	Design Load: Blank = No 1 = Yes. This loading will be considered in the Maximum Design Load Case.	NONE	INT.	ОРТ.	
	(For Steel only)				
	If the Design Load is 1, the maximum load effect is the maximum of the AASHTO vehicle and the Load Type G. If the Design Load is Blank, the maximum load effect is considering AASHTO vehicle and the Load Type G side by side.				

Note for LRFD Results: (For Steel only)

1. Values for Service 1, Strength I, Strength IV, and Fatigue limit states are based on the AASHTO vehicles only.

- 2. Strength II limit state is due to side-by-side AASHTO and General vehicles.
- 3. Service II limit state is based on the maximum of the AASHTO or the General vehicles.

4.2.5D Special Vehicle Loading – Load Type C (Data Type 07012)

Special Vehicle Loading - Load Type C										
Data Type: 07012										
Loading De	signation	MST76 -								
Travel Direction			Both Ways 🛛 👻							
Description										
Axle No.	Weight (Kips	;)	Space (Foot)							
1	9.28		10.0							
2	20.0		4.0							
3	20.0		22.0							
4	12.0		4.0							
5	12.0		0.0							

 Table 4.22 : Special Vehicle ID and Description Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
07012	Special Vehicle Identification and Description - Load Type C				
	Loading Designation: Designation which identifies vehicle	NONE	ALPHA	OPT.	T.A.1.4
	(Arbitrary as defined by the user).				
	<i>Direction of Travel:</i> Input option to define direction of travel.	NONE	INT.	OPT.	
	This option is usually used to evaluate the passage of				
	special permit vehicles.				
	0 = Both Ways (Default)				
	1 = Left to Right				
	2 = Right to Left				
	<i>Description:</i> Description of vehicle.	NONE	ALPHA	OPT.	

4.2.6 Dead Load

Dead Load group contains Slab Loads Per Beam (Data Type 10012), Arbitrary Uniform and Concentrated Loads Per Beam (Data Type 11012) and Auto Generation of Dead and Superimposed Dead Loads (Data Type 02012). For steel bridges this group also contains Lateral Bending Stress Loads (Data Type 11022).

Slab Loads Per Beam											
Data Type: 10012											
	Load	ID		Sla	ab Data			Load Dat	a		
Load No	Pouring No	Description	Final Depth (Inch)	Pouring Day	Modulus Ratio N1	Modulus Ratio N2	Intensity (Kips/Ft)	Distance To (Foot)			
1											
2											
3											
4											
5											
6											
7											
8											
9											
10											
11											
12											

4.2.6A Slab Loads (per beam) (Data Type 10012)

Table 4.23 : Slab Loads Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
10012	 Slab Loads: A constant uniformly distributed load acting over the entire bridge and must be defined per span if more than one span exists. <i>Load Identification Number:</i> The sequence number of the load. The loads for staging as well as non-staged slab loads must be numbered sequentially beginning with one (1). 	NONE	INT.	REQ.	
	<i>Pouring Number :</i> Starting from one (1). <i>Load Identification Description:</i> Any identification for the particular LOAD and SEQUENCE identified.	NONE	ALPHA	OPT.	

(continued)
DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
10012	Slab Data, Final Design Depth: Depth of the slab at the	in (mm)	REAL	REQ.	
(cont.)	point of maximum wear. This is used to calculate should				
	strength and therefore be the minimum value design				
	depth. (excluding integral wearing surface depth)				
	<i>Pouring Day:</i> Pouring day counted from the first pour. Therefore, the first pour is always zero (0) day.				
	<i>Slab Data, Final Modular Ratios N1 and N2:</i> These values are the modular ratios (Es/Ec) used in computing the composite section properties under superimposed dead and live load conditions. The default values for N1 and N2 are 24 and 8 respectively.	NONE	REAL	REQ.	
	<i>Load Data, Load Intensity:</i> Intensity of the uniform slab load identified by load number and sequence number. (including integral wearing surface intensity)	kips/ft (kN/m)	REAL	REQ.	
	<i>Load Position, Distance From/Distance To:</i> Location of the left and right ends of the uniform slab load measured from the extreme left support of the bridge.	ft (m)	REAL	REQ.	

Table 4.23 : Slab Loads Input Description (continued)

4.2.6B Arbitrary Uniform and Concentrated Loads (per beam) (Data Type 11012)

Arbitrary Uniform and Concentrated Loads Per Beam								
Data T	ype: 110	12	Excel W	/ork Sheet	:			
	Load	ID	Un	iform Loa	ad	Concentrated Load		
Load No	Load Type	Description	Intensity (Kips/Ft)	From (Foot)	To (Foot)	Intensity (Kips)	Distance (Foot)	
1	0 - SDL							
2	0 - SDL							
3	0 - SDL							
4	0 - SDL							
5	0 - SDL							
6	0 - SDL							
7	0 - SDL							
8	0 - SDL							
9	0 - SDL							
10	0 - SDL							
11	0 - SDL							
12	0 - SDL							

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
11012	Load Identification, Load Number: Integer beginning with	NONE	INT.	REQ.	
	one (1) and proceeding sequentially to the last (nth) load.				
	This data is used to define the sequence of the application				
	of the uniform and concentrated loads.				
	<i>Load Type:</i> The load types are defined as follows:	NONE	INT.	OPT.	
	0 = Loads for Non-Composite Construction or Superimposed				
	Loads for Composite Construction (DW for LRFD)				
	(Default for Non-Comp. Construction)				
	1 = Superimposed Loads (DC2 for LRFD)				
	(Default for Composite Construction)				
	2 = Non-Composite Loads (DC1 for LRFD)				
	For WSD/LFD and non-composite construction, the load type				
	should be either blank or 0; blank, 0, or 1 load types are all				
	superimposed loads. For LRFD, please follow the above defined				
	load type.				
	Load Identification, Description: ALPHANUMERIC	NONE	ALPHA	OPT.	
	description identifying the LOAD NUMBER.				
	Uniform Load Data, Intensity: Intensity of the uniform	kips/ft	REAL	OPT.	
	load identified by LOAD NUMBER and SEQUENCE	(kN/m)			
	NUMBER.				
	Uniform Load Position, Distance From/Distance To:	ft (m)	REAL	OPT.	
	Location of the left and right ends of the uniform load				
	measured from the extreme left support of the bridge,				
	respectively. Leave blank if identifying a uniform load				
	applied throughout the entire bridge.				
	Concentrated Load Data, Intensity: Intensity of the	kips	REAL	OPT.	
	concentrated load identified by LOAD NUMBER and	(kN)			
	SEQUENCE NUMBER. Leave blank if identifying a uniform				
	load.				
	Concentrated Load Data/Distance To: Location of the	ft (m)	REAL	OPT.	
	concentrated load as measured from the extreme left				
	support of the bridge.				

Table 4.24 : Arbitrary Uniform and Concentrated Loads Input Description

4.2.6C Lateral Bending Stress Load (per beam) (Data Type 11022)

Lateral Bending Stress Loads							
Data Type: 11022							
	Load	I ID	SI	tress	Ra	nge	
Load No	Load Type	Description	Top Lateral Stress (Ksi)	Bottom Lateral Stress (Ksi)	From (Foot)	To (Foot)	
1							
2							
3							
4							
5							
6							
7							
8							
9							
10							
11							
12							

 Table 4.25 : Lateral Bending Stress Load Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
11022	Load Identification, Load Number: Integer beginning with	NONE	INT.	REQ.	
	one (1) and proceeding sequentially to the last (nth) load.				
	This data is used to define the sequence of the application				
	of the uniform and concentrated loads.				
	<i>Load Type:</i> The load types are defined as follows:	NONE	INT.	OPT.	
	1 - Construction limit state				
	2 - Strength limit state				
	3 - Both				
	Load Identification, Description: ALPHANUMERIC	NONE	ALPHA	OPT.	
	description identifying the LOAD NUMBER.				
	Top Lateral Stress/ Bottom Lateral Stress:	Ksi	REAL	OPT.	
	Input (amplified) positive factored values and the program will	(Mpa)			
	maximize the total stresses in Tables 1.2.22.10 and 1.2.22.14.				
	Distance From/Distance To:	Ft (m)	REAL	OPT.	
	Location of the left and right ends of the lateral stress measured				
	from the extreme left support of the bridge, respectively.				



For the Pop up windows

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT	REF
11022	Top FL Width: the width of top flange	in	REAL	REQ	
(Pop-up Windows)	Top FL Thick: the thickness of top flange	in	REAL	REQ	
	<i>Top FL Section Mod:</i> the section modulus of top flange calculated by the program automatically.	in ³	REAL		
	Bottom FL Width: the width of bottom flange	in	REAL	REQ	
	Bottom FL Thick: the thickness of bottom flange	in	REAL	REQ	
	<i>Bottom FL Section Mod:</i> the section modulus of bottom flange calculated by the program automatically.	in ³	REAL		
	<i>Web Height:</i> The clear distance between top flange and	in	REAL	REQ	
	Bracket Width: the distance from the center of the web to the end of the bracket	in	REAL	REQ	
	<i>Unbraced Length:</i> lateral unbraced length between load range from and to	in	REAL	REQ	
	<i>Load Range From/Load Range To:</i> Location of the left and right ends of the lateral stress measured from the extreme left support of the bridge, respectively. For concentrate load, input the same value for "Load Range From" and "Load Range To" cells.	in	REAL	REQ	

<i>Load Type:</i> 2 – Finishing Machine 3 – Overhang Construction Loads 4 – Overhang Weight	NONE	INT.	REQ
Overhang Weight: input required only for load type 4	kips/ft	REAL	ОРТ
<i>Construction Loads:</i> input required only for load type 3	kips/ft	REAL	OPT
Finishing Machine: input required only for load type 2	kips	REAL	OPT
<i>Moment:</i> calculated by the program automatically.	kip-ft	REAL	
<i>Top Lateral Stress/Bottom Lateral Stress:</i> calculated by the program automatically.	ksi	REAL	
<i>Save Stresses:</i> click on this button will save the top and bottom lateral stresses to the corresponding input fields.			
<i>Close:</i> click on this button will close the pop up window.			

4.2.6D Auto Generation of Dead and Superimposed Dead Loads (Data Type 02012)

Auto Generation of Dead and Superimposed Dead Loads								
Data Type: 02012								
Automatic Generated Dead Load								
Dead Load 1								
Slab Thickness		(Inch)						
Integral Wearing Surface		(Inch)						
Unit Weight of Concrete		(Lb/Ft^3)						
Stay-In-Place Form		(Lb/Ft^2)						
Dead Load 2								
Railing and Utility Weight		(Lb/Ft)						
Wearing Surface		(Lb/Ft^2)						
Area of Additional Concrete		(Ft^2)						
Concrete Modulus Ratio								
N1		(For DL2, default=3n)						
N2		(For LL, default=n)						

Note: Dead Load Auto Generation is used to simplify for the dead load inputs for regular bridges. Once DL Auto Generation is specified no slab loads in Data Type 10012 and dead and superimposed dead loads in Data Type 11012 need to be defined for steel bridges. (It is allowed for PC bridges.)

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
02012	Auto Generation of DL1 and DL2				
	Option for the auto generation:	NONE	INT.	OPT.	
	0 or blank (default): DL1 and DL2 will not be generated automatically and should be input manually in Data Types 10012 and 11012. 1: Auto Generation of DL1 and DL2 is based on the input on this screen.				
	<u>Dead Load 1 (per bridge)</u>				
	<i>Thickness of Slab:</i> Constant slab thickness (excluding integral wearing surface) throughout. If there is any change in the thickness, Data Type 10012 should be used. This is also used to calculate strength.	in (mm)	REAL	OPT.	
	<i>Thickness of the Integral Wearing Surface:</i> Integral wearing surface will be counted for DL1 but not the section property calculation. This is used for load intensity only.	in (mm)	REAL	OPT.	
	<i>Unit Weight of Concrete:</i> Used to calculate DL1 based on thicknesses of slab and integral wearing surface and haunch, and DL2 for any additional concrete.	lb/ft ³ (kg/m ³)	REAL	OPT.	
	<i>Stay-in-place form:</i> for DL1, weight intensity of stay-in-place form to be distributed to all girders/beams	lb/ft ² (Kg/m ²)	REAL	OPT.	
	<u>Dead Load 2 (per bridge)</u>				
	<i>Railing/Utility Weight:</i> for DL2, it is total weight of both railing and utility, will be shared equally by all girders/beams.	lb/ft (N/m)	REAL	ОРТ.	
	<i>Wearing surface:</i> for DL2, the weight intensity will be shared equally by all girders/beams.	lb/ft ² (kg/m ²)	REAL	OPT.	
	<i>Area of Additional Concrete:</i> for DL2, will be shared equally by all girders/beams.	Ft ² (m ²)	REAL	ОРТ.	
	<i>Concrete Modulus Ratio:</i> Values are the modular ratios (Es/Ec) used in computing the composite section properties under superimposed dead and live load conditions.	NONE	REAL	OPT.	
	N1 (for DL2, default = $3N = 24$) N2 (for LL, default = $N = 8$)				

Table 4.26: Auto Generation of Dead Loads

4.2.7 Design (Used for Flow Control = 4 or 6 only)

Design group contains Splice Design (Data Type 12012), Design Method and Stiffener Option (Data Type 12042), Designate Plate Size (Data Type 12052), Design Plate Size Range (Data Type 12062), Material and Fabrication Cost (Data Type 12072) and Field Splice Location and Material ID (Data Type 12082). All data types in this group are for steel bridges only.

4.2.7A Splice Design Data (Data Type 12012)

Splice Design					
Data Type: 12012					
Columns of Web Bolts		(Default starting from 2 per side)			
Bolt Diameter		(Default=0.875")			
Bolt Allowable Stress		(Default=36Ksi)			
Ratio Option	0 - Shared by w	veb (default) 🛛 👻			
Design Force Option	0 - By AASHTO	(default) 🔹			
Filler Plate Area		Inch^2			

Table 4.27 : Splice Design Data Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
12012	Number of Columns of Web Bolts : Default will start	NONE	INT.	OPT.	
	from 2. No more than 5 columns per side are allowed.				
	Bolt Diameter : Default is 0.875 in. (22 mm for SI units)	In (mm)	REAL	OPT.	
	Bolt Allowable Stress : Default is 15 Ksi (103 MPa) for WSD,	Ksi	REAL	OPT.	
	35 Ksi (241 MPa) for LFD/LRFD.	(MPa)			
	NOTE : Please refer to AASHTO Specification				
	Table 10.32.3C for WSD (p. 253),				
	Table 10.56A for LFD (p. 293).				

	<i>Option</i> : 0 = Shared by web (Default)				
	1 = Discount web				
12012	NOTE : If default is used, both flange and web will share the moment. Proportion of the moment taken by the web is based on the ratio of the moments of inertia of the web to the cross-section.				
	Design Force Option: 0 = By AASHTO (Default)				
	1 = By actual force				
	NOTE : If default is used. AASHTO requirements based on WSD/LFD/LRFD are adopted. Otherwise, the actual forces will be used for design.				
	Filler Plate Area: Total filler plate area of top and bottom flanges.	Inch ²	REAL	OPT.	

4.2.7B Design Method and Stiffener Option (Data Type 12042)



DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
12042	Section ID	NONE	INT.	OPT.	
	0 = Plate girder				
	1 = Wide flange (compact)				
	2 = Wide flange (braced non-compact)				
	Design Method : For optimization;	NONE	INT.	OPT.	
	0 = Minimum weight				
	1 = Minimum cost				
	Member Type:	NONE	INT.	OPT.	
	0 = Prismatic (Default)				
	1 = Linear				
	2 = Parabolic - concave down				
	3 = Parabolic - concave up				
	Transverse Stiffener Option:		INT.	OPT.	
	0 = Unstiffened				
	1 = Stiffened				
	Longitudinal Stiffener Option:	NONE	INT.	OPT.	
	0 = No longitudinal stiffener				
	1 = Longitudinal stiffener is required				

Table 4.28: Design Method and Stiffener Option Input Description

4.2.7C Design Plate Size (Data Type 12052)



 Table 4.29 : Designated Plate Size Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
12052	The following sizes are allowed to be fixed in design:				
	Web Plate Depth:	in (mm)	REAL	OPT.	
	Web Plate Thickness:	in (mm)	REAL	OPT.	
	Top Flange Width:	in (mm)	REAL	OPT.	
	Top Flange Thickness:	in (mm)	REAL	OPT.	
	Bottom Flange Width:	in (mm)	REAL	OPT.	
	Bottom Flange Thickness:	in (mm)	REAL	OPT.	

4.2.7D Design Plate Size Range (Data Type 12062)



Table 4.30 :	Design	Plate Size	e Range	Input 1	Description
1 4010 4.00	Design	I face of L	c mange	mpui	Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
12062	The following plate sizes are allowed to be within the				
	ranges of the max. and min.				
	<i>Web Plate Depth Max:</i> (Used as the depth at pier for nonprismatic design)	in (mm)	REAL	OPT.	
	Web Plate Depth Min:	in (mm)	REAL	OPT.	
	(Used as the depth at mid-span for nonprismatic design)				
	Web Plate Thickness Max:	in (mm)	REAL	OPT.	
	Web Plate Thickness Min:	in (mm)	REAL	OPT.	
	Top Flange Width Max:	in (mm)	REAL	OPT.	
	Top Flange Width Min:	in (mm)	REAL	OPT.	
	Top Flange Thickness Max:	in (mm)	REAL	OPT.	
	Top Flange Thickness Min:	in (mm)	REAL	OPT.	
	Bottom Flange Width Max:	in (mm)	REAL	OPT.	
	Bottom Flange Width Min:	in (mm)	REAL	OPT.	

4.2.7E Material and Fabrication Cost (Data Type 12072)

	Material and Fabrication Cost									
Data Type: 12072										
	Material	5		Material Cost	:	Fabricatio	n Cost			
ID	ASTM Designation (A-709)	Yield Strength (Ksi)	Base Price (\$/Lb)	Extra Size/Width Adjustment (%)	Unit Price (\$/Lb)	Adjustment (%)	Unit Price (\$/Lb)			
_										
_										
_										
_										
_										

Table 4.31 : Material and Fabrication Cost Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
12072	Material Data, ID: Maximum number of materials allowed	NONE	INT.	OPT.	
	is three.				
	Material Data ASTM Designation/Yield Strength/Weathering:	NONE	ALPHA	OPT.	
	Designation always will be A-709 with yield strength 36,				
	50, 70, 100, no weathering or weathering.				
	(Default is 36 ksi yield strength for design)				
	<i>Material Cost, Base Price:</i> Override base price used in the	\$/lb	REAL	OPT.	
	cost function.	\$/kg			
			DEAL	ODT	
	Material Cost, Extras Adjustment: Override extras	% * 7	REAL	OPT.	
	adjustment used in the cost function.	\$/kg			
	Material Cost: Override base price and extras.	\$/lb	REAL	OPT.	
	Fabrication Cost Adjustment - Override febrication cost	0/	DEAT	OPT	
	used in the cost function.	/0	KLAL	011.	
	Fabrication Cost, Unit Price : Override fabrication	\$/lb	REAL	OPT.	
	adjustment used in the cost function.	\$/kg			

4.2.7F Field Splice Location and Material ID (Data Type 12082)

Field Splice Location and Material ID											
Data Typ	Data Type: 12082										
Field Section No	Ending at Span No	Distance From Left Support of Current Span (Foot)	Material ID								

Table 4.32 : Field Splice Location and Material ID Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
12082	Field Section Number : Start from 1, up to 20.	NONE	INT.	OPT.	
	Distance from Left Support of the Current Span : Distance to the end of current section. NOTE : The last distance should match the end of the bridge.	Ft (m)	REAL	OPT.	
	<i>Corresponding Material ID</i> : Material ID of the current field section. These material ID numbers correspond to those input on DATA TYPE 12072.	NONE	INT.	OPT.	DATA TYPE 12072

4.2.8 Property

4.2.8.1 Steel and Reinforced Concrete

Property group for Steel and Reinforced Concrete bridges contains Reinforced Concrete Strength (Data Type 12032). It is the same for both Steel and Reinforced Concrete bridges.

4.2.8.1A Reinforced Concrete Strength Data (Data Type 12032)

Reinforced Concrete Strength						
Data Type: 12032						
Steel	Only					
Shear Connector						
Number Per Transverse Section						
Stud Diameter		(Inch)				
Connector in Neg. Moment Region	0 - No Shear	Connector 👻				
Qn* (Su) Value		(Kips)				
Zr* Value						
AASHTO Truck		(Kips)				
AASHTO Lane		(Kips)				
Note: If diameter is input, Qr specified internally, unless of	n (formerly Su verridden here) will be e.				
Slab Reinfo	orcement					
Rebar Yield Strength		(Ksi)				
Bar Area Per Foot of Slab		(Inch^2)				
Dist. from Top of Slab		(Inch)				
Conce	rete					
Compressive Strength at 28 Days		(Ksi)				
Allowable Compressive Stress		(Ksi)				



	Table 4.33 :	Reinforced	Concrete	Strength	Data	Input	Description
--	---------------------	------------	----------	----------	------	-------	-------------

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
12032	Data, Number Per Transverse Section: Number of shear	NONE	INT.	OPT.	
	studs per transverse section. If Z section or channel				
	shapes used, input one (1).				
	<i>Diameter of Studs*:</i> Su value and Zr values for truck and land will be calculated based on the input Road Type (data type 06012) and concrete strength. Default = 7/8 in. (22mm).	In (mm)	REAL	ОРТ	
	* With provided stud diameter, program will generate proper				
	Su and Zr values based on AASHTO specs.				
	Shear Connector Data, Connectors in Negative Moment	NONE	INT.	OPT.	
	Region: Use the following for placement of shear				
	connectors in negative moment region:				
	0 = No shear connector placed in negative moment				
	regions (Default)				
	1 = Shear connectors placed in negative moment				
	regions Ultimate Strength of the Shear Connector: Su value defined in Section 10.38.5 of AASHTO for the shear connector ultimate strength requirement.				
	Allowable Range of Horizontal Shear: Zr value for the truck or lane as defined in Section 10.38.5 of AASHTO for the shear connector fatigue requirements. For Road Type 1 (WSD or LFD), enter Zr value for over two million cycles.				
	Default =Zr for any Road Type in Data Type 06012 with				
	7/8 in.(22mm)-Diameter shear studs.				
	INPUT DESCRIPTIONS ABOVE ARE FOR STEEL ONLY				(cont.)

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
12032	Slab Reinforcement Data, Rebar Yield Strength Fy: Yield	Ksi	REAL	OPT.	
(cont.)	strength of the slab reinforcing bars. This is used in	(MPa)			
	computing section properties in negative moment region.				
	Slab Reinforcement Data, Bar Area Per Foot (or Meter) of Slab: Area of reinforcing bar per transverse foot	in²/ft (mm²/m)	REAL	OPT.	
	(or meter) of slab.				
	<i>Slab Reinforcement Data, Distance From Top of Concrete:</i> Distance from the top of the concrete slab to the center of	in (mm)	REAL	OPT.	
	<i>Concrete Data, Compressive Strength f'c :</i> The 28-day compressive strength of the concrete slab. Default = 4000 psi (27.58 MPa).	Ksi (MPa)	REAL	OPT.	
	<i>Concrete Data, Compressive Allowable :</i> Allowable compressive strength of the concrete slab.	Ksi (MPa)	REAL	OPT.	

Table 4.33: Reinforced Concrete Strength Data Input Description (cont'd)

4.2.8.2 Prestressed Concrete

Property group for Prestressed Concrete bridges contains Prestressing Steel Properties (Data Type 04032),Post-Tensioning Steel Properties (Data Type 04042),Prestressing Concrete Slab (Data Type 12034) and Precast Beam (Data Type 12036).

4.2.8.2A Prestressing Steel Properties (Data Type 04032)



 Table 4.34 : Prestressing Steel Properties Data Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
04032	Type of steel	NONE	INT.	REQ	
	1 - stress relieve (default), 2 - low relaxation				
	Nominal Diameter	in. (mm)	REAL	REQ	
	Steel Area	in² (mm²)	REAL	REQ	
	<u>Ultimate Strength</u>	ksi (MPa)	REAL	REQ	
	Initial Stress	ksi (MPa)	REAL	REQ	
	Modulus of Elasticity	ksi (MPa)	REAL	REQ	
	Overriding Initial Loss, which overrides the internally	ksi (MPa)	REAL	REQ	
	calculated total initial stress loss by AASHTO Code.				
	Overriding Ultimate Loss, which overrides the internally	ksi (MPa)	REAL	REQ	
	calculated total ultimate stress loss by AASHTO Code.				
	Transfer Length at Beam End, measured distance from	(FT or m)	REAL	REQ	
	the beam end to the location with full prestressing force				
	(default = 3 ft)				

4.2.8.2B Post-tension Steel Material Properties (Data Type 04042)



 Table 4.35 : Post-tension Steel Material Properties Data Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
04042	Stage 1 area ratio: Post-tensing steel ratio of 1/2 stage area	NONE	INT.	REQ	
	to the total area, i.e., if 5 out of 10 post-tensioning steel				
	tendons pull during ½ stage, the ratio is 0.5.				
	Final Stress: Final stress due to jacking force before loss.	ksi (MPa)	REAL	REQ	
	Wobble coefficient: Wobble friction coefficient.	1/ft (1/m)	REAL	REQ	
	Curvature coefficient: Curvature friction coefficient.	1/rad	REAL	REQ	
	Stage 1 loss length: The length of tendon affected by	ft (m)	REAL	REQ	
	anchorage set at the end of stage 1.				
	Stage 1 loss stress: Stress loss due to anchorage set at the	ksi (MPa)	REAL	REQ	
	end of stage 1.				
	Stage 2 loss length: The length of tendon affected by	ft (m)	REAL	REQ	
	anchorage set at the end of stage 2.				
	Stage 2 loss stress: Stress loss due to anchorage set at the	ksi (MPa)	REAL	REQ	
	end of stage 2.				
	Area of Post-Tensing Steel	$in^2 (mm^2)$	REAL	REQ	

4.2.8.2C Prestress Concrete Slab (Data Type 12034)

Prestress Concrete Slab									
Data Type: 12034									
Slab Concrete Data									
Compressive Strength At 28 Days		(Ksi, default fc'=4 Ksi)							
Unit Weight		(Lb/Ft^3, default 150 lb/Ft^3)							
Slab Reinforce At Negative Moment Area									
Rebar Yield Strength		(Ksi, default 60 Ksi)							
Rebar Area Per Linear Slab		(Inch^2/Foot)							
Distance from Top of Slab		(Inch)							
Optional - Slab At Ultima	ate Streng	th							
Allowable Compressive Stress		(Ksi, default = 0.4 fc')							
Allowable Tensile Stress		(Ksi, default = 3 sqrt(fc'))							
Allowable Cracking Stress		(Ksi, depend on Unit Weight)							

 Table 4.36 : Slab Data Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
12034	Slab Concrete Data				
	Compressive Strength at 28 days	ksi (MPa)	REAL	REQ	
	Unit weight: used to calculate concrete modulus of	lb/ft ³ (kg/m ³)	REAL	REQ	
	Elasticity and weight of slab.				
	Slab Reinforcement at Negative Moment Area				
	Rebar Yield Strength	ksi (MPa)	REAL	REQ	
	Bar Area/unit width of slab	in ² /ft (mm ² /m)	REAL	REQ	
	Distance from top of slab	in (mm)	REAL	REQ	
	Slab at Ultimate Strength (Optional)				
	(Default = AASHTO allowable)				
	Allowable Compressive Stress	ksi (MPa)	REAL	OPT.	
	Allowable Tensile Stress	ksi (MPa)	REAL	OPT.	
	Allowable Crack Stress	ksi (MPa)	REAL	OPT.	

4.2.8.2D Precast Beam (Data Type 12036)

Precast Beam						
Data Type: 12036						
Pre	cst Concre	te Data				
Compressive Strength At 28 Days		(Ksi, default fc'=5 Ksi)				
Compressive Strength At Release		(Ksi, default fci'=4 Ksi)				
Unit Weight		(Lb/Ft^3, default 150 lb/Ft^3)				
Relative Humidity		(%, default=70%)				
 Optional 						
Precst Pres	tressed Gir	rder At Release				
Allowable Compressive Stress		(Ksi, default = 0.6 fci')				
Allowable Tensile Stress		(Ksi, default = 3 sqrt(fc'))				
Precst Prestress	ed Girder A	t Ultimate Strength				
Allowable Compressive Stress (DL+LL)		(Ksi, default = 0.4 fc')				
Allowable Tensile Stress		(Ksi, default = 6 sqrt(fc'))				
Cre	ep and Shr	rinkage				
Kc		(Creep Correction Factor)				
Ks		(Shrinkage Correction Factor)				
t		(Time in Days)				
ti		(Days When Load is Applied)				
Web Shear Steel Bar Size		(#3-#6, default #3)				

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
12036	Precast Concrete Data				
	Compressive Strength at 28 days	ksi (MPa)	Real	REQ	
	Compressive Strength at release	ksi (MPa)	Real	REQ	
	Unit Weight	lb/ft ³ (kg/m ³)	Real	REQ	
	Relation Humidity In Percent For Concrete	%	Real	REQ	
	Precast Prestressed Girder at Release (Optional)				
	(Default = AASHTO allowable)				
	Allowable Compressive Stress	ksi (MPa)	Real	OPT.	
	Allowable Tensile Stress	ksi (MPa)	Real	OPT.	
	Precast Prestressed Girder at Ultimate Strength (Optional)				
	(Default = AASHTO allowable)				
	Allowable Compressive Stress	ksi (MPa)	Real	OPT.	
	Allowable Tensile Stress	ksi (MPa)	Real	OPT.	
	Creep and Shrinkage (Optional)				
	(Default = AASHTO allowable)				
	Kc (Creep Correction Factor)	NONE	Real	OPT.	
	Ks (Shrinkage Correction Factor)	NONE	Real	OPT.	
	t (Time in days)	Day	Real	OPT.	
	ti (Time when load is applied in days)	Day	Real	OPT.	
	Web Shear Steel Bar Size	NONE	Int	OPT.	

Table 4.37 : Precast Beam Data Input Description

4.2.9 Details

Details group contains Yield Stress and Lateral Bracing (Data Type 13012),Longitudinal Stiffener (Data Type 14012) and Transverse Stiffener (Data Type 15012). This group is for steel bridge only.

4.2.9A Girder Field Stress and Lateral Bracing (For Steel bridges only) (Data Type 13012)

Yield Stress and Lateral Bracing								
Loca	tion	Yield St	trength	Lateral				
Distance From (Foot)	Distance To (Foot)	Fy (Ksi)	Web Fy (Ksi)	Actual Spacing (Foot)				



DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
13012	Location, Distance From/To : Distance from the left bridge	Ft (m)	REAL	REQ.	
	support over which the section or lateral bracing data is				
	given (for a bridge having no change in yield strength,				
	from =0 and to=the total length of the bridge).				
	NOTE : The sum of the from/to distance given for				
	section data (required) and bracing data (optional)				
	must equal the entire bridge length. Input of				
	Yield Strength of bracing data where data does not				
	equal to the total bridge length will result in an				
	error and termination of the run (see Table 7.3).				
	Section Yield Strength, Fy : Yield strength of the material	Ksi	REAL	OPT.	
	corresponding to the from/to interval (Default = 36 ksi or	(MPa)			
	248 MPa)				
	Section Yield Strength (Web): Yield strength for steel	Ksi	REAL	OPT.	
	girder. Leave blank if homogeneous or specify if hybrid.	(MPa)			
	Lateral Bracing Data, Spacing : Lateral bracing spacing	Ft (m)	REAL	OPT.	
	within the from/to span interval. This input is used to				
	define the bracing points within the from/to span				
	interval (Default = equal spacing within span closest to 25 ft or 7.62 m).				
	(Default example: Span length=90 ft; So, no. of bracing spacing=90/25=3.6 use 4; Bracing dist. =90/4=22.5 ft)				
	Note: For Mixed or Hybrid Steel, use Data Type 05012-				
	Definition of Members.				

Table 4.38 : Yield Stress and Lateral Bracing Data Input Description

4.2.9B Longitudinal Stiffener (For Steel bridges only) (Data Type 14012)

Longitudinal Stiffener										
Data Type: 14012										
Loca	tion	Yield	То	p Stiffen	er	Botte	om Stiff	ener		
Distance From (Foot)	Distance To (Foot)	Fy (Ksi)	Location (Inch or fraction)	Width (Inch)	Thickness (Inch)	Location (Inch or fraction)	Width (Inch)	Thickness (Inch)		



DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
14012	Location, Distance From/To : Distance measured from the	Ft (m)	REAL	OPT.	
	left bridge support FROM and TO the span interval for				
	which longitudinal data is given.				
	Yield Stress, Fy : Yield stress of the stiffener material for	Ksi	REAL	OPT.	
	the given FROM/TO span interval.	(MPa)			
	Top Stiffener Data, Location : Location of the longitudinal	NONE	REAL	OPT.	
	stiffener given as a fraction or the clear web depth	or			
	measured from just below the top flange.	in (mm)			
	Example : For a web with a depth of 45 in. and				
	having a longitudinal stiffener located 9 in. from				
	the top flange, input the fraction 9/45 as the				
	decimal 0.2 or plainly input 9in.				
	Stiffener Width : Width of the top longitudinal stiffener.	in (mm)	REAL	OPT.	
	Stiffener Thickness : Thickness of the top longitudinal	in (mm)	REAL	OPT.	
	stiffener.				
	Bottom Stiffener Data, Location; Width and Thickness :	NONE	REAL	OPT.	
	Location of the bottom longitudinal stiffener given as a	or			
	fraction or the clear web depth measured from just above	in (mm)			
	the bottom flange. Input for width and thickness same as				
	above.				

Table 4.39 : Longitudinal Stiffener Data Input Description

4.2.9C Transverse Stiffener (For Steel bridges only) (Data Type 15012)

Transverse Stiffener									
Data Typ	e: 15012			Excel Work	Sheet				
Distance From (Foot)	Distance To (Foot)	B Parameter	Yield Strength (Ksi)	Stiffener Spacing (Foot)	Stiffener Spacing (Inch)	Stiffener Width (Inch)	Stiffener Thickness (Inch)		
		1.0 - Stiffener							
		1.0 - Stiffener							
		1.0 - Stiffener							
		1.0 - Stiffener							
		1.0 - Stiffener							
		1.0 - Stiffener							
		1.0 - Stiffener							
		1.0 - Stiffener							
		1.0 - Stiffener							
		1.0 - Stiffener							
		1.0 - Stiffener							

Table 4.40 : Transverse Stiffener Data Input Description

DATA TYPE	INPUT ITEM/DESCRIPTION	UNITS	MODE	REQ/ OPT.	REF.
15012	Location, Distance From/To : Distance measured from the	Ft (m)	REAL	OPT.	
	left bridge support FROM and TO the span interval for				
	which transverse stiffener data are given. Both FROM				
	and TO distances are given when specifying actual				
	stiffener spacing. An individual stiffener may be located				
	by giving the DISTANCE TO the stiffener as measured				
	from the bridge support.				
	B Parameter : Value of B required by AASHTO Spec.,	NONE	REAL	OPT.	REF.1
	Section 10.34.4.7, as follows :				
	B = 1.0 for stiffener pairs (Default)				
	B = 1.8 for single angles				
	B = 2.4 for single plates				
	Although the B parameter is referenced in the LOAD				
	FACTOR specifications, a value is needed for WORKING				
	STRESS DESIGN to compute the stiffener properties.				
	Yield Stress, Fy: Yield stress of the stiffener materials for the given FROM/TO span interval.(Default is 36 ksi or 248 Mpa)				
	Stiffener Spacing: Stiffener spacing within the FROM/TO span interval.				
	Stiffener Width: Width of the transverse stiffeners.				
	Stiffener Thickness: Thickness of the transverse stiffener.				

Use Excel Work Sheet to Enter Data

Some data input pages have Excel Work Sheet button on top. Click this button to launch Microsoft Excel with a predefined template XLS file for this data type. User can enter data into the XLS file then paste them back to Data Input Page by pressing Ctrl+V.

Copy Data From Excel: When data entering is done in Excel, select data cells as shown below and press Ctrl+C.

1	Steel E	Steel Beam Definition						Data Type	: 04012	
2	Input De	escriptio	n:							
3	Section	No.			Integer					
4	Section	ID			Alpha		W or PG			
5	Standar	Standard Sections Nominal			Integer		Nominal de	epth of the <i>i</i>	AISC section	on
6	Standard Sections Weight				Real		Nominal w	eight of the	AISC sect	ion
7	Plate Girders Web Depth and Thickness				Real		Web dept	h and thickr	ness of the	plate gire
8	Cover Plates and Plate Girder									
9	Top/Bottom Plate Width and Thickness				Real		The width and thickness of the top			p/bottom
10										
	Section Standard Sections									
11	Sec	tion	Standard Sections	Plate	Girders	Cove	er Plates	& Plate G	irder	
11	Sec No	tion ID	Standard Sections Nominal Depth X Weight	Plate Web Depth(in or mm)	Girders Web Thickness (in or mm)	Cove Top Plate Width (in or mm)	Top Plate Thick (in or mm)	<mark>& Plate G</mark> Bottom Plate Width (in or mm)	irder Bottom Plate Thick (in or mm)	
11 12 13	Sec No	tion ID	Standard Sections Nominal Depth X Weight	Plate Web Depth(in or mm)	Girders Web Thickness (in or mm)	Cove Top Plate Width (in or mm)	Top Plate Thick (in or mm)	& Plate G Bottom Plate Width (in or mm)	irder Bottom Plate Thick (in or mm)	
11 12 13 14	Sec No	tion ID	Standard Sections Nominal Depth X Weight	Plate Web Depth(in or mm)	Girders Web Thickness (in or mm)	Cove Top Plate Width (in or mm)	Top Plate Thick (in or mm)	& Plate G Bottom Plate Width (in or mm)	irder Bottom Plate Thick (in or mm)	
11 12 13 14 15	No	tion ID	Standard Sections Nominal Depth X Weight	Plate Web Depth(in or mm) 723 14	Girders Web Thickness (in or mm) 2 1	Cove Top Plate Width (in or mm) 716 18	Top Plate Thick (in or mm)	& Plate G Bottom Plate Width (in or mm) 716 18	irder Bottom Plate Thick (in or mm) 2 2	

Go back to the Data Input Page and highlight a row starting from which data will be copied by clicking any cell in that row. The following screen capture shows the second row is highlighted. (Data will be copied to row 2 and 3.)

	Steel (W/PG) Section												
Data	Type: 0	4012		Excel Work Sheet									
Se	ction	Standard	P. G.	Web	P. 6	i. Flange	and Cove	Plates					
No.	ID	Nominal Depth X Weight (Inch - Lb/Ft)	Depth (Inch)	Thick (Inch)	Top Width (Inch)	Top Thick (Inch)	Bottom Width (Inch)	Bottom Thick (Inch)					
1	PG 🔻	•											
2	PG 🔻	· · ·											
3	PG 🔻	· · · · · · · · · · · · · · · · · · ·											
4	PG 🔻	· · ·											
5	PG 🔻	· ·											
6	PG 🔻	v v											

Press Ctrl+V to paste data as shown below.

Note:Read only columns such as No. will be ignored and skipped.

Cells matching: Data will be read from the first row and first column of selected area in Excel. The first row of selected Excel area matches the selected row in the Data Page. The first column of selected Excel area matches the first column in the Data Page. If a column in the Data Page is read only, it will be skipped and the corresponding cell in Excel area will be ignored. When cells in Excel area reach end, matching will start at next row in the Data Page.

	Steel (W/PG) Section												
Data	Type: (4012		Excel V	Vork She	et							
Se	ction	Standard	P. G.	Web	P. (6. Flange	and Cove	r Plates					
No.	lo. ID Nominal Depth X Weight (Inch - Lb/Ft)			Thick (Inch)	Top Width (Inch)	Top Thick (Inch)	Bottom Width (Inch)	Bottom Thick (Inch)					
1	PG 🔻												
2	PG 🔻	· · ·	23.0	2.0	16.0	2.0	16.0	2.0					
3	PG 🔻		14.0	1.0	18.0	2.0	18.0	2.0					
4	PG 🔻	· · ·											
5	PG 🔻	· · ·											
6	PG 🔻	· · ·											
7													

For example, if the cells area is selected as below and the first row in Data Page is selected, the last two columns will be left as is after pasting.

10 11	Section		Standard Sections	Plate Girders		Cover Plates		& Plate G	irder
12	No	ID	Nominal Depth X Weight	Web Depth(in or mm)	Web Thickness (in or mm)	Top Plate Width (in or mm)	Top Plate Thick (in or mm)	Bottom Plate Width (in or mm)	Bottom Plate Thick (in or mm)
13	1			23	2	16	2	16	2
14	2			14	1	18	2	18	2
15									
16									

	Steel (W/PG) Section													
Data	Type: 0	4012		Excel V	Vork She	et								
Se	ction	Standard	P. G.	Web	P. 0	6. Flange	and Cove	r Plates						
No.	ID	Nominal Depth X Weight (Inch - Lb/Ft)	Depth (Inch)	Thick (Inch)	Top Width (Inch)	Top Thick (Inch)	Bottom Width (Inch)	Bottom Thick (Inch)						
1	PG 🔻	· · ·	23.0	2.0	16.0	2.0								
2	PG 🔻	×	14.0	1.0	18.0	2.0								
3	PG 🔻	· · ·												
4	PG 🔻	·												
5	PG 🔻	· · ·												

Copy Data From Data Input Page: Click any cell in a row to select a row in Data Page or click any cell while holding SHIFT key to select multiple rows, press Ctrl+C to copy selected data into Clipboard. Then use Paste function (Ctrl+V) to copy it to most Windows applications including Excel and Word. The following two captures shows a selection in Data Page and that in Excel after pasting.

	Steel (W/PG) Section													
Data	Type: (4012		Excel Work Sheet										
Se	ction	Standard	P. G .	Web	P. (5. Flange	and Cove	r Plates						
No.	ID	Nominal Depth X Weight (Inch - Lb/Ft)	Depth (Inch)	Thick (Inch)	Top Width (Inch)	Top Thick (Inch)	Bottom Width (Inch)	Bottom Thick (Inch)						
1	PG 🔻	· · ·	23.0	2.0	16.0	2.0								
2	PG 🔻	· · ·	14.0	1.0	18.0	2.0								
3	PG 🔻	· · · ·												
4	PG 🔻	· · ·												
5	PG 🗸	· · ·												
6	PG 🔻	· · ·												

1		03	2	16	0	
		20	۷ ک	10	Z	
2		14	1	18	2	
2		14	1	18	2	
234		14	1	18	2	
2 3 4		14	1	18	2	

4.3 Graphic Pages

Graphic pages are used to show different aspect of a bridge model, such as Plan View, Bridge, Sections, Girder, Girder Profile and Loads, PC Tendon Configurations and Trucks. When data is entered or modified in some Data Input Pages, graphic pages will be automatically refreshed.

Graphic Pages are shown on the right of the window. To view a graphic page, you need to Navigate to a Graphic Page first.

L Untitled - Project Data (01012, 01022)	
File :	Plan View
	Plan View
Project Data	PC Tendon Configurations Bridge
Data Type: 01012, 01022	Dump and Maximum Allowable Trucks General Vehicle
Description	Special Vehicle Girder PC Sections
Date 11/7/2010 15	
Contract Number	
Structure Number	
Structure Unit	io la constante de la constante
Design By	
Check By	
Specification	a a
Options	
	۵
	ũ là chuẩn chuản c
	50'

4.3A Navigate to a Graphic Page

To view a graphic page, select the page name from the drop down list as shown below.

L Untitled - Project Da	ata (01012, 01022)		and the second se		
File 🗄 🍺 📄 🖬	R 🍠 🖻 🖹 🍃				
< Project Data (0	1012, 01022)	▼ >	Plan View 🔻		
Data Type: 01012	Project Data , 01022		Plan View PC Tendon Configurations Bridge Dump and Maximum Allowable Trucks General Vehicle		
Description			Girder PC Sections		
Date	11/7/2010	15			
Contract Number					
Structure Number					
Structure Unit				ĩn	
Design By				~	
Check By					
Specification				ō	
• Options					
				õ	
				ω	
				<u> </u>	

Some Graphic Pages are linked to some Data Input Pages. When a linked data input page is navigated, the correspondent graphic page will be automatically navigated. For example, the following screen capture shows that RC Sections is automatically opened when PC Sections (Data Type 04012) is navigated on the left of the window.

C\Temp\as - PC Sections (04012)			
File 👔 📄 🥌 🕍 🖟 💭 🙌 🔍 🀬 🔡			
< PC Sections (04012)	•	PC Sections	
PC Sections		J Prevere Template	
Data Type: 04012		✓ Show Section Numbers ✓ Show Rebers ✓ Auto Zoom to Extent Sections Per Row: 15	
No. Section Type User defined Stored Section	Reinforce (Section:1	
AASHTO Bulb • 1 PCEF 7729 •	1 29		•••
	≇ "		
2 AASHTO Bulb- • User Defined •			
AASHTO Bulb- • User Defined •			
AASHTO Bulb- • User Defined •			
6 AASHTO Bulb + User Defined +			
7 AASHTO Bulb- • User Defined •			
8 AASHTO Bulb- • User Defined •			
9 AASHTO Bulb- • User Defined •			
10 AASHTO Bulb- • User Defined •	· ·		
11 AASHTO Bulb- • User Defined •	· ·		
12 AASHTO Bulb- • User Defined •	· ·		
13 AASHTO Bulb- • User Defined •			
🚳 🙋 📋 🖸 💌	a 😮 I	Ø	EN 🔺 🎦 🖬 🚽 🔶 7:33 PM

4.3B Plan View

Plan View shows the span and beam layout in plane view. The following example shows a plan view of a two span PC bridge.



4.3C Bridge

Bridge view is a 3D graphics rendering of a bridge. The 3D rendering truly reflects the bridge geometry data entered in Data Input Pages, such as span lengths, beam spacings, girder dimensions, diaphragm locations, stiffener locations, deck width and thick. Some other secondary geometries are faked. For example, diaphragm details, rails and substructures, are all assumed by default dimensions.

The following capture shows the bridge view of a bridge.

I C:\BEST\Dash Data	haunchso - Project Data (01012, 01022)	the second se	
File 👔 📄 🥁 🔚	I R. 🖉 B. R. 5]]		
Project Data (01012, 01022) •	Bridge	
	Project Data	Top Elevation Side Perspective Update Rotation Center Walking on Deck Walking Beneath Stop Walking Options Help	
Data Type: 0101	2.01022		
	Keosauqua Bridge Preliminary analysi		
Description			
Date	11/7/2010		
Contract Number			
Structure Number			
Structure Unit			
Design By			
Check By			
Specification	LFD		
Options			
	📃 🖸 🐱 🔳 🥬	🕙 🔏	- 🐴 🖬 -

On top of bridge view, there are several buttons and options as shown below.

Тор	Elevation	Side	Perspective	Update Rotation Center	Walking on Deck	Walking Beneath	Stop Walking	Option

Top - To view the bridge on top. An example of top view of a bridge is showing in above. **Elevation** - To view the bridge in elevation.

Side - To view the bridge from side.

Perspective - To view the bridge in perspective.

The following captures show a bridge elevation, side view and perspective view.




Walking on Deck - To simulate walking on bridge deck, an animation of bridge simulating walking on deck.

Walking Beneath - To simulate walking beneath bridge, an animation of bridge simulating walking beneath the bridge.

Stop Walking/Resume Walking - To stop or resume the animation.

Options - Change options of 3D bridge rendering. Move cursor over **Options** on top, the following window will pop up.

Stop Walking	Options Help Show Deck Show Diaphragms Show Stiffeners
	Diaphragm K Diaphragm Auto Rotation Center
	Open Bridge Components Window

Show Deck - Check to show deck or uncheck to remove deck.

Show Diaphragms - Check to show diaphragms or uncheck to remove diaphragms.

Show Stiffeners - Check to show stiffener plates or uncheck to remove it.

Diaphragms - Select one of the following diaphragms: K Diaphragms, Invert K Diaphragms, Cross Diaphragm and Plate Girder.

The Following capture shows a bridge without deck, diaphragms and stiffeners.



Auto Rotation Center - Check to automatically update the 3D rotation center whenever components in the scene are changed. Uncheck to keep rotation center unchanged. When **Auto Rotation Center** is unchecked, **Update Rotation Center** will be enabled. Click it to manually update the rotation center. See Interactive in 3D Graphic View for details.

Open Bridge Component Window - Check to open the **Bridge Component Window** as shown below or uncheck to close it. This window can also be closed by clicking the cross on the title bar as shown below.

In the **Bridge Component Window**, all bridge components are listed as a tree with **Dash Bridge** as the root. Expand and browse the list to locate a bridge component. When a component is highlighted in the list, it will become the **Current Bridge Component**. The Current Bridge Component will be highlighted in the 3D scene also. When cursor hover over any component in the 3D scene, its correspondent item will be highlighted in the **Current Bridge Component**.

When the current bridge component is selected, the components in the scene can be set to **Only the Current Component**, **All Components but the Current Component** and **All Components**. These three states are toggled by pressing **F3**. See Interactive in 3D Graphic View for details.



Help - A brief help on interactive operations in 3D scene. Move cursor over **Help** on top, the following window will pop up. Move the cursor over the cross in the title bar to close it. See Interactive in 3D Graphic View for details about how to control the 3D view.



How to increase performance?

The performance of graphics rendering depends on end computers including CPU, memory and the most important - video card. For a given computer, turn off diaphragms and stiffeners in a steel bridge will increase the performance significantly.

4.3D Sections

Section Graphic Pages are used to display cross sections during entering of section data. It contains W/PG Sections for steel bridges, PC Sections for prestressed concrete bridges and RC Sections for reinforced concrete bridges.

4.3D.1 W/PG Sections



Navigate to Steel (W/PG) Section (Data Type 04012) from Data Input Pages area or select **W and PG Sections** in Graphic Pages area to open this page.

Show Section Numbers - turn on or off sections numbers on top of each section.

Auto Zoom to Extent - check to automatically zoom to full extent when a new section is added or modified in Steel (W/PG) Section (Data Type 04012).

Sections Per Row - enter a number of sections displayed per row.

4.3D.2 PC Sections

I C\BEST\Comments\PCEF69_spacing9 - PC Sections (04012)	
< PC Sections (04012)	PC Sections
PC Sections	Preview Template
Show Row Detail	V Show Section Numbers V Show Rebars V Auto Zoom to Extent Sections Per Row: 15
Data Type: 04012	
User defined Palafarea Danth Talak Flange Flang	
No. Section Type or ID (WD/WH) (WT) (WT) (TT)	Section:1
unch) (Inch) (Inch)	
1 AASHTO Bulb- ▼ 32 PCEF 8963 ▼ 1 ▼ 63.0 8.0 48.0 4.0	
P	
2 AASHTO Bulb- V User Defined V	
3 AASHTO Bulb- Vser Defined V	
4 AASHTO Bulb- V User Defined V	
5 AASHTO Bulb- + User Defined + +	
6 AASHTO Bulb- Vuser Defined V	
7 AASHTO Bulb- Vuser Defined	
8 AASHTO Bulb: Vilser Defined	
9 AASHTO Bulls + User Defined	
10 AASHTO Bulles - Ulter Defined -	
11 AASHTO Rulb: Viser Defined	
12 AASHTO Bulb - User Defined -	
13 AASUTO Bulls - User Defined -	
Avorito builo: Villoser Denned Vill Villoser Denned Vill Villoser Denned Vil	
🙆 🔏 🛄 🛐 🔽 🐼 🧔 📜 🔯 🕇	EN 🔺 🦉 🕅 📶 👔 . 11:31 AM
	11/8/2010

Navigate to PC Sections (Data Type 04012) from Data Input Pages area or select **PC Sections** in Graphic Pages area to open this page.

Preview/Template - Select to show section preview as shown above or the section template of current section type.

Show Section Numbers - turn on or off of sections numbers on top of each section.

Show Rebars - turn on or off rebars.

Auto Zoom to Extent - check to automatically zoom to full extent when a new section is added or modified in PC Sections (Data Type 04012).

Sections Per Row - enter a number of sections displayed per row.

4.3D.3 RC Sections



Navigate to RC Section (Data Type 04012) from Data Input Pages area or select **RC Sections** in Graphic Pages area to open this page.

Preview/Template - Select to show section preview as shown above or the section template of current section type.

Show Section Numbers - turn on or off of sections numbers on top of each section.

Show Rebars - turn on or off rebars.

Auto Zoom to Extent - check to automatically zoom to full extent when a new section is added or modified in RC Section (Data Type 04012).

Sections Per Row - enter a number of sections displayed per row.

4.3E Girder

Girder graphic page is used to display girder member definitions for steel bridges.

I CABEST	∏\Dash Data	haunchso	- Definition	of Members (05012)	
File 1			0 84 3 1		
< De	efinition of P	Aembers (i	15012)	• >	Larder •
		1	efinition	of Members	Top Elevation Side Perspective
10-04		a 10 1	-ciniteroni		
Data T	ype: 0501	2	Excel Work	Sheet	
Membe	er Se	ctions		Parameters	
No.	Number	Number	Length	Type 50	
1	1	1	40.0	D - Prismatic	
2	2	2	65.0	0 - Prismatic	
3	3	4	55.0	2 - Parabolic (Concave Down) 0.006	44 · · · · · · · · · · · · · · · · · ·
4	5	6	20.0	2 - Parabolic (Concave Down) 0.006	яа II
5	7	8	28.5	2 - Parabolic (Concave Down) 0.006	44
6	8	8	3.0	0 - Prismatic	
7	8	9	38.5	2 - Parabolic (Concave Down) -0.00	41
8	10	11	30.0	2 - Parabolic (Concave Down) -0.004	बा 📲
9	12	13	60.0	2 - Parabolic (Concave Down) -0.004	AT 1
10	13	12	60.0	2 - Parabolic (Concave Down) 0.004	
11	11	10	30.0	2 - Parabolic (Concave Down) 0.004	
12	9	8	38.5	2 - Parabolic (Concave Down) 0.004	
13	8	8	3.0	0 - Prismatic	
14	8	7	28.5	2 - Parabolic (Concave Down) -0.00	
15	6	5	20.0	2 - Parabolic (Concave Down) -0.00	
16	4	3	55.0	2 - Parabolic (Concave Down) -0.00	
17	2	2	65.0	0 - Prismatic	
18	1	1	40.0	0 - Prismatic	
19				0 - Prismatic	
20	1		1.1	0 - Prismatic	
21				0 - Prismatic	
22		10	1 0 1	0 - Prismatic	
23				0 - Prismatic	
24	1	18	a aa	0 - Prismatic	
25	-	-	-	0 - Prismatic	
26	1	1	1. 17	0 - Prismatic	
27	-	-		0 - Prismatic	
28		18	1.0	0 - Prismatic	
29	-	-	-	D - Prismatic	
30	1		1911	ID - Pristantic	
_			_		
	(a)		0	🕶 🧭 🔤	

Select Girder in Graphic Pages area to open this page.

Top - To view the girder on top. An example of top view of a bridge is showing in above.

Elevation - To view the girder in elevation.

Side - To view the girder from side.

Perspective - To view the girder in perspective.

When hover the mouse over the girder, the current segment will be highlighted and it correspondent definition will be highlighted in Steel (W/PG) Section (Data Type 04012).

Girder is a 3D rendering and it shares same view operation with bridge, except that no component browsing. See Interactive in 3D Graphic View for more information about how to turn a view.

4.3F Girder Profile and Loads

Girder Profile and Loads graphic page is for steel bridges only.



Select Girder Profile and Loads in Graphic Pages area to open this page.

Girder profile can be generated in different scales in horizontal and vertical. Scales Horizontal: - enter a scale for horizontal displaying. Scales Vertical: - enter a scale for vertical displaying.

When hover the mouse over the girder, the current segment will be highlighted and it correspondent definition will be highlighted on top of the window.

See Zoom and Pan of a 2D Graphic View for details about operations on 2D graphics view.

4.3G PC Tendon Configuration

PC Tendon Configurations is used to show tendon definitions of PC bridges.



Navigate to Definition of Tendons (Data Type 05032) from Data Input Pages area or select **PC Tendon Configurations** in Graphic Pages area to open this page.

Preview/Template - Select to show section preview as shown above or the section template of current section type.

Show Rebars - turn on or off rebars.

Auto Zoom to Extent - check to automatically zoom to full extent when a new section is added or modified in Definition of Tendons (Data Type 05032).

Vertical Exaggeration - enter a factor to exaggerate the girder profile.

Grab the green horizontal line to adjust areas of section view and girder profile view.

The following capture shows tendons definition template.

I C\(Temp\aa - Definition of Tendons (05832)	the local division in which the local division in which the local division is not the local division of the local division in the lo	The second s	
File 👔 🖹 🥪 🖬 🔍 🎜 🖬 🕄 🍏			
< Definition of Tendons (05032)	PC Tendon Configurations		
Definition of Tendon Data Type: 05032 Excel Work. Cross Sectional Configurations Second Work. Spain 1 Copy To Spain 2 Rev Section Mo. 1 Sector No Electron For Spain Electron 2 0 Sector 2.0 3 0 Sector 1 6 0 0 0 3 0 0 0 0 10 0 0 0 0	Preven © Template		
11 12 12 13 13 14 15 15 16 17 17 18 19 19 20 10 20 10 20 10 20 10 20 10 20 10 20 10 20 10 20 10 20 10 20 10 20 10 21 10 22 10 23 10 24 10 25 10 26 10 27 10 28 10 29 10 20 10 20 10 20 10 20 10 20 10 20 10 20 <	L-Dist.	M - Dist.	R-Wires R - Dist.
8,205, enter 205,8,506,8,205; a row of only on	Left Draped Length		Right Draped Length
Longitudinal Definitions	Left Section	Middle Section	Right Section
			PN

4.3H Trucks

Trucks graphic pages are used to illustrate the live load definitions. It contains General Vehicle, Dump and Allowable Truck and Special Vehicle.

4.3H.1 General Vehicle

I C:\Temp\aa - General Vehicle Loading - Load Type G (06032)				
File 🗄 🚔 🚔 🔜 🔜 🥃 🗑 🚊 5				
General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Load Type G (06032) • General Vehicle Loading - Loading	neral Vehicle 🔹			
General Vehicle Loading - Load Type G Data Type: 05032 Loading Designation MST/6 Alle No. Verifit Ofpoi				
			22ft	
	9.28Kips	20Kips 20Kips		12Klps 12Klps
🙆 🖉 📜 🖬 🐼 🐼	😓 I 😮	City Else Se contr	And Anna Anna Anna	EN 🔺 🍖 🔐 ad 🌓 12:18 PM

4.3H.2 Dump and Allowable Truck



Navigate to State Vehicle Loading - Load Types D and M (Data Type 06022) from Data Input Pages and select **Dump and Maximum Allowable Trucks** in Graphic Pages area to open this page.

Select live loads in **Dump Trucks(D) Designation** and **Maximum Allowable Trucks(M) Designation** to illustrate the trucks if no live loads are defined for **Load Types D and M**.

4.3H.3 Special Vehicle

E Cr{Templaa - Special Vehicle Loading - Load Type C (07012) File ■ Control = Contro	siat Vehicle •			
Special Vehicle Loading - Load Type C Data Type: 07012 Loading Designation FA Travel Direction 0 - Both Ways - Description 1 6.0 2 24.0 3 24.0				
	Z4Kips	30ft	14ft 24Kips	GKips

Navigate to Special Vehicle Loading - Load Type C (Data Type 07012) from Data Input Pages or select **Special Vehicle** in Graphic Pages area to open this page.

Select a live load in Loading Designation to illustrate the truck if no live load is defined for Load Type C.

4.3I Zoom and Pan of a 2D Graphic View

Right click over any area of a 2D graphic view, a menu as shown below will open.



Zoom All - Select Zoom All to change the view to full extent.

Zoom Out - Select **Zoom Out**, then move cursor over a point and click left button, to zoom out the view. The view will be centered at the point where the mouse is clicked.

Zoom In - Select **Zoom In**, then move cursor over a point and click left button, to zoom in the view. The view will be centered at the point where the mouse is clicked.

Zoom Window - Select **Zoom Window**, then move cursor to one corner and drag the mouse (hold left button while moving cursor) to another corner. A pink rectangle as shown below will be showing while mouse is dragging. Release left button, the view will be zoomed to that rectangle.



Pan - Select Pan and then drag the view to pan the view.

When **Zoom Out**, **Zoom In**, **Zoom Window** or **Pan** is selected, it will be set as current command. The same operation can be performed without selecting again.

4.3J Interactive in 3D Graphic View

How to change view?

Hold **Left Button** while moving to Rotate Hold **Right Button** while moving to Zoom In/Out Hold **Left Button** and **Right Button** while moving to Pan

How to show an individual component?

When a component is highlighted, press **F3** to toggle among Show All Components, Show Only Highlighted Component and Show All But the Highlighted Component

How to Zoom To an individual component?

When a component is highlighted, press F2 to Zoom To the Highlighted Component

Preset Views

Click Top , Elevation , Side and Perspective buttons to change to preset views

When components in scene are changed

The rotation center is always set to the center of scene (when **Auto Rotation Center** is checked). Rotation may appear abrupt when components are changed as the rotation center changes. A preset view may be needed to restore the view. This is true when scene is changed from local small component to global big components. Uncheck **Auto Rotation Center** and press **Update Rotation Center** when scene changes to bigger to avoid this

How to Browse component?

Move cursor over a component to highlight it. The component highlighted by cursor is at the lowest level of the bridge. Use **Left** or **Right** arrow keys to browse components in the same level. Use **Up** or **Down** arrow keys to browse components in one level up or down. You can also browse the component list window to highlight component.

For example, a girder segment is highlighted as below:



Press Left or Right key to move the highlighted component to other segments of the same girder as below.



Press **Up** key to move to one level up to the whole girder as shown below.



A component (diaphragm) is highlighted as below.



Press **Down** key to move the current component down to the first sub-component (of the diaphragm) as shown below.



About Rotation Center

When holding **Left Button** and moving the cursor, the view will be changed as the bridge is being rotated. This is implemented by a **Tracking Ball**. Turning the bridge is as moving on the sphere on the ball. The center of the tracking ball is called the rotation center, which is automatically set to the center of the bridge by default.

When a simple component that is far away from the center of the bridge is highlighted, the rotation center should be set to the center of the highlight component. Rotation of that component will be abruptly if otherwise. When **Auto Rotation Center** is check in Bridge options, the rotation center will be updated automatically whenever the highlight component is changed.

When a simple component is highlighted as shown in above (and the rotation center is set to the center of the diaphragm), if you want to rotate the whole bridge along this center, you need to uncheck **Auto Rotation Center** before pressing F3 to toggle the scene back to showing all components. Then turning afterwards will be along the center of the simple component instead of the whole bridge.

Click **Update Rotation Center** to get the rotation center back to the center of whatever components are showing in the scene.

The following capture shows a bridge being rotated along the center of a diaphragm.

5.0 RUN UTILITY

The Run Utility of *WIN-DASH* performs calculations based on the choice entered in the PROGRAM FLOW CONTROL field found in data type 01032. The Run Utility allows single run and multiple run. By clicking on 'Run' a submenu with the options '**Single Run**' and '**Multiple Run**' appears. The user can only select one DASH input data file to run and get one set of result and graphic files for the single run. After finishing the run, the print utility can view/print this result file (by default). For the multiple run, the user can select several existing DASH input data files from any directory to run and get their respectively sets of result and graphic files. In this case, the user can select the result file one at a time to view/print. Single execution screen is shown in Figure 5.1.

5.1 Single Run

Execute Merlin-Dash			×
Please select files:	OK	Cancel	
Input File			
Output File			
Graphic File			

Figure 5.1: Run Utility Single Execution Screen

Clicking on the "Input File" button opens the "Input Data File" window which is shown in Figure 5.2. Choosing a file (highlighting the file) and then clicking "OK" will place the filename on the "Input File" button. This can also be accomplished by double clicking on the filename in the "Input Data File" window. After selecting the desired input file, clicking "OK" in the "RUN Utility" screen would execute **WIN-DASH**. After the execution starts, a separate window will appear on the screen with program status shown.



Figure 5.2: Input Data File Window

If *analysis* option -- Flow Control = 0, 1, 7 or 8 -- is selected, only Part I - Analysis status window will be shown. If *code check* option -- Flow Control = 6 -- is chosen, Part II - Code Check window will appear following Part I. If *Rating* -- Flow Control = 3 -- is required, Part III-Rating window will then follow.

The default "Output File" and "Graphic File" will have same names as the selected Input file with different extensions. Output file has a .RES extension and Graphic file has a .GRH extension. User can click on either button to choose different names for output file or graphic file, respectively.

"Cancel" button on the "RUN" utility screen returns the user to the main menu.

5.2 Multiple Run

Clicking on "multiple run" submenu opens multiple run screen, which is shown in Figure 5.3. Pressing on the "Select Input Files" button opens the "Input Data File" window which is shown in Figure 5.2. Choosing a file (highlighting the file) and then clicking "OK" will place the file on the list at the bottom of the screen. To delete a file from the list, click on the file. After selecting all the desired input files, clicking "OK" in the "RUN Utility" screen would execute *WIN-DASH*. An output file (.res) and a graphic file (.grh) with the same file name as the input data file will be generated after each run.

Execute Merlin-Dash	×
Select Input Files	ок
C:\windash\EXAMP1.DAT	
C:\windash\EXAMP3.DAT	

Figure 5.3: Run Utility Multiple Executions Screen

5.3 Single/Multiple Run Exit

After each execution ends, a pop-up window will appear on the screen with message "Program Terminated with exit code 0. Exit Window? " Exit code 0 is a normal exit of the computation, click Yes to exit the "RUN" utility. Exit code 1 is an abnormal exit. Check input and output files for the cause of termination.

FNRDASH	IN	×
⚠	Program Te Exit Window	rminated with exit code 0 ??
	Yes	No

Figure 5.4: Program Terminated with Normal Exit Window

6.0 GRAPHICS UTILITY

The Graphics Utility of **WIN-DASH** is accessed by clicking on the word '**Graphic**' shown in the menu bar of the MAIN MENU screen. This transfers you to the **WIN-DASH** Graphics Utility screen. The Graphics Utility of **WIN-DASH** creates plots from the graphics files produced by the Run Utility. It allows you to open any graphics file created by **WIN-DASH**, view any of the graphics plots within that file, or print those plots using the Print option under the File Menu. Figure 6.1 shown below is the graphic plot menu options for the Steel.



6.1 File Submenu

The File submenu which is shown in Figure 6.2, can be accessed by clicking on 'File' in the Graphic Utility screen. The available options are 'Open', 'Print Setup', 'Print', and 'Exit'.

, C:\Windash\Examp2d.grh-Steel Dead Load Deflection								
File	Moment	Shear	Deflection	Camber	Range	Stress	Help	
0	pen							
Pi Pi	rint Setup rint							
E	xit							



<u>OPEN</u>

Choosing 'Open' from the File submenu brings up the Open Graphic File window (Figure 6.3). This window allows the user to type in the name of the graphics file you wish to open, or to select the name of the file in the file name box. The file name box contains all the graphics files (*.grh) present in your *WIN-DASH* directory. By clicking on the directory icons on the right you can search other directories for graphics files. *WIN-DASH* allows the user to open graphics files created only by the *WIN-DASH* "Run" utility. If you open a file not created by the *WIN-DASH* "Run" utility and then try to produce a plot, an error message will occur. Only one graphics file can be opened at a time. If a second file is opened the first one will automatically be closed.

Open		? ×
Look in:	🔄 windash 💽 🗧 🖆 📰 🕇	
History Desktop My Documents My Computer	Examp2D.GRH EXAMP2D.GRH UFDEX1E.GRH PCI9-1A.GRH PCI9-3.GRH pci9-5a.GRH pci9-5a.GRH RCEXAMPLE1A.GRH RCEXAMPLE1B.GRH	
My Network P	File name: Files of type: Graphic files (*.grh)	Ipen ancel

Figure 6.3: Open Graphic File Window

PRINT SETUP

Choosing 'Print Setup' from the File submenu allows the user to change the printer setup.

<u>PRINT</u>

Choosing 'Print' from the File submenu sends the currently displayed plot to the printer. Using the Print option is the only way to print out graphics plots produced by *WIN-DASH.* The Print Utility discussed later cannot be used to print graphics plots; it is used exclusively for printing Result Files.

<u>EXIT</u>

Choosing 'Exit' from the File submenu closes the graphics file (if one is opened) and brings you back to the *WIN-DASH* Main Menu.

6.2 Graphic Plots (for Steel)

Six options are available in *WIN-DASH.* They are Moment, Shear, Deflection, Camber, Stress Range, and Stress diagrams which are listed in Table 6.1. When a plot is displayed, the value at any given point can be determined by clicking on that point. An arrow will appear on the screen at the location of the chosen point. The 'Location' box in the upper left portion of the screen gives the distance from the left end of the first span to the chosen point, in the appropriate units. The unit, feet or meters, is determined by the unit system chosen on the input screen shown in Figure 4.7. The 'Value' box gives the magnitude of the quantity plotted, at the chosen point. Its units are also dependent upon whether the U.S. Customary or S.I. unit system was chosen on the same input screen.

OPTIONS	SUB-CTEGORIES
MOMENT	Non-composite Dead Load Moment
	Superimposed Dead Load Moment
	Live Load Moment – Positive
	Live Load Moment – Negative
	Total Maximum moment
	Total minimum Moment
SHEAR	Non-composite Dead Load Shear
	Superimposed Dead Load Shear
	Live Load Shear – Positive
	Live Load Shear – Negative
	Total Maximum Shear
	Total Minimum Shear
DEFLECTION	Steel Dead Load Deflection
	Slab Dead Load Deflection
	Superimposed Dead Load Deflection
	Total Dead Load Deflection

Table 6.1: Graphic Plot Options

	Table 6.1: Graphic Plot Options (continued)							
CAMBER	Steel Dead Load Camber							
	Slab Dead Load Camber							
	Superimposed Dead Load Camber							
	Total Dead Load Camber							
RANGE (Stress)	Stress Range – Top Flange							
	Stress Range – Bottom Flange							
STRESS	Top Flange							
	Steel Dead Load Stress							
	Slab Dead Load Stress							
	Superimposed Dead Load Stress							
	Maximum Total Positive and Allowable Stress							
	Maximum Total Negative and Allowable Stress							
	Total Positive Live Load Stress							
	Total Negative Live Load Stress							
	Allowable Stress							
	Bottom Flange							
	Steel Dead Load Stress							
	Slab Dead Load Stress							
	Superimposed Dead Load Stress							
	Maximum Total Positive and Allowable Stress							
	Maximum Total Negative and Allowable Stress							
	Total Positive Live Load Stress							
	Total Negative Live Load Stress							
	Allowable Stress							

6.2.1 Moment Diagrams (for Steel)

Moment submenu and a sample diagram are shown in Figures 6.4 and 6.5, respectively.







Figure 6.5: Noncomposite Dead Load Moment Diagram Screen

6.2.2 Shear Diagrams (for Steel)

Shear submenu and a sample diagram are shown in Figures 6.6 and 6.7, respectively.

🐂 C:\Windash\Examp2d.grh-Noncomposite Dead Load Shear								
File Moment	Shear Deflection Camber Range Stress Help							
23	Noncomposite Dead Load Shear							
	Superimposed Dead Load Shear							
	Live Load Shear - Positive							
	Live Load Shear - Negative							
	Total Maximum Shear							
	Total Minimum Shear							

Figure 6.6: Shear Diagram Submenu



Figure 6.7: Noncomposite Dead Load Shear Diagram Screen

6.2.3 Deflection Diagrams (for Steel)

Deflection submenu and a sample diagram are shown in Figures 6.8 and 6.9, respectively.

🚬 C:\Windas	🐂 C:\Windash\Examp2d.grh-Steel Dead Load Deflection							
File Moment	Shear	Deflection	Camber	Range	Stress	Help		
പപ		Steel Dead Load Deflection						
		Slab Dead Load Deflection						
	Superimposed Dead Load Deflection							
Total Dead Load Deflection								

Figure 6.8 Deflection Diagrams Submenu



Figure 6.9: Steel Dead Load Deflection Diagram Screen

6.2.4 Camber Diagrams (for Steel)

Camber submenu and a sample diagram are shown in Figures 6.10 and 6.11, respectively.

i , 0	🐃 C:\Windash\Examp2d.grh-Steel Dead Load Deflection								
File	Moment	Shear	Deflection	Camber	Range	Stress	Help		
62	a a			Steel Dead Load Camber					
					Slab Dead Load Camber				
				Superimposed Dead Load Camber					
				Total	Dead Loa	d Camb	er		

Figure 6.10: Camber Diagram Submenu



Figure 6.11: Steel Dead Load Camber Diagram Screen

6.2.5 Range (Stress) Diagrams (for Steel)

Range submenu and a sample diagram are shown in Figures 6.12 and 6.13, respectively.

1 , 0	🐂 C:\Windash\Examp2d.grh-Steel Dead Load Deflection							
File	Moment	Shear	Deflection	Camber	Range	Stress	Help	
<u>_</u>	: []				Stre	ss Range	e - Top Flange	
					Stre	ss Range	e - Bottom Flange	

Figure 6.12: Range (stress) Submenu



Figure 6.13: Top Flange Stress Range Diagram Screen

6.2.6 Stress Diagrams (for Steel)

6.2.6.1 Top Flange Stress Diagrams

Top Flange Stress submenu and a sample diagram are shown in Figures 6.14 and 6.15, respectively.

🐂 C:\Windash\Examp2d.grh-Top Flange-Steel Dead Load Stress						
File Moment Shear Deflection Camber Range	Stress Help					
24	Top Flange →	Steel Dead Load Stress				
	Bottom Flange 🕨	Slab Dead Load Stress				
		Superimposed Dead Load Stress				
		Positive Live Load Stress				
		Negative Live Load Stress				
		Max. Total Positive and Allow. Stress				
		Max. Total Negative and Allow. Stress				

Figure 6.14: Top Flange Stress Submenu



Figure 6.15: Top Flange Steel Dead Load Stress Diagram Screen

6.2.6.2 Bottom Flange Stress Diagrams

Bottom Flange Stress submenu and a sample diagram are shown in Figures 6.16 and 6.17, respectively.

i (🐂 C:\Windash\Examp2d.grh-Bottom Flange-Steel Dead Load Stress								
File	Moment	Shear	Deflection	Camber	Range	Stress	Help		
<u>_</u> 2						Top Flange 🔹 🕨			
						Bott	om Flange	Þ	Steel Dead Load Stress
									Slab Dead Load Stress
									Superimposed Dead Load Stress
									Positive Live Load Stress
									Negative Live Load Stress
									Max. Total Positive and Allow. Stress
									Max. Total Negative and Allow. Stress

Figure 6.16: Bottom Flange Stress Submenu



Figure 6.17: Bottom Flange Steel Dead Load Stress Diagram Screen

6.3 Graphic Plots (for Prestressed Concrete)

Six options for Prestressed Concrete are available in *WIN-DASH.* They are Moment, Shear, Displacement, Bottom Stress, Top Stress, and Slab Top Stress diagrams which are listed in Table 6.2. When a plot is displayed, the value at any given point can be determined by clicking on that point. An arrow will appear on the screen at the location of the chosen point. The 'Location' box in the upper left portion of the screen gives the distance from the left end of the first span to the chosen point, in the appropriate units. The unit, feet or meters, is determined by the unit system chosen on the input screen shown in Figure 4.7. The 'Value' box gives the magnitude of the quantity plotted, at the chosen point. Its units are also dependent upon whether the U.S. Customary or S.I. unit system was chosen on the same input screen.

OPTIONS	SUB-CATEGORIES
MOMENT	Girder Wt. Moment
	Slab Wt. Moment
	SDL Moment
	LL + (Positive LL) Moment
	LL – (Negative LL) Moment
	Total Maximum Moment Capacity
	Total Minimum Moment Capacity
SHEAR	Girder Wt. Shear
	Slab Wt. Shear
	SDL Shear
	LL + (Positive LL) Shear
	LL – (Negative LL) Shear
	Total Minimum Shear
DISPLACEMENT	Girder Wt. Displacement
	Slab Wt. Displacement

Table 6.2:	Graphic	Plot	Options
------------	---------	------	---------

(continued)

OPTIONS	SUB-CATEGORIES
DISPLACEMENT	SDL Displacement
	LL + (Positive LL) Displacement
	LL – (Negative LL) Displacement
	Initial Prestress Displacement
	Ultimate Prestress Displacement
	Total Maximum Displacement
	Total Minimum Displacement
BOTTOM STRESS	Girder Wt. Bottom Stress
	Slab Wt. Bottom Stress
	SDL Bottom Stress
	LL + (Positive LL) Bottom Stress
	LL – (Negative LL) Bottom Stress
	PSI Initial Prestress Bottom Stress
	PSU Ultimate Prestress Bottom Stress
	Total At Release and Allowable Bottom Stress
	Total Maximum and Allowable Bottom Stress
	Total Minimum and Allowable Bottom Stress
TOP STRESS	Girder Wt. Top Stress
	Slab Wt. Top Stress
	SDL Top Stress
	LL + (Positive LL) Top Stress
	LL – (Negative LL) Top Stress
	PSI Initial Prestress Top Stress

(continued)

	Table 6.2: Graphic Plot Options (continued)
OPTIONS	SUB-CATEGORIES
	PSU Ultimate Prestress Top Stress
	Total At Release and Allowable Top Stress
	Total Maximum and Allowable Top Stress
	Total Minimum and Allowable Top Stress
SLAB TOP STRESS	SDL Slab Top Stress
	LL + (Positive LL) Slab Top Stress
	LL – (Negative LL) Slab Top Stress
	Total Maximum and Allowable Slab Top Stress
	Total Minimum and Allowable Slab Top Stress

6.3.1 Moment Diagrams (for Prestressed Concrete)

Moment submenu and a sample diagram are shown in Figures 6.18 and 6.19, respectively.



Figure 6.18: Moment Diagram Submenu (for Prestressed Concrete)



Figure 6.19: Girder Wt. Moment Diagram Screen

6.3.2 Shear Diagrams (for Prestressed Concrete)

Shear submenu and a sample diagram are shown in Figures 6.20 and 6.21, respectively.



Figure 6.20: Shear Diagram Submenu (for Prestressed Concrete)



Figure 6.21: Girder Wt. Shear Diagram Screen (for Prestressed Concrete)
6.3.3 Displacement Diagrams (for Prestressed Concrete)

Displacement submenu and a sample diagram are shown in Figures 6.22 and 6.23, respectively.

🐂 C:\Pc\Pci9-1a.gr	n-Girder Wt. Displacement
File Moment Shear	Displacement Bottom Stress Top Stress Slab Top Stress Help
ala	Girder Wt. Displacement
	Slab Wt. Displacement
	SDL Displacement
	Ц + (Positive Ц) Displacement
	Ш (Negative Щ) Displacement
	Initial Prestress Displacement
	Ultimate Prestress Displacement
	Total Maximum Displacement
	Total Minimum Displacement

Figure 6.22: Displacement Diagram Submenu (for Prestressed Concrete)





6.3.4 Bottom Stress Diagrams (for Prestressed Concrete)

Bottom Stress submenu and a sample diagram are shown in Figures 6.24 and 6.25, respectively.

🚔, C:\Pc\Pci9-1a.grh-Girder Wt.	Moment	
File Moment Shear Displacement	Bottom Stress Top Stress Slab Top Stress Help	_
25	Girder Wt. Bottom Stress Slab Wt. Bottom Stress	
	SDL Bottom Stress	
	Щ + (Positive Щ) Bottom Stress	
	Ш - (Negative Щ) Bottom Stress	
	PSI Initial Prestress Bottom Stress	
	PSU Ultimate Prestress Bottom Stress	
	Total At Release and Allowable Bottom Stress	
	Total Maximum and Allowable Bottom Stress	
	Total Minimum and Allowable Bottom Stress	

Figure 6.24: Bottom Stress Diagram Submenu (for Prestressed Concrete)





6.3.5 Top Stress Diagrams (for Prestressed Concrete)

Top Stress submenu and a sample diagram are shown in Figures 6.26 and 6.27, respectively.

1 , 0	:\Pc\Pci	9-1 a.gi	rh-Girder Wt.	Moment				
File	Moment	Shear	Displacement	Bottom Stress	Top Stress	Slab Top Stress	Help	
	.				Girder W Slab Wt. SDL Top LL + (Po: LL - (Neg PSI Initi PSU Ulti Total At	t. Top Stress Top Stress Stress sitive LL) Top Stres jative LL) Top Stres al Prestress Top St mate Prestress Top Release and Allow	ss ss ress p Stress vable Top Stress	
					Total Ma Total Mir	ximum and Allowa nimum and Allowa	ble Top Stress ble Top Stress	

Figure 6.26: Top Stress Diagram Submenu (for Prestressed Concrete)





6.3.6 Slab Top Stress Diagrams (for Prestressed Concrete)

Slab Top Stress submenu and a sample diagram are shown in Figures 6.28 and 6.29, respectively.

۵, C	🐂 C:\Pc\Pci9-1a.grh-SDL Slab Top Stress						
File	Moment	Shear	Displacement	Bottom Stress	Top Stress	Slab Top Stress	Help
<u>_</u>						SDL Slab Top	Stress
						山 + (Positive	Щ) Slab Top Stress
						📖 🗆 - (Negative	Ц) Slab Top Stress
						Total Maximu	m and Allowable Slab Top Stress
						Total Minimur	n and Allowable Slab Top Stress

Figure 6.28: Slab Top Stress Diagram Submenu (for Prestressed Concrete)



Figure 6.29: SDL Slab Top Stress Diagram Screen (for Prestressed Concrete)

7.0 **PRINT UTILITY**

The Print Utility of *WIN-DASH* is accessed by clicking on the word 'Print' shown in the menu bar of the MAIN MENU screen. This transfers you to the *WIN-DASH* Print Utility screen (Figure 7.1). The Print Utility performs the printing of the output files created by the Run Utility. It offers the user the ability to view the output before printing. The entire output file or selected tables can be printed from this utility. It is important to note that an output file must be opened first to use this utility.

Open File View	/Print File View Tables Print Tables Exit
File Name:	OK Image: C:\ Image: DashP Image: temp Image: temp

Figure 7.1 Print Utility Screen

7.1 Open File

Print files previously saved under your WIN-DASH directory will appear in the larger box on the lower left side of the Open File screen. Double-clicking on the name of one of these files opens it. Print files saved in other directories or drives can be accessed by scrolling through the 'Directories' and/or the 'Drives' boxes. All files to be opened must have the extension '.res'.

Files may also be opened by typing or highlighting the name in the File Name box and then clicking on the OK button or hitting the ENTER key.

7.2 View/Print File

This option allows the user to review the results page by page in a continuous manner. A typical result file screen is given in Figure 7.2. This screen will be activated automatically after opening a file.

💦 C:\Windasl	NRCEXA	MPLE1A.RE5	_ 8 ×
Open File	View/Prir	nt File View Tables Print Tables Exit	
Find String	Find I	Next Print	
1			-

		* * * * * * * * * * * * * * * * * * *	
		* DEPARTMENT OF CIVIL ENGINEERING *	
		* UNIVERSITY OF MARYLAND *	

		COPYRIGHT NOTICE AND DISCLAIMER	
	NOTTO	CR · COPYRIGHT 1985 1987 THE INTURESTTY OF MARYLAND	
		BRIDGE ENGINEERING SOFTWARE CENTER.	
	птест	LATHER - THE COETHARE TO B DEODEFETARY DEODIFT OF	
		THE UNIVERSITY OF MARYLAND, BRIDGE ENGINEERING	
		SOFTWARE CENTER AND ONLY CONDITIONALLY ISSUED.	
		POSSESSION, ACCESS AND USE IS PROMIBITED Everent ac evideocity admunditate by the interestity	
		OF MARYLAND, BRIDGE ENGINEERING SOFTWARE CENTER.	
3	. WARRI	ANTY AND LIMITATION OF LIABILITY :	
	(3)	ING BEDBESENTS THAT TO THE BEST OF TTS UNDELENCE. THE	
	(4)	LICENSED MATERIALS DO NOT INFRINCE ANY COPYRIGHT, TRADE	
		SECRET OR PRIENT.	
	(B)	THE SELECTION OF APPROPRIATE SOFTWARE, THE COLLECTION	
		AND STORAGE OF DATA, AND THE INTERPRETATION OF OUTPUT	
		ARE LICENSEE'S RESPONSIBILITY, AND NOT UND'S RESPONSIBILITY.	
		THE LILENSED RATEKIALS ARE URLI TU BE USED AS A TUDL AND NOT AS A SUBSTITUTE FOR LICENSE'S PROFESSIONAL	
		JUDGAENT .	
	(C)	THE LICENSED MATERIALS WERE FORMERLY OWNED AND DEVELOPED	
		WITH THE ASSISTANCE OF THE STATE HIGHWAY ADMINISTRATION	
		OF THE MARYLAND DEPARTMENT OF TRANSPORTATION ("MOOT").	
		THE LILENSED MATERIALS ARE MADE AVAILABLE ON AN "AS 15" BASIS, EXCEPT AS EXPRESSLY SET FORTH IN THIS AGREEMENT	
		BOTH UND AND MDOT DISCLAIM ANY AND ALL PROMISES,	
		REPRESENTATIONS AND WARRANTIES BOTH EXPERSS AND LIQUIED	_
1		WIR RESPECT TO TRE LICENSED INTERIALS AND ANY SUPPORT	Ŀ

Figure 7.2: A Typical Result File Screen

Clicking on the 'Print' button on the screen will bring up a window, which is shown in Figure 7.3. The options available are '**Print File with Form Feed**' and '**Print File without Form Feed**'.



Figure 7.3: Print File Window

Clicking 'Find String' button brings up a window, which is shown in Figure 7.4. This window allows the user to enter a string (a word or phrase), which he/she is trying to locate in the output file. After entering the string and choosing 'Ok', the program will locate the first occurrence of that string in the output file. Clicking the 'Find Next' button then brings the next occurrence of the string

	×
Enter search string	OK Cancel

Figure 7.4: Search String Window

MERLIN-DASH

....from the BEST CENTER

7.3 View Tables

Although the scroll bar lets the user move back and forth between the pages, one may find it time consuming if a specific table of results is desired for review. The View Table option serves this purpose. The top window contains the list of tables. Highlighting a table brings that table to the lower window. A typical View Table screen is presented in Figure 7.5.

Vindash\RCEXAMPLE1	IA.RES	
File View/Print File	e View Tables Print Tables Exit	
1.1 PROJECT DATA 1.2 GENERAL PROGRI 3.1 STRUCTURAL DET 3.2 SPAN LENGTHS 3.4 BEAM SPACING 4.1 DEFINITION OF 5.1 DEFINITION OF	AM OPTIONS TAILS in feet in feet SECTIONS OFFICES	
J.I DEFINITION OF	ALC NUM IS ALC	
TABLE 0.0.1.1 PI	ROJECT DATA	-
	DESCRIPTION DATE	
RC EXAMPLE1		
TABLE 0.0.1.2 GE OUTPUT SPAN LEVEL INTERVAI (0,1) MAX=20	BYBY NERAL PEOGRAM OPTIONS ************************************	
TRBLE 0.0.1.2 GEI ** OUTPUT SPAN LEVEL INTERVAI (0,1) (HGX=20)		
TABLE 0.0.1.2 GEI *** OUTPUT SPAN LEVEL INTERVAI (0,1) (HGX=20) 1 10 * output level		
TABLE 0.0.1.2 GE *** OUTPUT SPAN LEVEL INTERVAN (0,1) (MAX=20) 		
TABLE 0.0.1.2 GE ** OVTPUT SPAN LEVEL INTERVAN (0,1) (MAX=20) 1 10 * output level * span interval * structural typ	BY - BY NNERAL PROGRAM OPTIONS 	

Figure 7.5: A Typical View Table Screen

7.4 Print Tables

The print tables screen will be shown after clicking on the 'Print Tables' tab. The bottom window contains the list of tables. Highlighting a table brings that table to the upper window (Table Selected). Click on the '**Print**' button, will send the table selected to a printer. A typical Print Tables screen is presented in Figure 7.6.

C:\Windash\RCEXAMPLE1A.RE5		_ 8 ×
Open File View/Print File View Tables Print Tables	Exit	
Table Selected:	Print 1	
1		
List of Tables:		
0.0.1.1 PROJECT DATA		
0.0.1.2 GENERAL PROGRAM OPTIONS		
0.0.3.1 STRUCTURAL DETAILS		
0.0.3.2 SPAN LENGTHS in feet		
0.0.4 1 BEFINITION OF SECTIONS		
0 0 5 1 DEFINITION OF MEMBERS		
0.0.6.1 BASHTO LIVE LOBDING - LOBD TYPE (B)		
0.8.1.2 SPECIFICATION OF IMPACT AND DISTRIBU	FTION FACTORS	
0.0.11.1 DEFINITION OF UNIFORM AND CONCENTRA	ATED LOADS	
0.0.12.3 SHEAR CONNECTOR AND SLAB REINFORCEM	(ENT DATA	
2.2.1.1=PROGRAM ASSUMPTIONS		
2.2.2.1=LOADING INFORMATION		
2.2.3.1=BRIDGE SUPERSTRUCTURE QUANTITIES		
2.2.3.2=DISTRIBUTION OF WHEEL LORDS		
2.2.4.1=NONCOMPOSITE SECTION PROPERTIES FOR	N=INFINITY	
2.2.5.1=NONCOMPOSITE DEAD LOAD MOMENTS FOR N	HEINFINITY (FACTORED)	
2.2.5.2=LIVE LORD MOMENTS FOR NONCOMPOSITE C	CONSTRUCTION (FACTORED)	
2.2.5.2R=LIVE LOAD MOMENT RANGE (UNFACTORED)		
2.2.5.3=MOMENT SUMMARY FOR NONCOMPOSITE CONS	TRUCTION (FACTORED)	
2.2.6.1=NONCOMPOSITE DEAD LOAD SHEARS FOR N=	INFINITY (FACTORED)	
2.2.6.2=LIVE LOAD SHEARS FOR NONCOMPOSITE CO	(NSTRUCTION (FACTORED)	
2.2.6.2R=LIVE LOAD SHEAR RANGE (in kips) (UN	(FACTORED)	
2.2.6.3=SHEAR SUDDARY FOR NONCOMPOSITE CONST	RUCTION (FACTORED)	
1.2.7.1=LIVE LOAD REACTIONS (UNFACTORED)		
1.2.7.2=SUMMARY OF REACTIONS (UNFACTORED)		
2.2.8.1=DEAD LUAD DEFLECTIONS FOR NUNCOMPOSI	THE CUNSTRUCTION (UNFACTURED)	
2.2.8.2=MAX. LIVE LUAD DEFLECTIONS FOR NUNCO	MAP. CONSTRUCTIONS	
2.1.20.1- SUMARKI OF FURLES FOF REINFURLED C	UNCRETE BEAM ANALISIS	
2.1.20.2- SUMMARI OF SECTION PROPERTIES OF 2 1 20 2- SUDGARY OF REINFORCEMENT BROBERTIE	ко-вели 25 ор ве-вран	
2 1 23 1-USB-TNUENTORY RENDING STREESE & DR	IN DE RE-BERRAN- TOD CONCRETE	
2.1.23.1=WSD-INVENTORY BENDING STRESSES 4 RA	TING OF RC-BRAN: TOP STEEL	~
TELEVISION AND ANDRESSES & RE	The second	

Figure 7.6: A Typical Print Table Screen

7.5 Exit

Choosing 'Exit' tab exits the Print Utility and brings you back the *WIN-DASH* Main Menu.

7.6 Output Definitions and Options

Several different output options are available in the MERLIN-DASH system. These options provide the user with maximum flexibility in both the selection and the identification of the output for the various construction types and design specifications. These options are described below.

7.6.1 Index of Output Tables

Due to the extremely detailed output requirements for structural design problems, all output from MERLIN-DASH is indexed for user access and identification. The output is given in an $8 \frac{1}{2}$ " x 11" tabular format and is categorized into four indices represented by TABLE I, J, K, L which are defined in Table 7.1.

LABEL	CODE	NO.	DESCRIPTION
CONSTRUCTION TYPE	Ι	1	Composite Construction
		2	Non-composite Construction
SPECIFICATION	J	1	AASHTO - WSD
		2	AASHTO - LFD
INFORMATION TYPE	K	1	Index of Output
		2	Input Verification
		3	Design Notes
		4	Section Properties
		5	Moments
		6	Shears
		7	Reactions
		8	Deflections
		9	Stresses
		21	Code Check - WSD
		22	Code Check - LFD
		31	Rating - WSD
		32	Rating - LFD
		41	Minimum Cost Design - LFD
		42	Minimum Cost Design - WSD
NUMBER	L	Ν	The Sequence Number:
			1 - N of the Output Table

Table 7.1 : Definition of Output Indices - TABLE I.J.K.L.

7.6.2 Output Options

The amount of detail presented in *MERLIN-DASH* output tables is broken up into two levels. The user selects the output level using the *WIN-DASH* Input Screen: Basic Program Options.

Level 0 - Basic Engineering Output Level. This level of output has only those tables which are necessary for design (Table 7.2).

Level 1 - Detailed Engineering Output Level. Many more tables are output than required for basic engineering purposes (Table 7.2).

	Table 7.2 : D	efinition of Output Tables for Composite Construction	
	TABLES APP	LICABLE FOR: $I = 1$ - COMPOSITE CONSTRUCTION I = 1 - AASHTO WSD	
INDEX	OUTPUT	TITLE	LEVEL
NO.	PHASE		(0,1)
1.1.1.1	ANALYSIS	PROGRAM ASSUMPTIONS	1
1.1.2.1		LOADING INFORMATION	1
1.1.3.1		BRIDGE SUPERSTRUCTURE QUANTITIES	1
1.1.3.2		DISTRIBUTION OF WHEEL LOADS	1
1.1.4.1		NON-COMPOSITE SECTION PROPERTIES FOR N = INFINITY	1
1.1.4.2		COMPOSITE SECTION PROPERTIES FOR N = 24.00	1
1.1.4.3		COMPOSITE SECTION PROPERTIES FOR $N = 8.00$	1
1.1.5.1		NON-COMPOSITE DEAD LOAD MOMENTS FOR N = INFINITY	1
1.1.5.3		COMPOSITE LIVE LOAD MOMENTS FOR N = 8.00	1
1.1.5.3A		LIVE LOAD MOMENT RANGE FOR $N = 8.0$ (k-ft)	1
1.1.5.4		MOMENT SUMMARY FOR COMPOSITE CONSTRUCTION	0, 1
1.1.6.1		NON-COMPOSITE DEAD LOAD SHEAR FOR N = INFINITY	1
1.1.6.2		NON-COMPOSITE AND COMPOSITE DL SHEAR SUMMARY	1
1.1.6.3		LIVE LOAD SHEAR FOR $N = 8.0$	1
1.1.6.3A		LIVE LOAD SHEAR RANGE FOR N = 8.0 (kips)	1
1.1.6.4		SHEAR SUMMARY FOR COMPOSITE CONSTRUCTION	0, 1
1.1.7.1		LIVE LOAD REACTIONS	1
1.1.7.2		SUMMARY OF REACTIONS	0, 1
1.1.8.1		COMP AND NON-COMP DL DEFL FOR INFINITY AND N = 24.0	1
1.1.8.1A		CAMBER INFORMATION	1
1.1.8.1B		LOCATION OF DEAD LOAD POINT OF CONTRA - FLEXURE	1
1.1.8.2		MAX. LIVE LOAD DEFLECTION FOR COMPOSITE CONST.	0, 1
1.1.9.1		NON-COMPOSITE DEAD LOAD STRESSES FOR N = INFINITY	1
1.1.9.2		COMP. DL STRESS FOR N = 24.0 AND TOTAL DL STRESSES	1
1.1.9.3		LIVE LOAD STRESSES FOR $N = 8.0$	1
1.1.9.3A		LIVE LOAD STRESS RANGE FOR $N = 8.0$ (ksi)	1
1.1.9.4		DL+LL+I STRESS SUMMARY FOR COMPOSITE CONSTRUCT.	0, 1
1.1.10.1	V	STRESSES AT SECTION-CHANGE POINTS	1
	· ·		continued)

٦

Tabl	e 7.2 : Defi	nition of Output Tables for Composite Construction(contin	ued)			
T	TABLES APPLICABLE FOR: $I = 1$ - COMPOSITE CONSTRUCTION $J = 1$ - AASHTO WSD					
INDEX NO.	OUTPUT PHASE	TITLE	LEVEL (0,1)			
1.1.21.3	CODE	MEMBER LENGTH AND SECTION GEOMETRY	0, 1			
1.1.21.4	CHECK	DEPTH RATIOS	1			
1.1.21.5		ALLOW. SHEAR STRESS FOR UNSTIFFENED WEB ELEMENT	1			
1.1.21.6		DEPTH/THICKNESS RATIOS	1			
1.1.21.7		TRANSVERSE STIFFENER REQUIREMENT AND SPACING	0, 1			
1.1.21.8		STATUS OF TRANSVERSE STIFFENERS	1			
1.1.21.9		SECTION PROPERTIES CHECK OF TRANSVER. STIFFENERS	1			
1.1.21.9A		BENDING CAPACITY REDUCTION FOR UNBRACED SECTION	0, 1			
1.1.21.10		SHEAR STRESS CAPACITY CHECK	0, 1			
1.1.21.11		COMPRESSION FLANGE ELEMENT CHECK	1			
1.1.21.12		UNSUPPORTED LENGTH CHECK	1			
1.1.21.13		MOMENT-SHEAR INTERACTION	1			
1.1.21.14		ELASTIC SECTION MODULUS	1			
1.1.21.15		DEAD LOAD STRESS ANALYSIS AT N = INFINITY	0, 1			
1.1.21.16		WSD TOTAL STRESS ANALYSIS	0, 1			
1.1.21.17		FATIGUE STRESS RANGE WITH LOADING	1			
1.1.21.18A		FATIGUE STRESS RANGE FOR TRUCK	0, 1			
1.1.21.18B		FATIGUE STRESS RANGE FOR LANE	0, 1			
1.1.21.19		SHEAR CONNECTOR (FATIGUE CRITERIA)	0, 1			
1.1.21.19A		SHEAR CONNECTOR (ULTIMATE STRENGTH CRITERIA)	0, 1			
1.1.21.20		RE-BAR FATIGUE CHECK IN THE NEG. MOMENT REGION	1			
1.1.21.21		UPLIFT CHECK	1			
1.1.21.22		MAX. INDUCED STRESSES, F, IN THE BOTTOM FLANGE	1			
1.1.21.23	V	MAX. HORIZ. FORCE IN THE DIAPH. & CROSS FRAMES	1			
		•	(continued)			

Γ

MERLIN-DASHfrom the BEST CENTER

Tabl	e 7.2 : Defini	tion of Output Tables for Composite Construction(continue	ed)
T.	ABLES APP	LICABLE FOR: I = 1 - COMPOSITE CONSTRUCTION J = 1 - AASHTO WSD	
INDEX NO.	OUTPUT PHASE	TITLE	LEVEL (0,1)
1.2.1.1	ANALYSIS	PROGRAM ASSUMPTIONS	1
1.2.2.1		LOADING INFORMATION	1
1.2.3.1		BRIDGE SUPERSTRUCTURE QUANTITIES	1
1.2.3.2		DISTRIBUTION OF WHEEL LOADS	1
1.2.4.1		NON-COMPOSITE SECTION PROPERTIES FOR N = INFINITY	1
1.2.4.2		COMPOSITE SECTION PROPERTIES FOR $N = 27.00$	1
1.2.4.3		COMPOSITE SECTION PROPERTIES FOR $N = 9.00$	1
1.2.5.1		NON-COMPOSITE D. L. MOMENTS FOR N = INFINITY (FACT.)	1
1.2.5.2		COMPOSITE D. L. MOMENTS FOR $N = 27.00$ (FACT.)	1
1.2.5.3		COMPOSITE L. L. MOMENTS FOR $N = 9.00$ (FACT.)	1
1.2.5.3A		L. L. MOMENT RANGE FOR $N = 9.0$ (k-ft) (UNFACT.)	1
1.2.5.4		MOMENT SUMMARY FOR COMPOSITE CONST. (FACT.)	0, 1
1.2.5.5		MOMENT SUMMARY FOR COMPOSITE CONST. (UNFACT.)	0, 1
1.2.6.1		NON-COMPOSITE D. L. SHEAR FOR N = INFINITY (FACT.)	1
1.2.6.2		NON-COMPOSITE AND COMPOSITE	1
		D.L. SHEAR SUMMARY (FACT.)	
1.2.6.3		L. L. SHEAR FOR $N = 9.0$ (FACT.)	1
1.2.6.3A		L. L. SHEAR RANGE FOR N = 9.0 (kips) (UNFACT.)	1
1.2.6.4		SHEAR SUMMARY FOR COMPOSITE CONST. (UNFACT)	0, 1
1.2.6.5		SHEAR SUMMARY FOR COMPOSITE CONSTRUCT. (FACT.)	0, 1
1.2.7.1		L. L. RÉACTIONS (UNFACT.)	1
1.2.7.2		SUMMARY OF REACTIONS (UNFACT.)	0, 1
1.2.8.1		COMPOSITE AND NON-COMPOSITE DL DEFLECTION	1
		FOR INFINITY & $N = 27.0$ (UNFACT.)	
1.2.8.1A		CAMBER INFORMATION(UNFACT.)	1
1.2.8.1B		LOCATION OF D.L. POINT OF CONTRA -FLEXURE (UNFACT.)	1
1.2.8.2		MAX. L.L. DEFLECTION FOR COMPOSITE CONSTRUCTION	0, 1
1.2.9.1		NON-COMP. D.L. STRESSES FOR N = INFINITY (UNFACT.)	1
1.2.9.2		COMPOSITE D.L. STRESS FOR N = 27.0 AND	1
1293		I. I. STRESSES FOR $N = 9.0$ (UNFACT)	1
12.934		L = STRESS RANGE FOR N = 9.0 (ksi) (UNFACT)	1
12.9.37		TOTAL (DL+SDL+LL+I) STRESS SUMMARY	1
1.2.7.7		(UNFACT.)	1
1.2.9.5		TOTAL (DL+LL+I) STRESS SUMMARY (FACT.)	0, 1
1.2.9.5 A-F		LRFD LIMIT STATE STRESS SUMMARY	1
1.2.10.1	V	STRESSES AT SECTION-CHANGE POINTS (UNFACT.)	1

(continued)

Tabl	e 7.2 : Defi	nition of Output Tables for Composite Construction (continue	ed)						
T	TABLES APPLICABLE FOR: $I = 1$ - COMPOSITE CONSTRUCTION $J = 1$ - AASHTO WSD								
INDEX NO.	OUTPUT PHASE	TITLE	LEVEL (0,1)						
1.2.22.1	CODE	DETAILED MOMENT INFORMATION	1						
1.2.22.2	CHECK	DETAILED SHEAR INFORMATION	1						
1.2.22.3		MEMBER LENGTH AND SECTION GEOMETRY	1						
1.2.22.4		DEPTH RATIOS	1						
1.2.22.5		DEPTH/THICKNESS RATIOS (N=n)	1						
1.2.22.5A		DEPTH/THICKNESS RATIOS (N=INFINITY)	1						
1.2.22.6		PROJECTING COMPRESSION FLANGE ELEMENT CHECK	1						
1.2.22.6A		VALIDITY FOR INCREASING b'/ t RATIO	1						
1.2.22.8		UNBRACED LENGTH CHECK	1						
1.2.22.8A		BRACING POINT INFORMATION FOR N = INFINITY	1						
1.2.22.8B		BRACING INFORMATION FOR LIVE LOAD CONDITION	1						
1.2.22.8C		CHECK RADIUS OF GYRATION AND Dp FOR COMPACT SECTION	1						
1.2.22.8D		LATERAL BRACING CHECK FOR REQRMNT. OF COMPACT SECT.	1						
1.2.22.9		SUMMARY OF STRENGTH CATEGORY OF CROSS SECTION	1						
1.2.22.9A		BENDING CAPACITY REDUCTION FOR UNBRACED SECTION	0, 1						
1.2.22.10		BENDING CAPACITY FOR NON-COMPOSITE DEAD LOAD	0, 1						
1.2.22.14		MAXIMUM STRENGTH FOR COMPOSITE SECTION	1						
1.2.22.15		UNSTIFFENED SECTION SHEAR CAPACITY	1						
1.2.22.16		SUMMARY OF WEB STRENGTH CATEGORY	0, 1						
1.2.22.17		TRANSVERSE STIFFENER SPACING	1						
1.2.22.18		STATUS OF TRANSVERSE STIFFENERS	1						
1.2.22.19		SECTION PROPERTY CHECK OF TRANSVERSE STIFFENERS	0, 1						
1.2.22.19A		REQ. SECTION PROPERTIES FOR TRANS. STIFFENERS	1						
1.2.22.20		SHEAR CAPACITY CHECK	0, 1						
1.2.22.21		OVERLOAD CHECK	0, 1						
1.2.22.22		FATIGUE STRESS RANGE WITH LOADING (UNFACT.)	1						
1.2.22.23A		FATIGUE STRESS RANGE FOR TRUCK (UNFACT.)	0, 1						
1.2.22.23B		FATIGUE STRESS RANGE FOR LANE (UNFACT.)	0, 1						
1.2.22.24		SHEAR CONNECTOR (FATIGUE CRITERIA) (UNFACT.)	0, 1						
1.2.22.24A		SHEAR CONNECTOR (ULTIMATE STRENGTH CRITERIA)	0, 1						
1.2.22.26		UPLIFT CHECK	1						
1.2.22.27		MAX. INDUCED STRESSES, F, IN THE BOTTOM FLANGE	1						
1.2.22.28		MAX. HORIZ. FORCE IN THE DIAPHRAGMS AND	1						
1 2 22 20	V	UNUSS FRAMES SPI ICE DESIGN AT SECTION CHANGE DOINTS	0.1						
1.2.22.29	V	SELICE DESIGN AT SECTION CHANGE POINTS	0, 1						

MERLIN-DASH

....from the BEST CENTER

7.6.3 Definition of Output

A summary of the tables which are output from *MERLIN-DASH* are given in Table 7.2. Also defined in Table 7.2 are the specified levels and information type (e.g. analysis, code check, rating, etc.) associated with each set of tables. A summary of possible error messages from *MERLIN-DASH* is given in Table 7.3.

	Table 7.3 : Error Messages							
EDDOD TVDE	ERR	OR IDENTIFICATION	DEMEDV					
ERKOR I YPE	NO.	MESSAGE	KEIVIED Y					
FATAL INPUT	1.1	SPAN INTERVAL ONLY ALLOWING MAXIMUM 20	Change SPAN INTERVAL on TYPE-01032 to be less than 21.					
ERROR	1.2	DESIGN OPTION NOT DEFINED	Give DESIGN CODE on TYPE-01032.					
NON-FATAL INPUT ERROR	3.1	BEAM XXX SPACING NOT GIVEN	Give BEAM SPACING on TYPE-03042.					
NON-FATAL INPUT ERROR	4.1	SECTION NUMBER SEQUENCE WRONG	Check SECTION NUMBER SEQUENCE on TYPE 04012.					
	5.1	SECTION NUMBER NOT GIVEN	Specify SECTION NUMBER on TYPE-05012.					
	5.2	MEMBER LENGTH LESS THAN 1.0 FT.	Use BEAM MEMBER LENGTH more than 1.0 ft. on TYPE-05012.					
ERROR	5.3	NO SUCH SECTION NUMBER	Redefine SECTION NUMBER on TYPE-05012.					
	5.4	SUM OF MEMBER LENGTHS NOT MATCHING LENGTH OF BRIDGE	Check TOTAL LENGTH defined by TYPE-03022 and TYPE-05012.					
FATAL INPUT ERROR	6.1	ROAD TYPE NOT GIVEN OR GIVEN WRONG FOR DESIGN CASE	Give correct ROAD TYPE on TYPE-06012.					
FATAL INPUT ERROR	7.1	LIVE LOAD NOT GIVEN OR GIVEN WRONG	Check LIVE LOADING given on TYPES 06XXX and 07XXX.					

REFERENCES

1. *Standard Specifications for Highway Bridges*, The American Association of State Highway and Transportation Officials, Seventeenth Edition with 2003 Interim.

2. *Manual of Steel Construction: Load and Resistance Factor Design, American Institute of Steel Construction, Inc., Third Edition, 2001.*

3. *Manual for Condition Evaluation of Bridges,* The American Association of State Highway and Transportation Officials, 1994.

4. *LRFD Bridge Design Specifications,* The American Association of State Highway and Transportation Officials, U.S. Units and S.I. Units, 6th Edition, 2012.

5. *The Manual for Bridge Evaluation*, 2nd Edition, 2010 with 2013 Interim.

Appendix A

TA	BLE A.1.2 STRUCTURAL DATA (DA	ATA TYPE 03012)
INPUT ITEM	DESCRIPTION OF USAGE AND DEFAULT VALUES	FIGURE
NUMBER OF BEAMS	This integer is used in the automatic computation of the distribution factor. If the distribution factor is to be specified by the user (Data Type 08012), this must be left blank.	
POSITION: INTERIOR OR EXTERIOR	This integer is used in dead load calculations. If left blank, an interior beam is assumed by the system.	
WIDTH BETWEEN CURB OR BARRIER	This variable is used for calculating distribution factors. If distribution factors are specified by the user (Data Type 08012), this may be left blank.	k ^c → a → → →
OVERHANG WIDTH	This variable is used for calculating distribution factors and section properties for an exterior beam. If an interior beam is being considered and distribution factors are specified by the user (Data Type 08012), this may be left blank.	
EDGE OF SLAB TO CURB	This variable is used for calculating distribution factors, section properties and sidewalk loading intensity for an exterior beam. If an interior beam is being considered and distribution factors are specified by the user (Data Type 08012), this may be left blank.	 a = width between curbs or barriers b = overhang width c = edge of slab to curb d = haunch depth (top of steel web to the bottom of the slab for steel; top of beam to the bottom of slab for PC)
HAUNCH DEPTH HAUNCH WIDTH	These two variables are used for calculating section properties.	e = haunch width
PERCENT COMPOSITE	This variable refers only to the negative dead load moment region. If left blank, the system assumes 0.0%.	
DETAIL FACTOR	This factor is used as a multiple of the actual computed (and input) dead load intensity. This accounts for additional dead load such as splice connections, bolts, etc. If left blank, 1.0 is assumed.	

TABLE	A.1.3 – DEFIN. OF MEM	BER	TYPI	ES (D	ATA TYPE 05012; COL	UMNS 3	30-32)
MEMBE R TYPE	DESCRIPTION	S E D C E T P	T F H L C A K N N	F W L I A D N T	FIGURE	PARAP	ETERS
CODE		O H N	G E E S S	G H E		\mathbf{S}_{0}	\mathbf{S}_1
0	PRISMATIC MEMBER –						
	• Open Section	C O	C O	C O	ь г — — — — — — — — — — — — — — — — — —		
	Constant Web	N S	N S	N S			
	Constant Flanges	T A	T A	T A			
	• No input required for parameters S0, S1	N T	N T	N T	L = member length d ₁ = depth at left end d ₂ = depth at right end		
	• As shown, $d1 = d2$						
1	LINEARLY TAPERING	L					
	MEMBER	Ι					
		Ν					
	Open section	E			k tt		
	Constant Flanges	A R	C O	C O			
	• Linear variation in web depth	v	N S	N S			
	• No input required for parameter	À	Ť	Ť			
	S0, S1	R	А	А			
	• As shown, d1 d2 or d1 d2	Ι	Ν	Ν			
		Α	Т	Т			
		T					
		11					

Г

TABLE A	A.1.3 – DEFIN. OF MEMB	BER T	YPES	5 (DA	TA TYPE 05012; COLUMNS 30-32)
MEMBE R TYPE CODE	DESCRIPTION	S E D C E T P I T O H N	T F H L C A K G N E E S S	F W L I A D N T G H E	FIGURE
2	 HAUNCHED PARABOLIC MEMBER S₀ = The parabolic constant that defines the variation in depth of the web. This value is positive for increasing depth and negative for decreasing depth. S₁ = The length of the portion of the bridge for which a particular value of S₀, parabolic constant has been defined. S₁ equals the total length of the members within the parabolic range. L₁ = the length of member n L₂ = the length of member n+1 	M E B A E R A S B O W L I T C H W I E E A P S T I H N G	C O N S T A N T	C O N S T A N T	L_{1} L_{2} L_{2} L_{1} L_{2} L_{2} L_{2} L_{2} $Member$ d_{2} $(n+1)'$ d_{3} $d_$
3	 HAUNCHED PARABOLIC MEMBER S₀ = The parabolic constant that defines the variation in depth of the web. This value is positive for increasing depth and negative for decreasing depth. S₁ = The length of the portion of the bridge for which a particular value of S₀, parabolic constant has been defined. S₁ equals the total length of the member within the parabolic range. L₁ = the length of member n L₂ = the length of member n+1 	M E B A E R A S B O W L I T C H W I E E A P S T I N G	C O N S T A N T	C O N S T A N T	$S_{0} = \frac{d_{3} - d_{1}}{(L_{1} + L_{2})^{2}} = \frac{in}{ft^{2}} \left(\operatorname{or} \frac{mm}{m^{2}} \right)$ $S_{1} = L_{1} + L_{2} = ft(\operatorname{or} m)$

Г

		TABLE A.1.	.4 – ALLOWAB	LE LIVE LOAD TYPES
DATA TYPE	LOAD TYPE	DESCRIPTION	INPUT LOADING DESIGNATION	CONFIGURATION
06012	A	AASHTO LIVE LOADING	H-10, H-15 H-20, HS-15 HS-20, HS-XX	As given by the 1983 AASHTO Standard Specifications for Highway Bridges. HS loading can be specified by user up to HS-99.
06022	D	STATE VEHICULAR LANDING Maryland Standard DUMP TRUCKS (D)	2D, 3D	$32K \qquad 8K \qquad 28K \qquad 28K \qquad 9K$
06022	М	STATE VEHICULAR LOADING Maryland MAXIMUM ALLOWABLE TRUCK (M)	MST76, 3, 382, 3-3	9.28K 20K 20K 12K 12K 12K 12K 12K 12K 12K 12K 12K 12
07022	С	SPECIAL VEHICLE May have up to 20 axles.	AS DEFINED BY USER.	$P_{20} \qquad P_3 \qquad P_2 \qquad P_1$

	TABLE A.1.5 – FO	RM	ULA	TIO	N Ol	F THE IMPACT FACTOR
EQUATION	EQUATION	CO	EFFI	ICIEN	NTS	COMMENTS
NUMBER	DEFINITION	C ₁	C ₂	C ₃	C ₄	COMMENTS
1	$I = C_1 / (C_2 L + C_3)$	*	*	*		I = IMPACT FACTOR (%) L = LOADED LENGTH (FT) If no values are given, the AASHTO equation is automatically assumed. i.e. $C_1 = 50, C_2 = 1, C_3 = 125$ $I = \frac{50}{L+125} = 0.30$

TABLE A.1.6	- DEFIN. OF DISTRIBUTION FACTOR OPTIONS (DATA TYPE 08012)
APPLICATION OPTION	DESCRIPTION
0	The special distribution factor defined is not applied to the indicated loading type.
1	The special distribution factor defined is applied to the indicated loading type of calculations for all moments, shears, and deflections.
2	The special distribution factor defined is applied only to the loading types used for calculating moment.
3	The special distribution factor defined is applied only to the loading types used for calculating shear.
4	The special distribution factor defined is applied only to the loading types used for calculating deflection.

APPENDIX A1

EXAMPLES FOR ROLLED BEAM DESIGN AND STAGING

Rolled beam design is allowed since in Version 5.0 the user needs only to specify "Wide Flange" in the design option (see "example for Rolled Beam Design").

Staging analysis will analyze the bridge after each pouring. The pouring days and segmented loads can be specified individually (see "Example for Staging").

Example for Rolled Beam Design:

Design Method and Stiffener Opti	on	
DATA TYPE : 12042	+	
SECTION ID	1	1- Wide Flange(compact)
DESIGN METHOD	1	1- Minimum Cost
MEMBER TYPE		0- Prismatic (default)
TRANSVERSE STIFFENER	0	0- No Stiff.
LONGITUDINAL STIFFENER	0	0- No Stiff.
BEARING STIFFENER		0- A709GR36
		Design Plate Size Hange
DATA TYPE : 12062	(in (ormm) ⊥
MAXIMUM WEB DEPTH		40.
MINIMUM WEB DEPTH		30.
MAXIMUM WEB THICKNES	S	
MINIMUM WEB THICKNES	5	
MAX. TOP FLANGE WIDTH		
MIN. TOP FLANGE WIDTH		
MAX. TOP FLANGE THICK	IESS	
MIN. TOP FLANGE THICKN	ESS	
MAX. BOT. FLANGE WIDTH	ł	
MIN. BOT. FLANGE WIDTH	l.	
MAX. BOT. FLANGE THICK	NESS	
MIN. BOT. FLANGE THICK	NESS	
Note : input desired plate si	ze using	g either Data Type 12052 or 12062

Note:

- 1. On Data Type 12042, Section ID is 1 for rolled beam design.
- 2. On Data Type 12052, designated constant Web Depth should be a nominal depth in AISC Steel Manual (i.e., W33).
- 3. Or on Data Type 12062, Web Depth range should be two AISC specified nominal depth (i.e., W30 to W40 as in the above screen).
- 4. On Data Type 12072, material may be defined (i.e., A36, A588, ..).

Example for Staging:

For Pouring Sequence check. You can get the same DASH input file and make change on 2 screens.

- (1) Data Type 01032: Program Flow should be change to 7 for DL stage analysis or 8 for DL stage + LL analysis.
- (2) Data Type 10012: The slab loads should be changed to loads in segment with different Pouring No., Pouring Day, and Distances. See example below:

Slab Loads					Ĩ							
DA		PE : 100	12									
		Load	ID		S	lab Dat	a			Load Dat	a	
	Load No	Pouring No	Description	Init. Depth in or mm	Init. Final Depth Depth ormm in ormm			Module Ratio N2	Intensity (K/Ft or KN/m)	Dist. From (Ft. or m)		
	1	1	SLAB LOAD	8.0	8.0	0	24.	8.	1.00	0.	60.	
	2	1	SLAB LOAD	8.0	8.0	0	24.	8.	1.00	180.	240.	
	3	2	SLAB LOAD	8.0	8.0	2	24.	8.	1.00	90.	150.	
	4	3	SLAB LOAD	8.0	8.0	4	24.	8.	1.00	60.	90.	
	5	3	SLAB LOAD	8.0	8.0	4	24.	8.	1.00	150.	180.	
1	6	4	SLAB LOAD	8.0	8.0	28	24.	8.	0.00	0.0	240.	
	7	T.				T.				1		
	8											
	9											
	10											
	11											
	12											
	13											
	14											-



Pour

- 0th day
 2nd day (2 days later)
 4th day (4 days later, after Pour 1)

STAGING ANALYSIS (Based on ACI 209)

a. Creep Coefficient (C_t) :

The general form of the creep equation is

$$C_t = \frac{t^{\psi}}{d + t^{\psi}} C_u$$

where ψ and *d* are constants and C_u is the ultimate creep coefficient.

$$C_{u} = (C_{u})_{avg} \cdot (CF)_{\ell a} \cdot (CF)_{h}$$

where $(C_u)_{avg} = 2.35$ and $(CF)_{\ell a}$ and $(CF)_h$ are correction factors for loading age and humidity, respectively.

b. Strength (f'_c) :

The general form of the strength equation is:

$$(f_c') = \frac{t}{\alpha + \beta t} (f_c')_{28}$$

where α and β are constants depending on the concrete type.

c. Modulus of Elasticity (E_{ct}) :

$$E_c = 1000 + 33\omega^{1.5}\sqrt{f_c'}$$
$$E_{ct} = \frac{E_c}{1 + C_t}$$

where E_{ct} is the effective modulus and is used to compute the modulus ratio between concrete and steel.

APPENDIX –A2

USER-SPECIFIED TRUCK FILE INPUT SHEET

As specified in Section 2.2, Methodology, user are allowed to specify their own trucks in a predefined truck file called either TRUCK26.DAT or TRUCK26M.DAT. When delivered, the software package includes the TRUCK26.DAT and TRUCK26M.DAT files with a few AASHTO rating trucks. Users are allowed to alter the existing truck records or to add their own State trucks by following the attached truck file input sheet. The users must take care that the truck names are unique. Otherwise, the wrong truck record may be found. Users are advised to check the input echo of the specified truck on the output.

For trucks to be placed into the TRUCK26M.DAT (SI units) file, use KN instead of KIPS, and M instead of FT.

TRUCK FILE INPUT SHEET

A. DUMP TRUCK IDENTIFICATION AND DESCRIPTION-LOAD TYPE D

F	DADING DESIGNATION
Ņ	0. OF AXLES [MAX. =3]
	● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●
	AXIE SPACING (FT or M)
	• 1.2 小型的 一下,

B. MAXIMUM ALLOWABLE TRUCK IDENT. AND DESCRIPTION-LOAD TYPE M

LOADING DESIGNATION	
11111 1 S.	网络过去 计算机过程编辑 医过基基性肌 医口口 法公司 计
NO. OF AXLES (MAX. =6)	
网络人物的复数形式 化	
AXLE WEIGHTS (KIPS or KN)	
	- 胡桃和山南京 (1996年) 1986年夏日和福岡市(1997年) 1997年1997年1997年1997年1997年1997年1997年1997
AXLE SPACING (FT or M)	
	御職者に来る。 白海市 部合語 たく いかみ 新聞 にんせい しょうしょう

C. GENERAL TRUCK IDENTIFICATION AND DESCRIPTION-LOAD TYPE G

OADING DESIGNATION								
		计数数数据	运动的 机 机	法法的利用		动物机的	lábiða há sánds á	مل القروبية ال
O. OF AXLES IMAX =2	9							
AXLE WEIGHTS	(KIPS or KN)	420 51.46638				for all for the state of the st		
	1						• • •	
AXLE SPACING	(FT or M)							
سهساسهم	կութով	التقيين			سهيب	سيهي	.	.
ىتقىتىلىتىقىيد	استقيبتا	ليتاقينين						.

Example for DASH multiple trucks

Step 1: Enter all trucks input TRUCK26.DAT file by following the truck loading designation (only once is needed)

- Dump Truck (D). The only limitations for defining Dump Trucks are: Dump Truck Loading Designation - 2 Characters Number of Axles - 3 Axles
- Maximum Allowable Truck (M). The limitations on user input are: Maximum Allowable Truck Loading Designation - 6 Characters Number of axles - 6 Axles
- General Truck (G) & Special Truck (C). The limitations on user input are: General Loading Designation - 4 Characters Number of Axles - 20 Axles

So, in TRUCK26 file, the following names are used :

Vehicles	Original Names	Names in TRUCK26 file
1 (D truck, 2 axles)	ISH	12
2 (D truck, 3 axles)	IS3A	3A
3 (D truck, 3 axles)	IS3C	3C
4 (4 axles)	IS4A	
5 (5 axles)	IS5A	
6 (6 axles)	IS6A	
7 (G truck, 7axles)	IS7A	
8 (G truck, 7axles)	IS7B	
9 (4 axles)	IT4A	
10 (5 axles)	IT5B	
11 (6 axles)	IT6A	
12 (G truck, 7axles)	IT7A	
13 (G truck, 7axles)	IT7B	
14 (D truck, 2 axles)	NSH	N2
15 (D truck, 2 axles)	S2	
16 (D truck, 3 axles)	NS3A	N3
17 (D truck, 3 axles)	S3	
18 (4 axles)	S4	

19 (5 axles)	NS5A	
20 (5 axles)	NS6A	
21 (G truck, 7axles)	NS7B	
22 (4 axles)	NT4A	
23 (4 axles)	T4	
24 (5 axles)	NT5B	
25 (5 axles)	T5A	
26 (5 axles)	T5B	
27 (6 axles)	NT6A	
28 (G truck, 7axles)	NT7A	
29 (G truck, 7axles)	NT7B	

Step 2: Make 11 run cases as follows:

Run case	D truck	M truck	G truck
	(3 axles max.)	(6 axles max.)	(20 axles max.)
1	ISH (I2)	IS4A	IS7A
2	IS3A (3A)	IS5A	IS7B
3	IS3C (3C)	IS6A	IT7A
4	NSH (N2)	NAGGR	NS7B
5	S2	NS5A	NT7A
6	NS3A (N3)	NS6A	NT7B
7	S3	NT4A	IT7B
8		IT4A	IT5B
9		T4	NT5B
10		T5A	T5B
11		IT6A	NT6A

Example of 3 runs together (, which can be expanded to 11 run cases shown above.)



APPENDIX - A3

MORE INSIGHT ABOUT MERLIN-DASH

Listed below are detailed descriptions of entries in the program; we hope that they give some insight into how to input and what the program assumes.

Structural Details (Data Type 03012):

No. of Beams:	Following AASHTO Specifications, the program uses this parameter to average the live load deflection, assuming adequate cross bracing or diaphragms. The distribution factor for deflection is $DF = 2 \times$ NL/NB, where NL is number of lanes and NB is the number of beams.	
Position (Int./Ext.):	This program determines the effective slab width and the distribution factor based on AASHTO Specifications for interior and exterior beams. Default is interior beam.	
Width between curbs:	This entry will determine the number of lanes used in averaging the live load deflection. Min. of 12 ft. (one lane) is assumed by the program.	
Overhang width:	This entry will be used for the exterior beam to determine the effective width. For exterior beam to determine the effective width, the girder spacing S used for interior beam is replaced by S/2 + overhang width.	
Edge of Slab to Curb:	This parameter is used by the program to determine the sidewalk live loading. The sidewalk live loading specified by AASHTO in terms of Ib/ft ² times this parameter gives the distributed load in Ib/ft. This distributed load will be applied to the influence lines to determine the max. and min. effects due to sidewalk live loading.	
Haunch depth/thickness:	The haunch will raise the slab above the beam. The program assumes haunches are constant all across the bridge. The haunch depth is always the distance from the bottom of the top flange or plate (or top of the steel web) to the bottom of the slab. If 0.0 is input, the steel top flange is inside the slab. The weight of the haunch should be included in the slab intensity input.	
% of composite in the negative moment area: If 100.0 is used, the stiffness		

5 of composite in the negative moment area: If 100.0 is used, the stiffness generation for analysis will include the concrete in the negative moment area. If this entry is 0 or blank, and rebar is not specified in Data Type 12032, the stiffness generation for analysis will use bare steel section in the negative moment area. If this entry is 0 or blank, but rebar and shear studs are specified in the negative moment area, the stiffness generation for analysis will use combined rebar and steel section in the negative moment area.

Span Lengths (Data Type 03022):

The total of the span lengths will be used to check the total length defined in Data Type 05012 – Definition of Members, and Data Type 13012 – Yield Stresses and Lateral Bracing Data.

Hinges (Data Type 03032):

Hinge definition can be skipped if spans are continuous. The hinge can be defined at the piers to break the bridge into a series of simple spans or at any location as long as the structure is stable.

Beam Spacing (Data Type 03042):

Girder spacing is used to determine the effective slab width and distribution factor. As specified by AASHTO, if S exceeds 14', simple beam action will be used for calculating the distribution factor. For end shears and reactions, simple beam action will be used to calculate the shear and reaction distribution factors, which normally will give higher end shears and end reactions.

Definition of Sections (Data Type 04012):

More sections than used in Data Type 05012 may be defined here. The current version allows W, PG, and limited use of RC (reinforced concrete). Two utility programs are available to alter the contents of the Steel Section Table. Please contact your user support.

Definition of Members (Data Type 05012):

Members can be defined over the piers without breaks for Type 0. For other than Type 0, the member should be defined, separated where the slope changes. For Member Types 1, 2, or 3, the program will interpolate between two ends of the defined member to find the sections at the interval points for stress calculation. For hybrid member, please input yield strength in this screen.

AASHTO Live Load (Data Type 06012):

For loads higher than HS-20, HS-20 load will be used for the fatigue check. For tandem loading designations of 1, the tandem load of 2-24 loading will apply to the structure no matter what HS loading applies. For tandem loading designation of 2, the tandem load will be proportioned up from 2-24 loading. For example, if AASHTO loading is HS-25 and tandem loading designation is 2, the tandem load will be 2-30 kip loading.

Input for Type of Road will determine the fatigue allowables and the shear stud spacing calculation. Sidewalk loading is used to override the internal set of AASHTO sidewalk loading. Input sidewalk loading is a constant over the length of the bridge; it is not changed based on the span lengths.

Load Type D, M, & G (Data Types 06022 & 06032):

For Load Factor Method, these live loads will be considered as overload except that <u>Type D</u> can be designated as design vehicle in the maximum load calculation. The Load Factor Design live load considers:

- (a) Maximum Load: AASHTO load (truck, land, and tandem) with or without design <u>Type D truck</u> times Gamma factor (1.3) and Beta factor (5/3);
- (b) Overload Load: AASHTO load with any types D, M, and G trucks times Beta Factor (5/3):
- (c) Service Load: AASHTO load only.
- Note 1: Impact factor and distribution factor are calculated internally or overridden by the users and applied to the live load.
- Note 2: User can access the ASCII file TRUCK26.DAT (or TRUCK26M.DAT for metric version) to define their own trucks.

For Working Stress Method, all types are considered in the design/code checking process except fatigue check which only considers AASHTO load.

Load Type C (Data Types 07012 & 07022):

This loading is considered by itself and does not combine with any other load types. If this loading is specified, for LFD all other load types will be blocked out. As with the other load types for Data Types 06022 and 06032, users can access to the ASCII file – TRUCK26.DAT (or TRUCK26M.DAT for metric version) to define their own trucks. This option is used usually for the rating or capacity check and the direction of the truck can be specified.

Specification of Impact & Distribution Factors (Data Type 08012):

If default (i.e., skip this Data Type 08012), AASHTO impact and distribution factors will be imposed to the truck. The input is on a per span basis. If no impact is expected, input a very small impact factor value, such as 0.1%, and mark the loading type. The loading without impact is then specified. Maximum factor is to override the AASHTO max. factor and cap the impact factor calculated internally or by the input equation. The user can use the AASHTO impact factor and cap it by the input max. factor.

Individual moment, shear distribution, and deflection factors can be specified per span. Live Load Deflection is internally set as equally deflected for all beams/girders.

Gamma and Beta (Data Type 09012):

Gamma and Beta factors are the overriding factors to AASHTO 1.3 and 5/3. A new, second Beta factor will be the live load factor applied to the overload case.

Slab loads (Data Type 10012):

Slab loads are specified either for all spans or span by span. In the span-by-span case, load number corresponds to the Span No.; Distance From and Distance To should be the beginning and end of each span. Initial Depth is not used in the program and used only for reference. Final Depth is used for the section

calculation, effective width calculation and rebar location determination for composite construction. For noncomposite construction, thickness is not essential but, in the process of internal calculation, thickness will be used. Therefore, it is recommended to input a value to avoid divided overflow. To compute load intensity, user can input the uniform noncomposite load based on any slab thickness to be carried by the steel section.

Arbitrary Uniform and Concentrated Loads (Data Type 11012]:

Partially uniform loads and/or concentrated loads can be specified here at any location of the bridge during either DL or SDL stage. For noncomposite construction, it is only one stage – DL stage, and load stage is of no use. For composite construction, load type blank, 0, or1 are all for superimposed dead load and load type 2 is for dead load.

Reinforcement and Concrete Strength Data (Data Type 12032):

This Data Type has all the default values associated with each entry. If connectors are specified in the negative moment region and slab reinforcement entities are specified, steel section with rebar will be considered in the stiffness generation and stress calculation in the negative moment region. Rebar is not considered in the transformed section in the positive moment region.

Design Option (1) – (5) (Data Types 12042 – 12082):

These 5 Data Types will be used only for the design case and will be ignored for analysis, code checking, or rating. The six design parameters (web depth and thickness, top flange width and thickness, bottom flange width and thickness) can be fixed individually or can be given a tolerance value by specifying upper and lower limits. It is recommended not to specify one parameter, such as web depth, both fixed on Data Type 12052, and Max/Min Web depth on Data Type 12062. If nothing is specified on Data Types 12052 and 12062, the program will determine optimal sizes. User can define their designs from the first trial without specifying any design parameters.

If nothing is specified for material on Data Type 12072, A-709 with 36 ksi yield stress wil be used for design. Uniform (one material) or mixed (two or more materials) can be used for design, but not yet at this time for hybrid design.

If nothing is specified on Data Type 12082, the dead load point of contraflexure will be used as the field splice location. In this version, only one section is designed for each field section. If a more refined design is needed, users can specify their own splice locations. In the next version, up to 3 sections will be designed for each field section. For simple spans, if no splice locations are specified, up to three sections will always be considered.

Yield Stress and Lateral Bracing Data (Data Type 13012):

There are two different entities, Yield Stress and Lateral Bracing, on one Data Type. Locations From and To can be anywhere, ranged by material or by bracing distance. Lateral bracing distances are important for determining the allowable stresses for WSD and moment capacities for LFD. The bracing can be diaphragm
or crossframe where it prevents the compression flange from lateral buckling. If nothing is specified, 25', which corresponds to AASHTO specified max. diaphragm spacing, will be used for all code checking, rating, and design cases.

Note: The yield stress specified on Data Type 12072 is used only for design and the yield stress on Data Type 13012 is for code checking and rating. If your flow control choice is 6 (Design + Code Check), the yield stresses on both Data Types should be consistent.

Longitudinal Stiffener Data (Data Type 14012):

Longitudinal stiffeners are used for deep steel sections to resist shear and prevent web buckling. They should be used with transverse stiffeners, specified on Data Type 15012.

Transverse Stiffener Data (Data Type 15012):

Transverse stiffener data can be specified for code checking or left blank if users want the program to determine spacing. Within the specified locations From and To, spacing will be used for determining allowable shear stress for WSD and shear capacity for LFD.

Appendix A4 - WIN-DASH SPLICE DESIGN

BRIDGE ENGINEERING SOFTWARE & TECHNOLOGY CENTER MERLIN V 8.0 DEPARTMENT OF CIVIL ENGINEERING COMPOSITE LRF -- 2000 UNIVERSITY OF MARYLAND CODE CHECK PAGE 82 TABLE 1.2.22.29A=SPLICE DESIGN AT SPLICE NO 1 SPLICE NO. 1 AT SPAN 1 DISTANCE FROM LEFT END IS 63.0 FEET TOP PL = 12.00 X 0.750, BOTTOM PL = 16.00 X 0.875, WEB PL = 36.00 X 0.438 DESIGN FORCE FOR THE TOP PLATE 307.89 KIPS = FOR THE BOTTOM PLATE = 431.05 KIPS & DESIGN SHEAR FOR THE WEB PLATE = & MOMENT FOR THE WEB PLATE = 259.03 KIPS 236.35 K-FT & ECCENT FOR THE WEB PLATE = & HORIZ. FORCE FOR THE WEB = 3.4 IN 263.6 KIPS 3.0 IN 1.5 IN BOLT SPACING = = BOLT EDGE DISTANCE CONTROL FLANGE IS ON BOTTOM COMPRESSION FLANGE IS ON BOTH (A) WEB SPLICE DESIGN: WEB PLATE SIZE: 2 PLATES 0.3750 X 30.00 WEB PLATE BOLTS: USE 2 COLUMNS OF 10 BOLTS FOR EACH COL (SIZE 0.875" DIA.) (TOTALS ARE 4 COLUMNS WITH 40 BOLTS) SHEAR FORCE 41.3 KIPS < THE SHEAR RESISTANCE OF THE BOLT 43.9 KIPS SO, THE WEB BEARING IS OK SHEAR FORCE 259.0 KIPS < THE SHEAR RESISTANCE OF THE PLATE 652.5 KIPS SO, THE WEB SPLICE PLATE IS OK WEB SPLICE BENDING STRESS 36.93 KSI < THE ALLOWABLE STRESS 50.00 KSI SO, THE ADEQUACY OF WEB SPLICE PLATES IS OK (B) TOP SPLICE DESIGN: TOP PLATE SIZE: 1 PLT 0.3750 X 12.00 & 2 PLTS 0.3750 X 5.25 TOP PLATE BOLTS: USE 4 ROWS OF 2 BOLTS FOR EACH ROW (SIZE 0.875" DIA.) (TOTALS ARE 8 ROWS WITH 16 BOLTS) (C) BOTTOM SPLICE DESIGN: BOTTOM PLATE SIZE: 1 PLT 0.3750 X 16.00 & 2 PLTS 0.3750 X 7.25 BOTTOM PLATE BOLTS: USE 3 ROWS OF 4 BOLTS FOR EACH ROW (SIZE 0.875" DIA.) (TOTALS ARE 6 ROWS WITH 24 BOLTS)

Splice Des COMPUTA Subject : AISI LRFD Splice Desig S-1 No. 1 S	ign - LRFD/L l A TION SHEET Example 2 Splice	Page Made By : Date : Checked By Date :	C. C. Fu, Ph.D., P.E 3/8/2002 :		
F_{cf} = Design strength for	the controlling	flange at a p	oint of splice	;	
$F_{cf} = 1/2(f_{cf}/R_h + \alpha \phi_f F_{yf})$				(AASHTC	LRFD 6.13.6.1.4C-1)
$F_{cf} = 36.39$	ksi			(0	or AASHTO Std 10-4b)
or					
$\Gamma_{cf} = 0.7500 \psi_{f} \Gamma_{yf}$	1			(AASHIC	DLRFD 6.13.6.1.4C-1)
$F_{cf} = 37.50$	KSI	(governs)	0.7	(0	r AASHTO Std 10-4b)
$ I_{cf}/R $ αF_{yf}	1/2([f _{cf} /R	+aφ _f ⊢ _{yf}) ∝	0.7	5 [°] αφ _f F _{yf}	
22.78 50.00	36.	39	3	37.50	37.50
1.B: Top flange					
f_{ncf} = Flexural stress due to the factored loads at the mid-thickness of the non-controlling flange at a point of splice concurrent with f_{cf}					
f _{ncf} = -2.11	ksi				
R _{cf} = Absolute val	ue of the ratio	of F _{cf} to f _{cf} for	the controlli	ng flange	
$R_{cf} = F_{cf}/f_{cf} $					
R _{cf} = 1.65					
F _{ncf} = Design stress for th	ne non-controlli	ing flange at a	apoint of spli	се	
$F_{ncf} = R_{cf}(f_{ncf}/R_{h})$				(AASHTC	LRFD 6.13.6.1.4C-2)
F _{ncf} = 3.47	ksi			(c	or AASHTO Std 10-4c)
or $F_{ref} = 0.75 \alpha \phi F_{ref}$					
$F_{ncf} = 37.50$	ksi	(governs)			
f _{cf} F _{vf}	R _h	α	f _{ncf}	φ _f	Fnot
22.78 50.00	1.00	1.00	-2.11	1.00	37.50
$R_{cf} = F_{cf}/f_{cf} $	f _{cf}	R _{cf} (f _r	ncf/R _h])	$0.75*\alpha\phi_{\rm f}F_{yf}$	F _{ncf}
1.65	22.78	3.	47	37.50	37.50
2. Design force for the flange at a point of splice 2.A: Bottom Flange in tension and in control					

Bolt size = d_b = 0.875 in. # Bolt Row = 2 Hole size = d_h = 0.94 in. β = factor applied to the gross area of a flange to compute the effective flange area $\beta = (A_n/A_g)((\phi_u F_u/\phi_y F_{yf}) - 1)$ when holes are equal to or less than 1.27" dia. 0.08 = 0.00 when holes exceed 1.27" diameter $\beta =$ 14.00 in² A_g = gross area of bottom flange = (AASHTO LRFD 6.8.3) A_n = net area of the flange

Splice Design - LRFD/LFD COMPUTATION SHEET Subject : AISI LRFD Example 2

Splice Design S-1 No. 1 Splice

Page	
Made By :	C. C. Fu, Ph.D., P.E.
Date :	2/2/2004
Checked By	:
Date :	

Splice Design for S-1



Splice No. 1 at span 1(from DASH Table 1.2.22.29)

Distance from left support =	63 ft		
Top Flange Plate =	12.00 in x 0.75 in		
Bottom Flange Plate =	16.00 in x 0.875 in		
Web Plate =	36.00 in x 0.4375 in		

Plate Sizes	Wdth, in	Thickness, in
Top Plate	12.00	0.750
Bottom Plate	16.00	0.875
Web Plate	36.00	0.438

Stresses

Actual Factored Stresses (ksi) from DASH Table 1.2.9.5D (Strength I)						
Total Positive Total Negative						
Top Flange	Bottom Flange	Top Flange	Bottom Flange			
-2.11	22.78	-0.05	-14.58			
Bolt Shear De	esign Strength =	36.50	ksi			

1. Flange Allowable Stress/ Force

Control flange is the bottom flange. Where Compression flange is the top flange.

1.A: Bottom flange

 f_{cf} = Maximum elastic flexural stress due to the factored loads at the mid-thickness of the controlling flange at the point of splice

 R_{h} = Reduction factor for hybrid girders

$$R_{h} = 1.00$$

(AASHTO LRFD 6.13.6.1.4C)

(or AASHTO Std 10.53.1.2)

 F_{vf} = Specific minimum yield strength of the flange

$F_{yf} = 50.00$	ksi		$F_u =$	65.00	ksi	
α = Factor for flange splice design			α=	1.00		
ϕ_f = Resistance factor for flexural specified			$\phi_f =$	1.00 for flexural		
f _{cf} F _{yf} F _u			R _h		α	φ _f
22.78	50.00	65.00	1.00		1.00	1.00

Splice Design - LRFD/LFD COMPUTATION SHEET Subject : AISI LRFD Example 2 Splice Design S-1 No. 1 Splice					Page Made By : Date : Checked By Date :	C. C. Fu, Ph.D., P.E 2/2/2004 :
$F_{cf} = Design stream$	ngth for t	he controlling	flange at a p	oint of splice	•	
$F_{cf} = 1/2(f_{cf}/R_h + \alpha \phi_f F_{yf})$					(AASHTC	LRFD 6.13.6.1.4C-1)
F _{cf} =	36.39	ksi			(0	r AASHTO Std 10-4b)
or $E = 0.75 \text{ or } E$						
$\Gamma_{cf} = 0.7500 \psi_f \Gamma_{yf}$	7 5 0		((AASHIC	LRFD 6.13.6.1.4C-1)
$\Gamma_{cf} = 3$	7.50 I	KSI	(governs)	0.7	(0	
	λΓ _{yf}	1/2(f _{cf} /R	+aφ _f ⊢ _{yf})	0.7	ͻˆαφ _f F _{yf}	
22.78 50	0.00	30.3	39	3	7.50	37.50
1.B: Top flange						
$f_{ncf} = Flexural stress due to the factored loads at the mid-thickness of the non-controlling flangeat a point of splice concurrent with fcff_{ncf} = -2.11 ksiR_{cf} = Absolute value of the ratio of Fcf to fcf for the controlling flangeRcf = Fcf/fcf Rcf = 1.65F_{ncf} = Design stress for the non-controlling flange at apoint of spliceFncf = Rcf(fncf/Rh) (AASHTO LRFD 6.13.6.1.4C-2)Fncf = 3.47 ksi (or AASHTO Std 10-4c)$						on-controlling flange LRFD 6.13.6.1.4C-2) AASHTO Std 10-4c)
$F_{ncf} = 0.75 \alpha \phi_f F_{yf}$						
F _{ncf} =	37.50	ksi _	(governs)			
f _{cf}	F _{yf}	R _h	α	f _{ncf}	φ _f	F _{ncf}
22.78 50	0.00	1.00	1.00	-2.11	1.00	37.50
$B_{\prime\prime} = IF_{\prime\prime}/f_{\prime}$	d	f _{et}	R.(If.	/R.I)	0.75*αφ ₆ Ε.4	F.,
1.65	'ct 'ct <th'ct< th=""> <th'ct< th=""> <th'ct< th=""></th'ct<></th'ct<></th'ct<>			47	37.50	37.50
2. Design force for the flange at a point of splice 2. A: Bottom Flange in tension and in control						

Bolt size = d _b =	0.875	in.	# Bolt Row = 2			
Hole size = d _h =	0.94	in.				
β = factor applied to the gross area of a flange to compute the effective flange area						
$\beta = (A_n/A_g)((\phi_u F_u/\phi_u))$	_y F _{yf}) -1)		when holes are equal to or less than 1.27" dia.			
= 0.08						
$\beta = 0.00$			when holes exceed 1.27" diameter			
A _g = gross area of	bottom flang	e =	14.00 in ²			
A_n = net area of the	e flange		(AASHTO LRFD 6.8.3)			

Splice Desig COMPUTA Subject : AISI LRFD E Splice Desig S-1 No. 1 S	gn - LRFD/LF TION SHEET Example 2 n plice	Đ		Page Made By : C. C. Date : 2/2/20 Checked By : Date :	Fu, Ph.D., P.E 004
$A_n = A_g - \#$ bolt row	/ * d _h * t =	12.36 ^{in²}		(or AASH ⁻	TO Std 10.16.4)
ϕ_u = resistance fac	tor for fracture	of tension mer	nbers =		0.80
ϕ_y = resistance fac	tor for yielding	of tension mer	nbers =		0.95
				(AASHTC	D LRFD 6.5.4.2)
A_e = Effective area of the	bottom flange	with holes			
$A_e = A_n + \beta A_g < = A_g$			(AA	SHTO LRFD 6.10.3.6	.1 or Std 10-4g)
A _e = 13.53	in ²	<	$A_g =$	14.00 in ²	ОК
P _{cf} = Design force for the	controlling flar	nge at a point o	fsplice		
$P_{cf} = F_{cf} * A_{e}$					
P _{cf} = 507.38	Kips				
A _e	F _{cf}	$P_{cf} = F_{c}$	f*A _e		
13.53	37.50	507.3	3		
2B: Top Flange in comp	pression and i	n non-control			
$A_g = Gross$ area of the to	p flange				
A _g = 9.00	in ²				

A _g =	9.00	in ²	
P _{ncf} = Desig	n force in the	non-controlling flange at a	point of splice
P _{ncf} = F _{ncf} *	A _g		
P _{ncf} =	337.50	Kips	
Ag	F_{ncf}	$P_{ncf} = F_{ncf} * A_{g}$	
9.00	37.50	337.50	

3. Calculate numbers of bolts on top and bottom flanges

3A. Bottom Splice in tension and in control

Outside Plate :	16" x 3/8"		
Inside Plate :	2 - 6.5" x 3/8"		
Plate	Wdth, in	Thickness, in	# of plates
Outside Plate :	16.00	0.375	1
Inside Plate :	6.50	0.375	2
P _{cf} = 507.38	Kips F _{yf} :	= <u>50.00</u> ksi	
A _{e,req} = 10.15	in ²		
$\beta = (A_n/A_g)((\phi_u F_u/A_g))$	/φ _y F _{yf}) -1)>= 0.0	when holes are equal to or	ess than 1.27" dia.
= 0.08			
$\beta = 0.00$		when holes exceed 1.27" di	ameter
A _g = gross area of	f bottom flange =	10.88 ^{in²}	
A _n = net area of th	ne flange	((AASHTO LRFD 6.8.3)
$A_n = A_g - \#$ bolt row	$w * d_h^* t = 9.4$	₇ in ² (or	AASHTO Std 10.16.4)
ϕ_u = resistance fa	ctor for fracture of tension	members =	0.80

Sp C Subject : Als Sp S-	blice Design - LRF OMPUTATION SF SI LRFD Example lice Design 1 No. 1 Splice	FD/LFD IEET 2		Page Made By : Date : Checked By Date :	C. C. Fu, Ph.D., P.E 2/2/2004
$\phi_y = res$	sistance factor for yie	elding of tension	members =		0.95
				(A	ASHTO LRFD 6.5.4.2)
$A_e = Effective$	area of the bottom f	lange with holes			
$A_e = A_n$	+βA _g <=A _g		(A)	ASHTO LRFD 6	.10.3.6.1 or Std 10-4g)
A _e =	10.37 in ²	>	$A_{e,req} =$	10.15	in ^z OK
Bolt diameter	= d _b = 0.87	5 in.			
Bolt Area = A _b	$= \pi d_b^2/4 =$	0.60	in ²		
Bolt strength (double shear) = P_{v-b}	$_{\text{oolt}}$ *2*A _b =	43.90	kips	
# Bolts require	$ed = P_{cf}/P_{v-bolt} =$		11.56	5	
Use	12 bolts ead	ch side			
P _{cf,} kips	$A_{e,req,}$ in ²	P _{v-bolt} , kips	requii	red # Bolts	Use - Bolts/side
507.38	10.15	43.90	1	11.56	12

3B. Top Splice in compression and in non-control

Outside Plate :	PL 12" x 3/8"	Use the same width		
Inside Plate :	2 - PL 5.25" x 1/2"	Reduce by the web and clearence for the weld		
Plate	Wdth, in	Thickness, in	# of plates	
Outside Plate :	12.00	0.375	1	
Inside Plate :	5.25	0.375	2	

F _{ncf} =	37.50	ksi					
P _{ncf} =	337.50	kips	$F_{yf} =$	50.00 k	ksi		
$A_{g,req} =$	6.75	in ^z					
A _{g,provided} =	=		8.44	in ²	>	$A_{e,req}$	OK
# Bolts requ	uired =		7.69				
Use	8	bolts each side					
P _{ncf}	A _{g,req}	P _{v-bolt}		require	d # Bolts	Use	- Bolts/side
337.50	6.75	43.90		7.	69		8

4. Design force on web

4A: Design force due to moment

Web Plate =	36.00 i	n x 0.4375 i	n			
R _h =	1.00			F _{cf} =	37.50 ksi	
R _{cf} =	1.65			$f_{ncf} =$	-2.11 ksi	
M _{uw} = Design moment at the point of splice representing the portion of the flexural moment assumed to be resisted by the web						
$M_{uw} = t_w D^2 / 12^*$	R _h F _{cf} -R _{cf} f _{ncf}				(AASHTO LRFI	D C6.13.6.1.4b-1)
		=	1936.00	kips-in.	(AA)	ASHTO Std 10-4I)
		=	161.333	kips-ft		
Bolt diameter =	d _b =	0.875 iı	า.			

Subject :	Splice Desig COMPUTA AISI LRFD E Splice Desig S-1 No. 1 S	gn - LRFD/LF TION SHEET Example 2 In plice	Ð		Page Made By : Date : Checked By Date :	C. C. Fu, F 2/2/2004 :	Ph.D., P.E
Bolt Area :	$= A_b = \pi d_b^2 / 4 =$		0.60	in ²			
Bolt streng	gth (double she	ar) = 0.6F,,*2*/	$A_{b} =$	43.90	kips		
Bolt strend	oth (bearing) R	$\frac{1}{1} = \phi_{\mu\nu} R_{\mu} = \phi_{\mu\nu}^*$.)	(ΔΔ) 6 13 2 9)
	bolt bearing o		(uw	0.80	() ()		D 6 5 4 2)
Ψ _{bb} –				0.00	(A.		D 0.5.4.2)
$R_r =$	47.78	kips					
н –	Horizontal da	cian forco rocu	Itant in the v	woh at a paint	of colico		
н _{им} — Н _		D f)		veb at a point			
I I _{uw} —		Cf ^I ncf/			(AASHTU		3.6.1.40-2)
=	267.96	kips				(AASHIUS	sta 10-4m)
t _w , in.	D, in.	R _h	F _{cf} , ksi	f _{ncf} , ksi	R _{cf}	M _{uw} , kip-ft	H _{uw} , kips
0.4375	36.00	1.00	37.50	-2.11	1.65	161.33	267.96
						•	
4B: Desig	gn force due t	o shear					
V _u =	LRFD Max. S	hear		Table 1.2.22	2.16		
V _u =	220.70	Kips					
V _n =	Unstiffened S	hear Capacity					
V _n =	297.40	Kips					
V _r =	$\phi_v V_n =$	1.0*V _n =	297.40	kips			
V _{uw} =	Design shear	in the web at t	he point of s	plice			
V = 1.5*'	V., =	331.05	, kips	(V <0.5V _r)	(AASHT	OLRFD 6.1	3.6.1.4b-2)
V = 1/2*	(V+V) =	259.05	Kins	(V>0.5V.)	(AASI	HTO Std 10-	4i & 10-4i)
e =	Distance from	the centerline	of the splice	e to the centre	oid of the conne	ection on the	side of
e =	3.38	in					
M _{uv} =	Design Mome	ent due to the e	eccentricity o	of the desian s	shear at the poin	nt of splice	
$M_{\mu\nu} = V_{\mu\nu}^*$	e		,	5	·	I	
M =	72.86	Kins-ft					
Muu = Tot	al design mom	ent (due to we	b flexure an	d eccentricity	()		
$M_{total} = M$	+M =		234 10	Kine-ft	, ,		
V kip	V kin	V kin	234.19	M kin_ft	M kin-ft	M	kin ft
v, kip	V _u , Kp			το ος	161.00	IVI _{total} ,	40
220.70	297.40	259.05	3.30	72.00	101.33	234	.19
m = no. of	vertical rows of	of bolts	=	2			
n = no. of bolts in one vertical row = 10							
s = the ver	rtical pitch	=	3.00	in.			
g = the ho	rizontal pitch	=	3.00	in.			
$I_p = nm/12$	*[s ² (n ² -1)+g ² (n	1 ² -1)]	=	1530.00	in ⁴		
					(AASHTO	LRFD C6.13	3.6.1.4b-3)
m	n	s, in	g, in		l _ρ , in	1	
2	10	3.00	3 00	1	1530.0	0	

Splice LRFD&LFD 2-spanDesign.XLS printed on 2/2/2004 @ 4:17 BM/ 6

Subject :	Splice Desig COMPUTA AISI LRFD E Splice Desig S-1 No. 1 S	gn - LRFD/LI TION SHEET Example 2 In plice	Ð		Page Made By : Date : Checked By Date :	C. C. Fu, 2/2/2004 <i>:</i>	Ph.D., P.E
$P_s = V_{uw}/N_b$	$_{0} = V_{uw}/(n^{*}m) =$	-	12.95	Kips			
$P_{H} = H_{uw}/N$	$_{b} = H_{uw}/(n^{*}m)$	=	13.40	Kips			
m	n	N _b	V _{uw} , kip	H _{uw} , kips	P _s , kip	P _H	, kip
2	10	20	259.05	267.96	12.95	13	.40
PMV = Mtotol	$*x/l_{p} = 237.64$	4*12*1.5/1530	=	2 76	Kins		
$P_{MH} = M_{total}$	*y/l _p = 237.64	4*12*13.5/153	D =	24.80	Kips		
Mtota	, kip-ft	$l_{\rm p}$, in ⁴	x in	v in	P _{MV} , kip	Рыц	, kip
23	,p 4.19	1530.00	1.50	13.50	2.76	24	.80
	(D , D) ² ,	$(D + D)^2$					
⊂r= √ ₽ -	$(P_{s} + P_{MV}) +$	$(P_{H} + P_{MH})$	_	P	42.00	kino	OK
F _r –	41.30 P., kin	nips P kin	< P kin		43.90	kips	
12.05	12.40	2.76	1 MH , NP	Г 1	r, KIP		1 vb, kips
d = d = 0 $d = 0$ $d = 0$ $d = 0$ $d = 0$	$\frac{30.00}{0.375}$ $2^{*}t^{*}d^{2}/6 =$	in. in. 112.50	- PL 30 IN 3	(0.375 In			
$A_{pl} = 2$	tu=	22.50					
t, in	a, in	3 _{pl}	A _{pl}				
(M _{vu} +M _{uw})/3 (M _{vu} +M _{uw})/3	S _{pl} +H _{uw} /A _{pl} < F S _{pl} +H _{uw} /A _{pl} =	-y 36.89	ksi	<	F _y =	50.00	ksi
ft	H _{uw} , kips	S_{pl} , in^3	A _{pl} , in ²	M _{total} /S	S _{pl} + H _{uw} /A _{pl}	<	Fy
234.19	267.96	112.50	22.50	3	6.89	<	50.00
6. Check t $V_{uw} < R_r =$	the factor res $\phi_v R_n = \phi_v^* 0.58$	<u>istance shear</u> 3A _{pl} .F _y	<u>.</u>	(AAS	(AA) (AA SHTO LRFD 6.1	SHTO LRF SHTO LRF 3.5.3-2 or S	D 6.13.5.3) D 10.48.8) Std 10-115)
$\phi_v =$	1.00				(A/	ASHTO LRI	FD 6.5.4.2)
$\phi_v = V_{uw} =$	1.00 259.05	kips			(A)	ASHTO LRI	FD 6.5.4.2)
$\phi_v =$ $V_{uw} =$ $R_r = \phi$	1.00 259.05 0 _v *0.58A _{pl} .F _y =	kips	652.50	kips	(A)	ASHTO LRI	FD 6.5.4.2)

$V_{uw} =$	259.05	<	652.50		O.K.
A_{pl} , in^2	F _y , ksi	φ _v *0.5	8A _{pl} .F _y	>	V _{uw} , kips
22.50	50.00	652	2.50	>	259.05

APPENDIX – A5

INPUT PROCESSOR OPTION – SCREEN ORGANIZER

OP	TION - SCREEN ORGANIZE	R	Preview
¢	NO HINGE (default for Steel and RC bridges)	С	HINGE (default for PC bridge)
•	MANUAL DL + SDL INPUT	С	AUTO GENERATING DL + SDL (simplified Data Type 02012)
•	AASHTO LIVE LOAD ONLY	С	AASHTO + NON-AASHTO LIVE LOAD
œ	AASHTO DEFAULT IMPACT AND DISTRIBUTION FACTORS AND NON-SKEW ANGLE	C	USER-INPUT IMPACT AND DISTRIBUTION FACTORS AND/OR SKEW ANGLES (LRFD only)
•	AASHTO LOAD AND RESISTANCE FACTORS	C	USER-INPUT LOAD AND RESISTANCE FACTORS
•	DEFAULT BOUNDARY CONDITION	c	USER-INPUT BOUNDARY CONDITION (Steel and RC)

Option	Description	Screens On	Screen Off
No.			
1	No Hinge (Default for Steel	-	03032
	and RC bridges)		
	Hinge (Default for PC bridge)	03032	-
2	Manual DL + SDL Input	10012, 11012	02012
	Auto Generating DL + SDL	02012	10012, 11012
	(Simplified Data Type 02012)		
3	AASHTO Live Load Only	06012	06022, 06032, 07012,
			07022
	AASHTO + Non-AASHTO	06012, 06022, 06032,	-
	Live Load	07012, 07022	
4	AASHTO Default Impact and	-	08012
	Distribution Factors and Non-		
	skew Angle		
	User-input Impact and	08012	-
	Distribution Factors and/or		
	Skew Angles (LRFD only)		
5	AASHTO Load and	-	09012
	Resistance Factors		
	User-input Load and	09012	-
	Resistance Factors		
6	Default Boundary Condition	-	09022
	User-input Boundary	09022	-
	Condition (Steel and RC)		

Appendix B1

LFD THEORY FOR PRESTRESSED CONCRETE

B1.1 General

DASH/P analyzes and performs the code check according to the most current AASHTO specifications. Structural analysis of the beam is performed by the program stiffness matrix solver. The program assumes the beam is a line element with translational and rotational degrees-of-freedom. The sizes of the elements and locations of the joints are totally dependent on the user input. The user can make a series of varied size beams to simulate the haunched member. Therefore, the user has complete control of the numerical model and the output. Since the program assumes simply supported beam at the first stage and then makes it continuous at later stages, the boundary conditions have to be preset for Dead Load Stage, Superimposed Dead Load Stage, and Live Load Stage.

AASHTO specifies that live load distribution factors and impact factors are also input by the users. With live load distribution factors, AASHTO permits computation of the truck applied to a single beam instead of the whole bridge.

With internally generated influence lines, AASHTO or any arbitrary trucks can be calculated individually.

B1.2 FLOW CHART



ALLOWABLE STRESSES

The concrete strength of precast prestressed members is in the Engineer's judgment. In cases where higher concrete strengths are considered, the Engineer shall satisfy himself completely that the controls over materials and fabrication procedures will provide the required strengths.

B1.2.1 Prestree	ssing Steel Stresses at anchorages after seating for pretensioned members are: 0.70 f_{s} for stress relieved strands 0.75 f_{s} for low relaxation strands
B1.2.2 Tempo	rary concrete stresses before losses due to creep and shrinkage
Compre Pre Pos	tensioned members
Tensio	n
Pre	compressed tensile zone No temporary allowablestresses are specified.
Oth In t	er Areas ension areas with
	no bonded reinforcement
	with bonded reinforcement
B1.2.3 Concre	te stress at service load after losses have occurred
Compr	ession
Tension	n in the precompressed tensile zone
(a)	For members with bonded reinforcement*
	For severe corrosive exposure conditions,
	such as coastal areas
(b) (c)	For members without bonded reinforcement0 Modulus of rupture from tests or if not available.
	For normal weight concrete
	For sand-lightweight concrete
	For all other lightweight concrete

B1.3 LOSS OF PRESTRESS

B1.3.1 Friction Losses

These friction losses are calculated as follows:

$$T_o = T_x \ e^{(KL + \mu\alpha)}$$

When $(KL + \mu\alpha)$ is not greater than 0.3, the following equation is used:

$$T_o = T_x \left(1 + KL + \mu \alpha \right)$$
 AASHTO (9-2)

The following values for K and μ may be used when experimental data for the materials used are not available:

Type of Steel	Type of Duct	K/ft	μ
Wire or strand	Rigid and semi-rigid galvanized metal sheathing	0.0002	0.15 - 0.25**
	Polyethylene	0.0002	0.23
	Rigid steel pipe	0.0002	0.25***
High-strength bars	Galvanized metal sheathing	0.0002	0.15

** A friction coefficient of 0.25 is appropriate for 12 strand tendons. A lower coefficient may be used for larger tendon and duct sizes.

*** Lubrication will probably be required.

B1.3.2 Prestress Losses Due to Shrinkage

Pretensioned Members

$$SH = 17,000 - 150 RH$$
 AASHTO (9-4)

Post-tensioned Members

$$SH = 0.80 (17,000 - 150 RH)$$
 AASHTO (9-5)

where RH = mean annual ambient relative humidity in percent.

B1.3.3 Prestress Losses Due to Elastic Shortening

Pretensioned Members

$$ES = \frac{E_s}{E_{ci}} f_{cir}$$
 AASHTO (9-6)

Post-tensioned Members

$$ES = 0.5 \frac{E_s}{E_{ci}} f_{cir}$$
 AASHTO (9-7)

where

Es	=	modulus of elasticity of prestressing steel strand.
Eci	=	modulus of elasticity of concrete in psi at transfer of stress.
\mathbf{f}_{cir}	=	concrete stress at the center of gravity of the prestressing steel due
		to prestressing force and dead load of beam immediately after
		transfer.

B1.3.4 Prestressed losses due to Creep of Concrete

Pretensioned and post-tensioned members.

$$CR_c = 12 f_{cir} - 7 f_{cds}$$
 AASHTO (9-9)

where

Pretensioned Members

- f_{cds} = concrete stress at the center of gravity of the prestressing steel due to all dead loads except the dead load present at the time the prestressing force is applied.
- B1.3.5 Prestress Losses due to Relaxation of Prestressing Steel

250 to 270 ksi Strand	
$CR_s = 20,000 - 0.4 \text{ ES} - 0.2 (SH + CR_c)$ for stress relieved strand	AASHTO (9-10)
$CR_s = 5,000 - 0.10 \text{ ES} - 0.05 (SH + CR_c)$ for low relaxation strand	AASHTO (9-10A)
Post-tensioned Member	
250 to 270 ksi Strand	
$CR_s = 20,000 - 0.3 FR - 0.4 ES - 0.2 (SH + CR_c)$ for stress relieved strand	AASHTO (9-11)
$CR_{s} = 5,000 - 0.07 \text{ FR} - 0.1 \text{ ES} - 0.05 (SH + CR_{c})$ for low relaxation strand	(9-11A)
240 ksi Wire	

$$CR_s = 18,000 - 0.3 FR - 0.4 ES - 0.2 (SH + CR_c)$$
 (9-12)

where

FR	=	friction loss stress reduction in psi below the level of 0.70 f_s at the point
		under consideration.
ES, SH,	=	appropriate values as determined for either
and CR _c		pretensioned or post-tensioned members.

B1.3.6 Estimated Losses

Loss of prestress due to all causes, excluding friction, is determined by the following method.

TOTAL LOSS

$$\Delta f_{s} = SH + ES + CR_{c} + CR_{s} \qquad AASHTO (9-3)$$

where

Δf_s	=	total loss excluding friction in pounds per square inch;
SH	=	loss due to concrete shrinkage in pounds per square inch;
ES	=	loss due to elastic shortening in pounds per square inch;
CR _c	=	loss due to creep of concrete in pounds per square inch;
CR_s	=	loss due to relaxation of prestressing steel in pounds per square inch.

B1.4 FLEXURAL STRENGTH

B1.4.1 Rectangular Sections

For rectangular or flanged sections having prestressing steel only, which the depth of the equivalent in rectangular stress block, defined as $(A_s * f_{su})/(0.85 f_c b)$, is not greater than the compression flange thickness "t", and which satisfy AASHTO Eq. (9-20), the design flexural strength shall be assumed as

$$\Phi M_{n} = \Phi \left[A_{s}^{*} f_{su}^{*} d \left(1 - 0.6 \frac{p^{*} f_{su}^{*}}{f_{c}^{\prime}} \right) \right]$$
 AASHTO (9-13)

For rectangular or flanged sections with non-prestressed tension reinforcement included, in which the depth of the equivalent rectangular stress block, defined as $(A_s^* f_{su}^* + A_s f_{sy})/(0.85 f_c b)$, is not greater than the compression flange thickness "t", and which satisfy AASHTO Eq. (9-24), the design flexural strength shall be assumed as

$$\Phi M_{n} = \Phi \left\{ A_{s}^{*} f_{su}^{*} \left[1 - 0.6 \left(\frac{p^{*} f_{su}^{*}}{f_{c}'} + \frac{d_{t}}{d} \frac{P f_{sy}}{f_{e}'} \right) \right] + A_{s} f_{sy} d_{t} \left[1 - 0.6 \left(\frac{d}{d_{t}} \frac{P^{*} f_{su}^{*}}{f_{c}'} + \frac{p f_{sy}}{f_{c}'} \right) \right] \right\}$$
AASHTO (9-13a)

B1.4.2 Flanged Sections

For sections having prestressing steel only, in which the depth of the equivalent rectangular stress block, defined as $(A_{sr}f_{su}^*)/(0.85 f_c' b')$ is greater than the compression flange thickness "t", and which satisfy AASHTO Eq. (9-21), the design flexural strength is

$$\Phi M_{n} = \Phi \left\{ A_{sr} f_{su}^{*} d \left[1 - 0.6 \left(\frac{A_{sr} f_{su}^{*}}{b' d f_{c}'} \right) \right] + 0.85 f_{c}' (b - b')(t)(d - 0.5t) \right\}$$
 AASHTO (9-14)

For sections with non-prestressed tension reinforcement included, in which the depth of the equivalent rectangular stress block, defined as $(A_{sr}f_{su}^*)/(0.85 f_c' b')$, is greater than the compression flange thickness "t", and which satisfy AASHTO Eq. (9-25), the design flexural strength is

$$\Phi M_{n} = \Phi \left\{ A_{sr} f_{su}^{*} d \left[1 - 0.6 \left(\frac{A_{sr} f_{su}^{*}}{b' d f_{c}'} \right) \right] + A_{s} f_{sy} (d_{t} - d) + 0.85 f_{c}' (b - b')(t)(d - 0.5t) \right\}$$
AASHTO (9-14a)

where

$$A_{sr} = A_s^* - A_{sf}$$
 in Eq. (9-14); AASHTO (9-15)

$$A_{sr} = A_{s}^{*} + (A_{s}f_{sy} / f_{su}^{*}) - A_{sf}$$
, in Eq. (9-14a) AASHTO (9-15a)

$$A_{sf} = 0.85 f'_{c} (b-b') t / f^{*}_{su};$$
 AASHTO (9-16)

 A_{sf} = the steel area required to develop the ultimate compressive strength of the overhanging portions of the flange.

B1.4.3 Steel Stress

Bonded Members . . . with prestressing only;

$$f_{su}^{*} = f_{s}' \left[1 - \left(\gamma^{*} / \beta_{1} \right) \left(p^{*} f_{s}' / f_{c}' \right) \right]$$
 AASHTO (9-17)

with non-prestressed tension reinforcement included;

$$\mathbf{f}_{su}' = \mathbf{f}_{s}' \left\{ 1 - \frac{\gamma^{*}}{\beta_{1}} \left[\frac{\mathbf{p}^{*} \mathbf{f}_{s}'}{\mathbf{f}_{c}'} + \frac{\mathbf{d}_{t}}{\mathbf{d}} \left(\frac{\mathbf{p} \mathbf{f}_{sy}}{\mathbf{f}_{c}'} \right) \right] \right\}$$
AASHTO (9-17a)

Unbonded members . . . $f_{su}^* = f_{se} + 900 ((d - y_u)/l_e)$ AASHTO (9-18)

B1.5 DUCTILITY LIMITS

B1.5.1 Maximum Prestressing Steel

Prestressed concrete members are designed so that the steel is yielding as ultimate capacity is approached. In general, the reinforcement index is such that:

$$(p^* f_{su}^*)/f_c'$$
 for rectangular sections AASHTO (9-20)

and

$$A_{su}f_{su}^{*}/(b'df_{c}')$$
 for flanged sections AASHTO (9-21)

does not exceed $0.36\beta_1$.

For members with reinforcement indices greater that 0.36₁, the design flexural strength is not greater than:

For rectangular sections

$$\Phi M_n = \Phi \left[\left(0.36\beta_1 - 0.08\beta_1^2 \right) f'_c b d^2 \right]$$
 AASHTO (9-22)

For flanged sections

$$\Phi M_{n} = \Phi \left[\left(0.36\beta_{1} - 0.08\beta_{1}^{2} \right) f_{c}' b' d^{2} + 0.85 f_{c}' (b - b') t (d - 0.5t) \right]$$
 AASHTO (9-23)

B1.5.2 Minimum Steel

The total amount of prestressed and non-prestressed reinforcement shall be adequate to develop an ultimate moment at the critical section at least 1.2 times the cracking moment M_{cr}^{*} .

$$\Phi M_n \ge 1.2 M_{cr}^*$$

where

$$M_{cr}^{*} = (f_r + f_{pe})S_c - M_{d/nc}(S_c/S_b - 1)$$

Appropriate values for $M_{d/nc}$ and S_b are used for any intermediate composite sections. Where beams are designed to be non-composite, substitute S_b for S_c in the above equation for the calculation of M_{cr}^* .

B1.6 SHEAR

B1.6.1 General

Members subject to shear are designed so that

$$V_{u} \leq \Phi(V_{c} + V_{s})$$
 AASHTO (9-26)

where V_u is the factored shear force at the section considered, V_c is the nominal shear strength provided by concrete and V_s is the nominal shear strength provided by web reinforcement.

B1.6.2 Shear Strength Provided by Concrete

The shear strength provided by concrete, V_c , is taken as the lesser of the values V_{ci} or V_{cw} .

The shear strength, V_{ci} , is computed by

$$V_{ci} = 0.6\sqrt{f'_{c}b'd} + V_{d} + \frac{V_{i}M_{cr}}{M_{max}}$$
 AASHTO (9-27)

but need not be less than $1.7\sqrt{f'_c}b'd$ and d need not be taken less than 0.8h.

The moment causing flexural cracking at the section due to externally applied loads, M_{cr} , is computed by

$$M_{cr} = \frac{1}{Y_{t}} \left(6\sqrt{f_{c}'} + f_{pe} - f_{d} \right)$$
 AASHTO (9-28)

The maximum factored moment and factored shear at the section due to externally applied loads, M_{max} and V_1 , are computed from the load combination causing maximum moment at the section.

The shear strength, V_{cw} , is computed by

$$V_{cw} = (3.5\sqrt{f_c'} + 0.3f_{pc})b'd + V_p$$
 AASHTO (9-29)

but d need not be taken less than 0.8h.

Shear Strength Provided by Web Reinforcement

The shear strength provided by web reinforcement is taken as

$$V_s = \frac{A_v f_{sy} d}{s}$$
 AASHTO (9-30)

where A_v is the area of web reinforcement within a distance s. V_s is not taken greater than $8\sqrt{f'_c}b'd$.

The spacing of web reinforcing shall not exceed 0.75h or 24 inches. When V_s exceeds $4\sqrt{f'_c}b'd$, this maximum spacing is reduced by one-half.

The minimum area of web reinforcement is

$$A_{v} = \frac{50b's}{f_{sy}}$$
 AASHTO (9-31)

where $\,b'\,$ and s are in inches and $f_{sy}\,$ is in psi.

Appendix B2

LRFD THEORY FOR PRESTRESSED CONCRETE

B2.1 TABLE 3.2.6.6 SUMMARY OF BOTTOM STRESSES AT RELEASE TABLE 3.2.6.7 SUMMARY OF TOP STRESSES AT RELEASE

Stress limits for concrete at release (LRFD Art. 5.9.4.1):

- 1. Compression for pretensioned or post-tensioned members, $0.60 f'_{ci}$
- 2. Tension:
 - a) in areas without bounded auxiliary reinforcement, $0.0948\sqrt{f'_{ci}} \le 0.2$ ksi
 - b) in areas with bounded reinforcement which is sufficient to resist the tension force in the concrete computed assuming an uncracked section, $0.24\sqrt{f'_{ci}}$ ksi
- B2.2 TABLE 3.2.6.8A SUMMARY OF BOTTOM STRESSES AT SERVICE LOAD TABLE 3.2.6.8B SUMMARY OF BOTTOM STRESSES AT SERVICE III LOAD CASE I TABLE 3.2.6.8C SUMMARY OF BOTTOM STRESSES AT SERVICE III LOAD CASE II/III TABLE 3.2.6.9A SUMMARY OF TOP STRESSES AT SERVICE LOAD TABLE 3.2.6.9B SUMMARY OF TOP STRESSES AT SERVICE III LOAD CASE I TABLE 3.2.6.9C SUMMARY OF TOP STRESSES AT SERVICE III LOAD CASE II/III
 - 1. Compression using the service limit state Load Combination I:
 - a) due to permanent (dead) load, (i.e. beam self-weight, deck slab weight, diaphragm weight, wearing surface and barrier weights), $0.45 f'_c$
 - b) due to permanent and transient loads, i.e. all dead loads and live loads, and during shipping and handling, $0.60 f'_c$
 - c) due to live load and one-half of the permanent loads, $0.40f'_c$
 - 2. Tension using the service limit state Load Combination III, where only 80% of the live load effects are considered:
 - a) for components with bonded prestressing tendons other than piles, $0.19\sqrt{f_c'}$, ksi
 - b) for components subject to serve corrosive conditions, $0.0948\sqrt{f'_c}$, ksi
 - c) for components with unbonded prestressing, no tension is allowed

B2.3 TABLE 3.2.6.11 SUMMARY OF ULTIMATE MOMENT TABLE 3.2.6.11A DETAILS OF ULTIMATE MOMENT CALCULATION

The average stress in bonded prestressing steel, $f_{ps} = f_{pu} \left(1 - k \frac{c}{d_p} \right)$ (LRFD Eq. 5.7.3.1.1-1)

Assuming rectangular section behavior, the neutral axis depth:

$$c = \frac{A_{ps}f_{pu} + A_sf_y - A'_sf'_y}{0.85f'_c\beta_1 b + kA_{ps}\frac{f_{pu}}{d_p}}$$
(LRFD Eq. 5.7.3.1.1-4)

where

- С = distance between the neutral axis and the compressive face
- = area of prestressing steel
- = specified tensile strength of prestressing steel
- = are of mild steel tension reinforcement
- = yield strength of tension reinforcement
- $\begin{array}{c} A_{ps} \\ f_{pu} \\ A_s \\ f_y \\ A'_s \\ f'_y \\ b \end{array}$ = area of compression reinforcement
 - = yield strength of compression reinforcement
 - = width of compression of flange
- k = factor related to type of strand:

$$= 2\left(1.04 - \frac{f_{py}}{f_{pu}}\right)$$
(LRFD Eq. 5.7.3.1.1-2)
= 0.28 for low relaxation strand

$$f_{py}$$
 = yield strength of prestressing steel
 d_p = distance from extreme compression fiber to the centroid of the prestressing
strand

The depth of the compression block, $a = \beta_1 c$. If $a > h_f$ (depth of the compression flange), flanged section behavior must be used with c calculated by:

$$c = \frac{A_{ps}f_{pu} + A_sf_y - A'_sf'_y - 0.85\beta_1f'_c(b - b_w)h_f}{0.85f'_c\beta_1b_w + kA_{ps}\frac{f_{pu}}{d_p}}$$
(LRFD Eq. 5.7.3.1.1-3)

where b_w = width of web

(a) Rectangular Sections

$$M_{n} = A_{ps} f_{ps} \left(d_{p} - \frac{a}{2} \right) + A_{s} f_{y} \left(d_{s} - \frac{a}{2} \right) - A_{s}' f_{y}' \left(d' - \frac{a}{2} \right)$$
(LRFD Eq. 5.7.3.2.2-1)

(b) Flanged Sections

$$M_{n} = A_{ps}f_{ps}\left(d_{p} - \frac{a}{2}\right) + A_{s}f_{y}\left(d_{s} - \frac{a}{2}\right) - A_{s}'f_{y}'\left(d' - \frac{a}{2}\right) + 0.85f_{c}'(b - b_{w})\beta_{1}h_{f}\left(\frac{a}{2} - \frac{h_{f}}{2}\right)$$

Where

f_{ps}	= average stress in prestressing steel
a	= depth of the equivalent stress block = $(\beta_1 c)$
A_s	= area of non prestressed tension reinforcement
	d_s = distance from extreme compression fiber to the centroid of
	nonprestressed tensile reinforcement
A'_s	= area of compression reinforcement
	d' = distance from extreme compression fiber to the centroid of
	nonprestressed compression reinforcement

Factored flexural resistance:

$$M_r = \phi M_n$$
 (LRFD Eq. 5.7.3.2.1-1)

Where ϕ = resistance factor = 1.00

1. Maximum Limit

The maximum amount of prestressed and nonprestressed reinforcement should be such that:

$$\frac{c}{d_e} \le 0.42$$
 (LRFD Eq. 5.7.3.3.1-1)

where $d_e = \frac{A_{ps}f_{ps}d_p + A_sf_yd_s}{A_{ps}f_{ps} + A_sf_y}$ (LRFD Eq. 5.7.3.3.1-2)

The commentary to the *LRFD Specifications* allows use of the same flexural strength equations as in the *Standard Specifications*, STD Eqs. 9-22 and 9-23, in cases where the maximum reinforcement limit is exceeded.

2. Minimum Limit

At any section, the amount of prestressed and nonprestressed reinforcement should be adequate to developed a factored flexural resistance, M_r , at least equal to the lesser of 1.2 times the cracking strength determined on the basis of elastic stress distribution, or 1.33 times the factored moment required by the applicable strength load combinations.

The LRFD Specifications give a similar procedure for computing the cracking moment, M_{cr}.

$$M_{cr} = S_c \left(f_r + f_{pce} \right) - M_{dnc} \left(\frac{S_c}{S_{nc}} - 1 \right) \le S_c f_r$$

where S_c , S_{nc} = composite and noncomposite section modulus, f_{cpe} = compressive stress in concrete due to effective prestress forces at extreme fiber of section; f_r = modulus of rupture = $0.24\sqrt{f'_c}$

Contrary to the *Standard Specifications*, the *LRFD Specifications* require that this criterion be met at all sections.

B2.4 TABLE 3.2.6.12 SUMMARY OF WEB SHEAR REINFORCEMENT

- LRFD 5.8.2.4 Regions required transverse reinforcement:

$$V_u > 0.5 \phi (V_c + V_p)$$
 (LRFD Eq. 5.8.2.4-1)

- LRFD 5.8.2.5 Minimum transverse reinforcement:

$$A_{v} \ge 0.0316\sqrt{f_{c}'}\frac{b_{v}s}{f_{y}}$$
 (LRFD Eq. 5.8.2.5-1)

- LRFD 5.8.2.7 Maximum spacing of transverse reinforcement:

If
$$v_u < 0.125f'_c$$
, then $s_{max} = 0.8d_v \le 24$ inch (LRFD Eq. 5.8.2.7-1)

If
$$v_u \ge 0.125f'_{c_0}$$
 then $s_{max} = 0.4d_v \le 24$ inch (LRFD Eq. 5.8.2.7-2)

- LRFD 5.8.2.9 Shear Stress on Concrete:

$$v_u = \frac{V_u - \varphi V_p}{\phi b_v d_v}$$
(LRFD Eq. 5.8.2.9-1)



Figure C5.8.2.9-1 - Illustration of the Terms \boldsymbol{b}_{v} and $\boldsymbol{d}_{v}.$

The *LRFD Specifications*, Article 5.8.3 introduces the sectional design model. Subsections 1 and 2 describe the applicable geometry required to use this technique to design web reinforcement.

The nominal resistance is taken the lesser of:

$$V_n = V_c + V_s + V_p$$
, or,
 $V_n = 0.25 f'_c b_v d_v + V_p$ (LRFD Eq. 5.8.3.3-1)
(LRFD Eq. 5.8.3.3-2)

where b_{ν} = effective web width d_{ν} = effective shear depth

LRFD Eq. (5.8.3.3-2) represents an upper limit of V_n to assure that the concrete in the web will not crush prior to yield of the transverse reinforcement.

The *LRFD Specifications* defines the concrete contribution as the nominal shear resistance provided by the tensile stresses in the concrete. This resistance is computed using the following equation:

$$V_c = 0.0316\beta \sqrt{f'_c} b_v d_v$$
 (LRFD Eq. 5.8.3.3-3)

The units used in the LRFD Specifications are kips and inches. The factor 0.0316 is equal to

 $\frac{1}{\sqrt{1,000}}$

which coverts the expression from psi to ksi units for the concrete compressive strength.

The contribution of the web reinforcement is given by the general equation:

$$V_s = \frac{A_v f_y d_v (\cot\theta + \cot\alpha) \sin\alpha}{s}$$
(LRFD Eq. 5.8.3.3-4)

where the angles, 2 and \forall , represent the inclination of the diagonal compressive stresses measured from the horizontal beam axis and the angle of the web reinforcement relative to the horizontal beam axis, respectively.

For cases of vertical web reinforcement, the expression for V_s simplifies to:

$$V_s = \frac{A_v f_y d_v \cot \theta}{s}$$
(LRFD Eq. C5.8.3.3-1)

Transverse shear reinforcement should be provided when:

$$V_u > 0.5\phi (V_c + V_p)$$
 (LRFD Eq. 5.8.2.4-1)

When the reaction introduces compression into the end of the member, the critical section of shear is taken as the larger of $0.5d_v \cot\theta$, or d_v , measured from the face of the support.

To determine the nominal resistance, the design engineer must determine. \exists and 2 from the *LRFD Specifications*, Article 5.8.3.4. For mildly reinforced concrete sections, the values of \exists and 2 are 2 and 45E respectively. These will produce results similar to the *Standard Specifications*. However, for prestressed concrete, the engineer can take advantage of the precompression and use lower angles of 2, which optimizes the web reinforcement.

B2.5 TABLE 3.2.6.12A SUMMARY OF HORIZONTAL SHEAR CHECK

LRFD Specifications give no guidance for computing horizontal shear due to factored loads. The following formula may be used as discussed in Section 3.8.1 with the substitution d_v for *jd*:

$$v_{uh} = \frac{V_u}{d_v b_v}$$
(PCI Eq. 8.5.3-1)

where

 v_{uh} = horizontal factored shear force per unit area of interface V_u = factored vertical shear force at specified section due to superimposed loads d_v = the distance between resultants of tensile and compressive forces = b_v = interface width

Required strength nominal strength, or:

$$v_{uh}A_{cv} \le \phi V_n \tag{PCI Eq. 8.5.3-2}$$

where V_n = nominal shear resistance of the interface surface = $cA_{cv} + \mu [A_{vf}f_v + P_c]$

where

 $\begin{array}{ll} c & = \text{cohesion factor} = 0.10 \text{ for this case} \\ \mu & = \text{friction factor} = 1.0 \text{ for this case} \\ A_{cv} & = \text{interface area of concrete engaged in shear transfer} \\ A_{vf} & = \text{area of shear reinforcement crossing the shear plane within area} \\ P_c & = \text{permanent net compressive force normal to the shear plane (may be conservatively neglected)} \\ f_y & = \text{yield strength of shear reinforcement} \end{array}$

Typically, the top surface of the beam is intentionally roughened to amplitude of 1/4 in.

Therefore, for normal weight concrete cast against hardened, roughened, normal weight concrete, the above relationships may be reduced to the following formula:

$$v_{uh} \le \phi \left(0.1 + A_{vf} f_y / A_{cv} \right)$$
 (PCI Eq. 8.5.3-3)

where the minimum $A_{vf} = (0.05b_v s) / f_y$ (LRFD Eq. 5.8.4.1-4)

Nominal shear resistance is the lesser of:

$$V_n \le 0.2 f'_c A_{cv}$$
, and, (LRFD Eq. 5.8.4.1-2)
 $V_n \le 0.8 A_{cv}$ (LRFD Eq. 5.8.4.1-3)

While the *LRFD Specifications* require that minimum reinforcement be provided regardless of the stress level at the interface, designers may choose to limit this reinforcement to cases where v_{uh} / ϕ is greater than 0.10 ksi. This would be consistent with the *Standard Specifications*, the ACI Code and other references. It would seem to be impractical and an unnecessary expense to provide connectors in a number of common applications, such as precast stay-in-place panels if the interface stress is lower than 0.10 ksi.

Appendix B3

LRFD THEORY FOR STEEL BRIDGES

1. TABLE 1.2.22.5 =DEPTH/THICKNESS RATIOS (N = n)

6.10.2.1.1 Webs Without Longitudinal Stiffeners

Webs shall be proportioned such that:

$$\frac{D}{t_w} \le 150 \tag{6.10.2.1.1-1}$$

6.10.2.1.2 Webs With Longitudinal Stiffeners

Webs shall be proportioned such that:

$$\frac{D}{t_w} \le 300 \tag{6.10.2.1.2-1}$$

• the web satisfies the noncompact slenderness limit:

$$\frac{2D_c}{t_w} < 5.7 \sqrt{\frac{E}{F_{yc}}}$$
(6.10.6.2.3-1)

2. TABLE 1.2.22.5A=DEPTH/THICKNESS RATIOS (N = inf.)

• the web satisfies the noncompact slenderness limit:

$$\frac{2D_c}{t_w} < 5.7 \sqrt{\frac{E}{F_{yc}}}$$
(6.10.6.2.3-1)

where:

- D_c = depth of the web in compression in the elastic range (in.). For composite sections, D_c shall be determined as specified in Article D6.3.1.
- I_{yc} = moment of inertia of the compression flange of the steel section about the vertical axis in the plane of the web (in.⁴)
- I_{yt} = moment of inertia of the tension flange of the steel section about the vertical axis in the plane of the web (in.⁴)

3. TABLE 1.2.22.7A=FLB AND LTB CATEGORIES TABLE 1.2.22.7B=FLB AND LTB RESISTANCE

6.10.8.2.2 Local Buckling Resistance

The local buckling resistance of the compression flange shall be taken as:

• If
$$\lambda_f \leq \lambda_{pf}$$
, then:

$$F_{nc} = R_b R_h F_{yc} \tag{6.10.8.2.2-1}$$

• Otherwise:

$$F_{nc} = \left[1 - \left(1 - \frac{F_{yr}}{R_{h}F_{yc}}\right) \left(\frac{\lambda_{f} - \lambda_{pf}}{\lambda_{rf} - \lambda_{pf}}\right)\right] R_{b}R_{h}F_{yc}$$
(6.10.8.2.2-2)

in which:

 λ_f = slenderness ratio for the compression flange

$$= \frac{b_{fc}}{2t_{fc}} \qquad (6.10.8.2.2-3)$$

 λ_{pf} = limiting slenderness ratio for a compact flange

$$= 0.38 \sqrt{\frac{E}{F_{yc}}} \qquad (6.10.8.2.2-4)$$

 λ_{rf} = limiting slenderness ratio for a noncompact flange

$$= 0.56 \sqrt{\frac{E}{F_{yr}}} \qquad (6.10.8.2.2-5)$$

where:

- F_{yr} = compression-flange stress at the onset of nominal yielding within the cross-section, including residual stress effects, but not including compression-flange lateral bending, taken as the smaller of $0.7F_{yc}$ and F_{yw} , but not less than $0.5F_{yc}$
- R_b = web load-shedding factor determined as specified in Article 6.10.1.10.2
- R_h = hybrid factor determined as specified in Article 6.10.1.10.1
- L_p = limiting unbraced length to achieve the nominal flexural resistance of $R_b R_h F_{yc}$ under uniform bending (in.)

$$= 1.0 r_{t} \sqrt{\frac{E}{F_{yc}}} \qquad (6.10.8.2.3-4)$$

 L_r = limiting unbraced length to achieve the onset of nominal yielding in either flange under uniform bending with consideration of compression-flange residual stress effects (in.)

$$=\pi r_{t} \sqrt{\frac{E}{F_{yr}}} \qquad (6.10.8.2.3-5)$$

 L_b = unbraced length (in.)

4. TABLE 1.2.22.9=SUMMARY OF STRENGTH CATEGORY OF CROSS SECTION

5. TABLE 1.2.22.10=CONSTRUCTABILITY CHECK

(Eq. 6.10.6.2.3-1 is on the last page of this file.)

$$f_{bu} + f_{\ell} \le \phi_f R_h F_{yc}, \qquad (6.10.3.2.1-1)$$

$$f_{bu} + \frac{1}{3} f_{\ell} \le \phi_f F_{nc}, \qquad (6.10.3.2.1-2)$$

and

$$f_{bu} \le \phi_f F_{crw}$$
 (6.10.3.2.1-3)

where:

- ϕ_f = resistance factor for flexure specified in Article 6.5.4.2.
- f_{bu} = flange stress calculated without consideration of flange lateral bending determined as specified in Article 6.10.1.6 (ksi)
- f_{ℓ} = flange lateral bending stress determined as specified in Article 6.10.1.6 (ksi)
- F_{crw} = nominal bend-buckling resistance for webs specified in Article 6.10.1.9 (ksi)
- F_{nc} = nominal flexural resistance of the flange (ksi). F_{nc} shall be determined as specified in Article 6.10.8.2. For sections in straight I-girder bridges with compact or noncompact webs, the lateral torsional buckling resistance may be taken as M_{nc} determined as specified in Article A6.3.3 divided by S_{xc} . In computing F_{nc} for constructability, the web load-shedding factor, R_b , shall be taken as 1.0.
- M_{yc} = yield moment with respect to the compression flange determined as specified in Article D6.2 (kip-in.)
- R_h = hybrid factor specified in Article 6.10.1.10.1
- S_{xc} = elastic section modulus about the major axis of the section to the compression flange taken as M_{yc}/F_{yc} (in.³)

For critical stages of construction, the following requirement shall be satisfied:

 $f_{bu} + f_{\ell} \le \phi_f R_h F_{vt} \tag{6.10.3.2.2-1}$

6. TABLE 1.2.22.14=STRENGTH LIMIT STATE CHECK

At the strength limit state, the section shall satisfy:

$$M_{u} + \frac{1}{3} f_{\ell} S_{x} \le \phi_{f} M_{n}$$
 (6.10.7.1.1-1)

where:

 ϕ_f = resistance factor for flexure specified in Article 6.5.4.2

- f_{ℓ} = flange lateral bending stress determined as specified in Article 6.10.1.6 (ksi)
- M_n = nominal flexural resistance of the section determined as specified in Article 6.10.7.1.2 (kip-in.)
- M_u = bending moment about the major-axis of the cross-section determined as specified in Article 6.10.1.6 (kip-in.)
- M_{yt} = yield moment with respect to the tension flange determined as specified in Article D6.2 (kip-in.)
- S_{xt} = elastic section modulus about the major axis of the section to the tension flange taken as M_{yt}/F_{yt} (in.³)

At the strength limit state, the compression flange shall satisfy:

$$f_{bu} \le \phi_f F_{nc}$$
 (6.10.7.2.1-1)

where:

- ϕ_f = resistance factor for flexure specified in Article 6.5.4.2
- f_{bu} = flange stress calculated without consideration of flange lateral bending determined as specified in Article 6.10.1.6 (ksi)
- F_{nc} = nominal flexural resistance of the compression flange determined as specified in Article 6.10.7.2.2 (ksi)

The tension flange shall satisfy:

$$f_{bu} + \frac{1}{3}f_{\ell} \le \phi_f F_{nt} \tag{6.10.7.2.1-2}$$

where:

- f_{ℓ} = flange lateral bending stress determined as specified in Article 6.10.1.6 (ksi)
- F_{nt} = nominal flexural resistance of the tension flange determined as specified in Article 6.10.7.2.2 (ksi)

For shored construction, the maximum longitudinal compressive stress in the concrete deck at the strength limit state, determined as specified in Article 6.10.1.1.1d, shall not exceed $0.6f'_c$.

Lateral bending stresses in continuously braced flanges shall be taken equal to zero. Lateral bending stresses in discretely braced flanges shall be determined by structural analysis. All discretely braced flanges shall satisfy:

$$f_f \le 0.6F_{yf} \tag{6.10.1.6-1}$$

At the strength limit state, the following requirement shall be satisfied:

$$f_{bu} + \frac{1}{3} f_{\ell} \le \phi_f F_{nc} \tag{6.10.8.1.1-1}$$

where:

1

- ϕ_f = resistance factor for flexure specified in Article 6.5.4.2
- f_{bu} = flange stress calculated without consideration of flange lateral bending determined as specified in Article 6.10.1.6 (ksi)
- f_{ℓ} = flange lateral bending stress determined as specified in Article 6.10.1.6 (ksi)

 F_{nc} = nominal flexural resistance of the flange determined as specified in Article 6.10.8.2 (ksi)

At the strength limit state, the following requirement shall be satisfied:

$$f_{bu} + \frac{1}{3} f_{\ell} \le \phi_f F_{nt} \tag{6.10.8.1.2-1}$$

where:

 F_{nt} = nominal flexural resistance of the flange determined as specified in Article 6.10.8.3 (ksi)

7. TABLE 1.2.22.15=UNSTIFFENED SECTION SHEAR CAPACITY

• If
$$\frac{D}{t_w} > 1.40 \sqrt{\frac{Ek}{F_{yw}}}$$
, then:

$$C = \frac{1.57}{\left(\frac{D}{t_w}\right)^2} \left(\frac{Ek}{F_{yw}}\right)$$
(6.10.9.3.2-6)

in which:

k = shear-buckling coefficient

$$=5 + \frac{5}{\left(\frac{d_o}{D}\right)^2}$$
(6.10.9.3.2-7)

8. TABLE 1.2.22.16=SUMMARY OF WEB STRENGTH CATEGORY

6.10.2.1.1 Webs Without Longitudinal Stiffeners

Webs shall be proportioned such that:

$$\frac{D}{t_w} \le 150 \tag{6.10.2.1.1-1}$$

6.10.2.1.2 Webs With Longitudinal Stiffeners

Webs shall be proportioned such that:

$$\frac{D}{t_w} \le 300 \tag{6.10.2.1.2-1}$$

• the section satisfies the web slenderness limit: $\frac{2D_{cp}}{t_w} \le 3.76 \sqrt{\frac{E}{F_{yc}}} \qquad (6.10.6.2.2-1)$

where:

- D_{cp} = depth of the web in compression at the plastic moment determined as specified in Article D6.3.2 (in.)
- the web satisfies the noncompact slenderness limit:

$$\frac{2D_c}{t_w} < 5.7 \sqrt{\frac{E}{F_{yc}}}$$
(6.10.6.2.3-1)

6.10.9.2 Nominal Resistance of Unstiffened Webs

The nominal shear resistance of unstiffened webs shall be taken as:

$$V_n = V_{cr} = CV_p \tag{6.10.9.2-1}$$

in which:

$$V_p = 0.58 F_{yw} Dt_w \tag{6.10.9.2-2}$$

where:

C = ratio of the shear-buckling resistance to the shear yield strength determined by Eqs. 6.10.9.3.2-4, 6.10.9.3.2-5 or 6.10.9.3.2-6 as applicable, with the shear-buckling coefficient, *k*, taken equal to 5.0

 V_{cr} = shear-buckling resistance (kip)

- V_n = nominal shear resistance (kip)
- V_p = plastic shear force (kip)

Otherwise, the nominal shear resistance shall be taken as follows:

$$V_{n} = V_{p} \left[C + \frac{0.87(1-C)}{\left(\sqrt{1 + \left(\frac{d_{o}}{D}\right)^{2} + \frac{d_{o}}{D}}\right)} \right] \quad (6.10.9.3.2-8)$$

in which:

$$V_p = 0.58 F_{yw} Dt_w \tag{6.10.9.3.3-2}$$

where:

C = ratio of the shear-buckling resistance to the shear yield strength determined by Eqs. 6.10.9.3.2-4, 6.10.9.3.2-5, or 6.10.9.3.2-6 as applicable

 V_{cr} = shear-buckling resistance (kip)

$$V_p$$
 = plastic shear force (kip)

The transverse stiffener spacing for end panels with or without longitudinal stiffeners shall not exceed 1.5D.

9. TABLE 1.2.22.17=TRANSVERSE STIFFENER SPACING

10. TABLE 1.2.22.21=SERVICE LIMIT STATE CHECK

Flanges shall satisfy the following requirements:

• For the top steel flange of composite sections:

$$f_f \le 0.95 R_h F_{yf} \tag{6.10.4.2.2-1}$$

• For the bottom steel flange of composite sections:

$$f_f + \frac{f_\ell}{2} \le 0.95 R_h F_{yf} \tag{6.10.4.2.2-2}$$

• For both steel flanges of noncomposite sections:

$$f_f + \frac{f_\ell}{2} \le 0.80 R_h F_{yf} \tag{6.10.4.2.2-3}$$

The nominal bend-buckling resistance shall be taken as:

$$F_{crw} = \frac{0.9Ek}{\left(\frac{D}{t_w}\right)^2}$$
(6.10.1.9.1-1)

but not to exceed the smaller of $R_h F_{yc}$ and $F_{yw}/0.7$.

in which:

k = bend-buckling coefficient

$$=\frac{9}{\left(D_{c}/D\right)^{2}}$$
 (6.10.1.9.1-2)

where:

 D_c = depth of the web in compression in the elastic range (in.). For composite sections, D_c shall be determined as specified in Article D6.3.1.

 R_h = hybrid factor specified in Article 6.10.1.10.1

When both edges of the web are in compression, *k* shall be taken as 7.2.

 V_{sr} = horizontal fatigue shear range per unit length (kip/in.)

$$= \sqrt{\left(V_{fat}\right)^{2} + \left(F_{fat}\right)^{2}}$$
(6.10.10.1.2-2)

 V_{fat} = longitudinal fatigue shear range per unit length (kip/in.)

11. TABLE 1.2.22.23A=FATIGUE STRESS RANGE FOR TRUCK

12. TABLE 1.2.22.24=SHEAR CONNECTOR (FATIGUE CRITERIA)

The fatigue shear resistance of an individual stud shear connector, Z_r , shall be taken as:

$$Z_r = \alpha d^2 \ge \frac{5.5d^2}{2} \tag{6.10.10.2-1}$$

in which:

$$\alpha = 34.5 - 4.28 \log N \tag{6.10.10.2-2}$$

where:

$$d =$$
diameter of the stud (in.)

N = number of cycles specified in Article 6.6.1.2.5

13. TABLE 1.2.22.24A=SHEAR CONNECTOR (STRENGTH LIMIT STATE)

6.10.10.4 Strength Limit State

6.10.10.4.1 General

The factored shear resistance of a single shear connector, Q_r , at the strength limit state shall be taken as:

$$Q_r = \phi_{sc} Q_n$$
 (6.10.10.4.1-1)
where:

 Q_n = nominal shear resistance of a single shear connector determined as specified in Article 6.10.10.4.3 (kip)

 ϕ_{sc} = resistance factor for shear connectors specified in Article 6.5.4.2

At the strength limit state, the minimum number of shear connectors, n, over the region under consideration shall be taken as:

$$n = \frac{P}{Q_r} \tag{6.10.10.4.1-2}$$

where:

$$P = \text{total nominal shear force determined as specified in Article 6.10.10.4.2 (kip)}$$

 Q_r = factored shear resistance of one shear connector determined from Eq. 1 (kip)

 P_p = total longitudinal shear force in the concrete deck at the point of maximum positive live load plus impact moment (kip) taken as the lesser of either:

$$P_{1p} = 0.85 f_c' b_s t_s \tag{6.10.10.4.2-2}$$

or

$$P_{2p} = F_{yw} Dt_w + F_{yt} b_{ft} t_{ft} + F_{yc} b_{fc} t_{fc}$$
(6.10.10.4.2-3)

 F_p = total radial shear force in the concrete deck at the point of maximum positive live load plus impact moment (kip) taken as:

$$F_p = P_p \frac{L_p}{R}$$
(6.10.10.4.2-4)

where:

- b_s = effective width of the concrete deck (in.)
- t_s = thickness of the concrete deck (in.)
- L_p = arc length between an end of the girder and an adjacent point of maximum positive live load plus impact moment (ft.)

$$R$$
 = minimum girder radius over the length, L_p (ft.)

$$P_T = P_p + P_p \tag{6.10.10.4.2-6}$$

 P_n = total longitudinal shear force in the concrete deck over an interior support (kip) taken as the lesser of either:

$$P_{ln} = F_{yw}Dt_w + F_{yt}b_{ft}t_{ft} + F_{yc}b_{fc}t_{fc}$$
(6.10.10.4.2-7)

or
$P_{2n} = 0.45 f_c' b_s t_s$ (6.10.10.4.2-8

14. TABLE 1.2.22.24B=RECOMMANDED SHEAR CONNECTOR REQUIRED PITCH TABLE 1.2.22.24C=TENSION-COMPRESSION-REVERSAL AREAS

APPENDIX C

Pier Continuity PC Girder LRFD Design

C1. Purpose of the program

Design and analysis based on AASHTO/LRFD of PC bridges composed of simple span precast girders made continuous for live loads. If the minimum age of the precast girder is at least 90 days, based on AASHTO/LRFD the positive moment connection is designed as 1.2M_{cr}. If the age of girders is within 90 days, time-dependent restraint moments at interior supports of a continuous bridge are calculated. The calculation based on NCHRP 519 depends on girder age at the time continuity is established, properties of the girder and slab concrete, and bridge and girder geometry.

C2. Design and adequacy check

(a) To obtain and check the negative moment reinforcement (Bar A)

- (b) To check the negative moment at the pier
- (c) To obtain and check the positive moment connection (Bar B)

(d) To obtain and check the diaphragm reinforcement between girders (Bars C & D)



C3. Calculated

- (a) Bar (A): Based on the reinforcement provided by the selected Standard Slab and additional negative moment slab reinforcement at the pier, adequacy is checked.Bar (A) in Design Results Table is the summation of the two, and the total area and the distance can be used for DASH input.
- (b) Negative moment: Calculated ultimate moment is checked against total factored negative moment provided by the user and the 1.2 times the cracking moment
- (c) Bar (B): Depending on the girder age at continuity, based on either the restraint moment calculated at the pier or 0.6 times the cracking moment for girders age less than 90 days or 1.2 times the cracking moment for girders age more than 90 days, Bar (B) is designed and checked for two design options, steel bars or strands. Bar (B) can be the reinforcement extended from the precast girders.
- (d) Bars (C) and (D): Based on the minimum reinforcement requirement, Bars (C) and (D) are obtained and checked.

C4. Input data

The available input screens are Number of Spans, Input Data for Continuous girder, Concrete & Steel Data, Loads Data & Continuity Details.



Input Screen 1: Number of Spans

To Import Data from DASH: Use this option to browse and import data from DASH file

Number of spans: Number of spans of continuous girder, either imported from DASH or entered manually (imported or entered).

Input Screen 2: Input Data for Continuous Girder

Input Data	for 2 sp	ans continuous girder Additional Input	
Girder Type:AASHTO,BulbTee (or Enter # for PCEF)	6348 🗸	Diaphragm Width, bw (in.)	36
Span Length between Bearings (ft)	123	Diaphragm Depth, h (in.) < total height	85
Girder Spacing (ft)	10	MD Slab Type XXI-XXIX (21-29)	21
Haunch Depth (in.) at the Centerline Bearing	1		
Gap Distance Between Adjacent Spans (ft)	3		
Ratio of Draped Length of Tendons to Span Length	0.43		
Additional Dead Load (DC1) (psf)	0	< Back Next >	Help

Input Based on DASH:

Girder Type: AASHTO, BulbTee Imported from DASH for AASHTO or BulbTee girders, or entered manually for PCEF (or Enter # for PCEF).

Span Length between Bearings (ft): Span length incase of 2 spans girder Exterior span incase of 3 spans girders and more.

Interior Span Length between Bearing (ft): Interior span length incase of 3 or 4 spans girder, First interior span length incase of 5 spans girder.

Second Interior Span Length between Bearing (ft): Second interior span length incase of 5 spans girder.

Girder Spacing (ft): Main girder spacing.

Haunch Depth (in.) at the Centerline Bearing: Haunch depth above the PC girder.

Gap Distance between Adjacent Spans (ft): Gap distance between overhangs at the interior pier.

Ratio of Draped Length of Tendons to Span Length: For draped case. Otherwise, enter zero.

Additional Dead Load (DC1) (psf): Enter zero here. All pier moments will be calculated by DASH and entered to the 4th screen.

Additional Input:

Diaphragm Width, **b**_w (in.): Pier diaphragm width.

Diaphragm Depth, h (in.) < total height: Pier diaphragm depth.

MD Slab Type XXI-XXIX (21-29): Maryland slab types as defined on sheet "tables".

Input Screen 3: Concrete & Steel Data

Material Properties			X
Conci	ete &	Steel Data	
Input Based on DASH E. Mohamed Wier Cor		Additional Input	
Yield strength of steel fy (psi)	60000	Girder concrete ultimate creep coefficient	2.4
Girder concrete compressive strength at transfer (psi)	6000	Girder concrete ultimate shrinkage (microstrain)	750
Girder concrete compressive strength at 28 days (psi)	7000	Deck concrete ultimate shrinkage (microstrain)	550
Deck concrete compressive strength at 28 days (psi)	4500		
Girder concrete unit weight (pcf)	150		
Deck concrete unit weight (pcf)	150		
Relative humidity (%)	70	< Back Next >	Help

Input Based on DASH:

Yield strength of steel f_y (psi): Reinforcement yield strength.

Girder concrete compressive strength at transfer (psi): Girder concrete compressive strength at transfer.

Girder concrete compressive strength at 28 days (psi): Girder concrete compressive strength at 28 days.

Deck concrete compressive strength at 28 days (psi): Deck concrete compressive strength at 28 days.

Girder concrete unit weight (pcf): Girder concrete unit weight.

Deck concrete unit weight (pcf): Deck concrete unit weight.

Relative humidity (%): Relative humidity in percent

Additional Input:

Girder concrete ultimate creep coefficient: Girder concrete ultimate creep coefficient.

Girder concrete ultimate shrinkage (microstrain): Girder concrete ultimate shrinkage (microstrain).

Deck concrete ultimate shrinkage (microstrain): Deck concrete ultimate shrinkage (microstrain).

Input Screen 4: Load Data & Continuity Details



Input Based on DASH:

Dead load moment at pier, MDC1 (k.ft) (absolute unfactored value): Dead load moment at pier, MDC1 (k.ft) (absolute unfactored value).

Superimposed dead load moment at pier, MDC2 (k.ft) (absolute unfactored value): Superimposed dead load moment at pier, MDC2 (k.ft) (absolute unfactored value).

Wearing surface dead load moment at pier, MDW (k.ft) (absolute unfactored value): Wearing surface dead load moment at pier, MDW (k.ft) (absolute unfactored value).

Negative live load moment at pier, MLL+I (k.ft) (absolute unfactored value): Negative live load moment at pier, MLL+I (k.ft) (absolute unfactored value)

Additional Input:

Deck additional steel is: (Default by MD slab type, which can be overridden):

Bar B: Distance from bottom of girder to centroid of positive moment steel (bars or strands) (in.): Bar B, which can be rebars or strands as shown and defined on sheet "Continuity-details".

Girder age at continuity < 90 days (Y/ N): As defined in the 4th Edition of AASHTO-LRFD 5.14.1.4 for restraint moment. **Positive moment connection Option (1): Steel bars:** Option (1): Steel bars for the positive moment connection at the pier.

<u>OR</u>

Option (2): Strands: Option (2): Strands for the positive moment connection at the pier. **Total Length of Extended Strands (in.)**: If option (2) is selected, prove the total Length of Extended Strands. Otherwise, leave blank or zero.

Bar C: Stirrups in Pier Diaphragm: Bar C as shown and defined on sheet "Continuity-details".

Bar D: Longitudinal Reinforcement in Pier Diaphragm: Bar D as shown and defined on sheet "Continuity-details".

Input Screen 5: Load Data & Continuity Details

Input Based on DASH ENMohamed Pr	ier Cont:	Additional Input	
Centroid of straight strands (in)	5.35	Time between tensioning of strand and prestress transfer (days)	1
Centroid of draped strands at girder end (in)	52	Time between prestress transfer and establishment of continuity (days) T1	28
Centroid of draped strands at midspan (in)	20	Time between prestress transfer and	31
Number of straight strands	55	placement of deck (days), T2	"
Number of draped strands	27	Do you wish to include the restraining effect of slab reinforcement on shrinkage ? (YAD)	n
Cross sectional area of each strand	0.153	If yes, deck age at which the dischinger	7
Initial strand tension (psi)	202500	effect is introduced (days), T3	
Type of strand : SR for Stress Relieved LL for Low Relaxation	u		
Modulus of elasticity of prestressing strand	28000		

Input Based on DASH:

Centroid of straight strands (in): Distance from bottom to the centroid of straight strands.

Centroid of draped strands at girder end (in): Distance from bottom to the centroid of draped strands at girder end.

Centroid of draped strands at midspan (in): Distance from bottom to the centroid of draped strands at midspan.

Number of straight strands: Number of straight strands.

Number of draped strands: Number of draped strands.

Cross sectional area of each strand: Cross sectional area of each strand.

Initial strand tension (psi): Initial strand tension (psi).

Type of strand: SR for Stress Relieved, LL for Low Relaxation: Type of strand: SR for Stress Relieved, LL for Low Relaxation.

Modulus of elasticity of prestressing strand: Modulus of elasticity of prestressing strand.

Additional Input:

Time between tensioning of strand and prestress transfer (days): Time between tensioning of strand and prestress transfer (days).

Time between prestress transfer and establishment of continuity (days), T1: Time between prestress transfer and establishment of continuity (days), T1.

Time between prestress transfer and placement of deck (days), T2: Time between prestress transfer and placement of deck (days), T2.

Do you wish to include the restraining effect of slab reinforcement on shrinkage? (Y/N): Including Dischinger effect or not.

If yes, deck age at which the dischinger effect is introduced (days), T3: Deck age at which the dischinger effect is introduced (days), T3.

C5. Output Data

There are two options for the output data. Either summarized output for the design results, which can be accessed from the output screen or detailed output print.

Output2	? 🔀
Output for continuou	r 2 span s girder
< Bac	:k
Print Re	sults
New F	lun
Exit	
Helr	>

Back: go back to input screens to modify data.

Print Results: print summery of analysis results. After clicking on this, you will go to the "print" sheet where you can print a summarized table of the design results and also you can find the other option to print a detailed output table.



New Run: go back to 1st input screen to run new analysis. **Exit**: exit analysis and goes to MainSheet.

Appendix D

Demonstration of Lateral Bending Stress Calculation based on NHI

The concrete deck overhang loads are usually supported by cantilever bracket spaced at 3 to 4 feet along the exterior girder during the construction of steel girder bridges. The bracket loads include either uniformed loads (overhang weight, overhang deck forms, screed rail, railing, and walkway) or concentrated load (finishing machine).

A typical deck overhang bracket is shown in the following figure.



The torsional moments apply on the exterior girder due to the eccentricity of the overhang weight and other loads which generate the lateral bending stresses for the top and bottom flanges. The example to calculate the lateral bending stresses due to overhang weight and other load can be found in pages 2-137 to 2-146 of FHWA-NHI-08-048. This example is a three span continuous I-girder steel bridge and the cross section is shown in the figure below.



The DASH program has a pop up utility to help calculating the lateral bending stresses of the top and bottom flanges within the unbraced length in Data Type 11022 input screen.

In Data Type 11022, the user can input the entire row manually if all the input stresses and distances are known. Alternatively, the stress calculation utility may be used if the user needs to simplify the stress calculation processes. By pressing the calculate stresses button on this screen, the user can pop up the window utility to calculate the needed stresses. In this popup utility, the user should input the width and thickness for the top and bottom flanges. The required section modulus for the stresses will be calculated by the utility automatically. The user also needs to input web height, bracket width, unbraced length, load range from, and load range to.

For concentrated load, the load range from and to should input the same value. There are three types of loads (finishing machine, overhang construction load, and overhang weight) can be selected for this utility. The corresponding input for these three types of loads is right underneath the input for the load type. The rest of the information will be calculated by the utility automatically.

Please check all the input information before click the "save stresses" button which will save the calculated stresses into all the fields of this row. The user can input all the needed rows before close this utility.

For uniformed load F, the moment (M) is equal to $F^*L_b^2/12$ and stress of top and bottom flanges can be calculated by using moment divided by section modulus (S). The L_b is the lateral bracing distance. For concentrated load P, the moment is equal to $P^*L_b/8$ and the stress of top and bottom flanges should be M/S.

The calculation of the lateral bending stresses of top and bottom flanges for this example along the entire bridge is listed in the following Spread sheet.

Lateral Bending Stress Input Calculation							
				-			
Dead load	Deck Overhang Weight	255.00	lbs/ft	Construction Loads excep	ot Finishing Machine		
Construction Loads	Overhang Deck Forms	40.00	lbs/ft				
	Screed Rail	85.00	lbs/ft				
	Railing	25.00	lbs/ft	-			
	Walkway	125.00	lbs/ft	275.00	lbs/ft		
	Finishing Machine	3000.00	lbs				
		401 4001 0 0551 4401				100 070	
T	0' - 42' & 413' - 455'	42' - 100' & 355' - 413'	100 - 125 & 330 - 355	125' - 155' & 300' - 330'	155 - 182 & 273 - 300	182 - 273	
Top Hange	16.00	16.00	19.00	19.00	19.00	16.00	
Thickness (in)	1 0000	1 0000	10.00	2 0000	1 0000	0.8750	
Bottom Bange	1.0000	1.0000	1.0000	2.0000	1.0000	0.0730	
Width (in)	18.00	18.00	20.00	20.00	20.00	16.00	
Thickness (in)	0.8750	1.3750	1.0000	2.0000	1.0000	1.3750	
L . (ft)	24.00	24.00	20.00	20.00	27.00	27.00	
-5()	2.000	2.000	20100	20.00	21.00	2	
Dead Load							
P(lbs/ft)	255.00	255.00	255.00	255.00	255.00	255.00	
F;(lbs/ft)	155.04	155.04	155.04	155.04	155.04	155.04	
M _I (kip-ft)	7.44	7.44	5.17	5.17	9.42	9.42	
Stress - Top Flange (ksi)	2.093	2.093	1.148	0.574	2.093	3.027	
Stress - Bot Flange (ksi)	1.890	1.203	0.930	0.465	1.695	1.927	
Construction Loads							
P(lbs/ft)	2/5.00	2/5.00	275.00	2/5.00	2/5.00	275.00	
H (lbs/ft)	167.20	167.20	167.20	167.20	167.20	167.20	
	8.03	8.03	5.57	5.57	10.16	10.16	
Stress - Top Hange (Ksi)	2.257	2.257	1.239	0.619	2.257	3.265	
Stress - Bot Hange (ksi)	2.038	1.297	1.003	0.502	1.828	2.078	
Finishing Machine							
P(lbs) @56'		3000.00					
H (lbs)		1824.03					
MI (kip-ft)		5.47					
Stress - Top Flange (ksi)		1.539					
Stress - Bot Flange (ksi)		0.884					